



Mounting the emitter is easy, but if you are unsure, consult a professional.

The only permanent change in the headlight is a single hole, which is easy to close again. The lights are mounted in the headlight and secured with two existing screws.

- There are two screws by the doors that hold the headlights in place. Unscrew it, after which the headlight can be swiveled to the side.
- On top of the headlight is a large hood, which can be detached and removed. Under the hood is a large heat sink.
- The two front screws on the heatsink are loosened and removed.
- Push the emitter sideways into the headlight so that the two studs fit into the holes in the heatsink. It is important that the emitter is placed above the reflector. You should not be able to see the transmitter in the headlight when it is mounted.
- The two screws are fixed by the emitters in the heat sinks.
- We recommend drilling a hole in the back plate of the lamp to pass the wire through.

