


HAKU 7116

User Manual

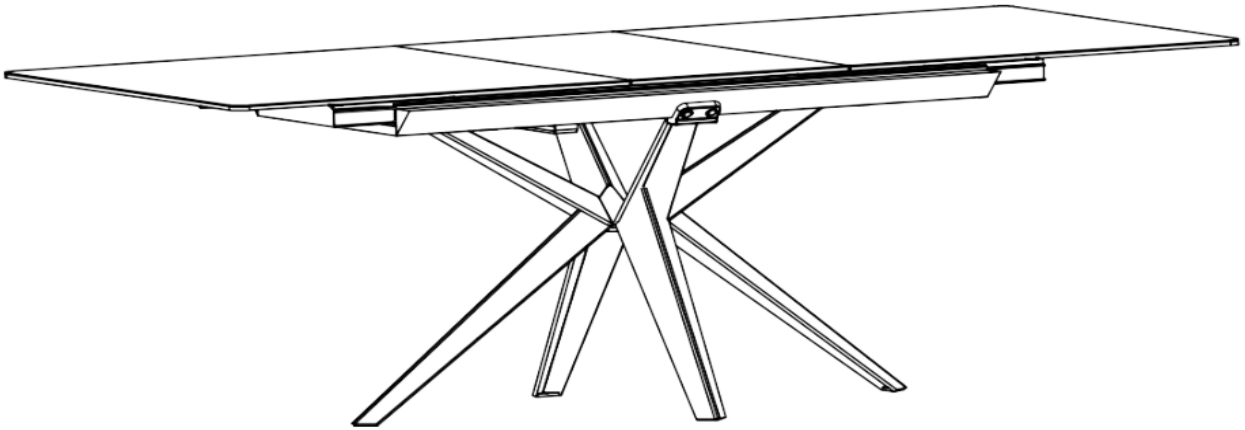


HAKU 7116

Assembly Instructions




ITEM NO:7116 HAKU EDTE

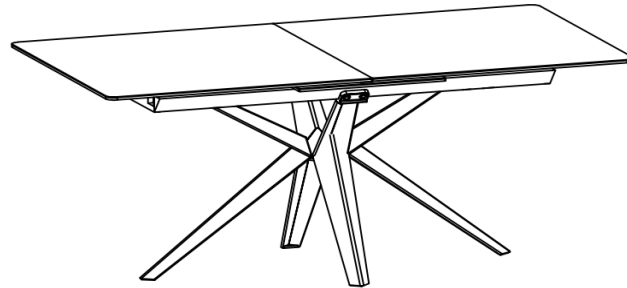

PART LIST

Description	Drawing	Quantity
A-Table top		1
B-Long Leg frame		2
C-Short Leg frame		2
D-Connector		1
E-Bolt M8x20mm		20
F-Washer $\phi 20 \times \phi 8 \times 1.5 \text{mm}$		8
G-Allen key 6#		1
H-Adaptor		1
I-Extention cable		1

Tools needed for assembly

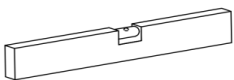



Assembly Instructions


Carefully unpack all parts before assembly.

Friendly reminder:


Please put some soft support under the table top (A) when assembling to avoid any damage or scratch on it.

As shown in the drawing:


1. Please turn the table top (A) over, assemble the leg frame (B&C) to the corresponding position at the table top (A) with bolts (E) & washers (F) by allen key (G); Fix the bolts for 90%;

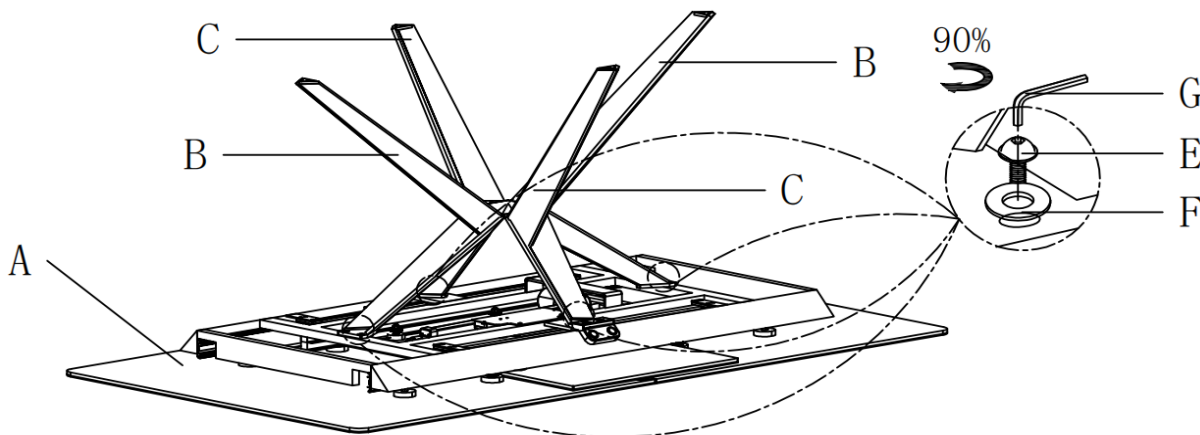


2. Please assemble the connector (D) to the corresponding position at the middle of leg frame (B&C) with bolts (E) by allen key (G); Fix the bolts for 90%;

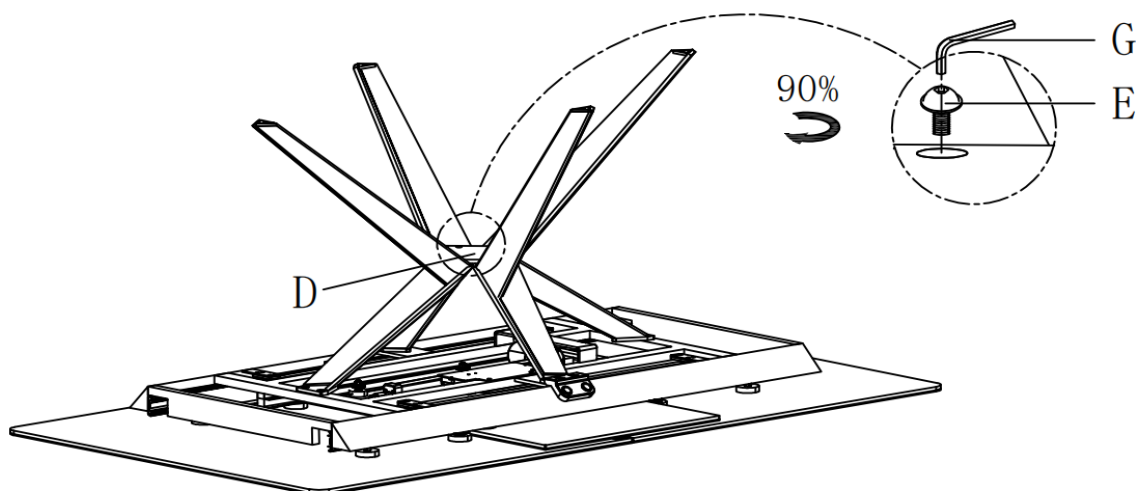


3. Please fix the bolts (E) to connect the table top and leg for 100%;

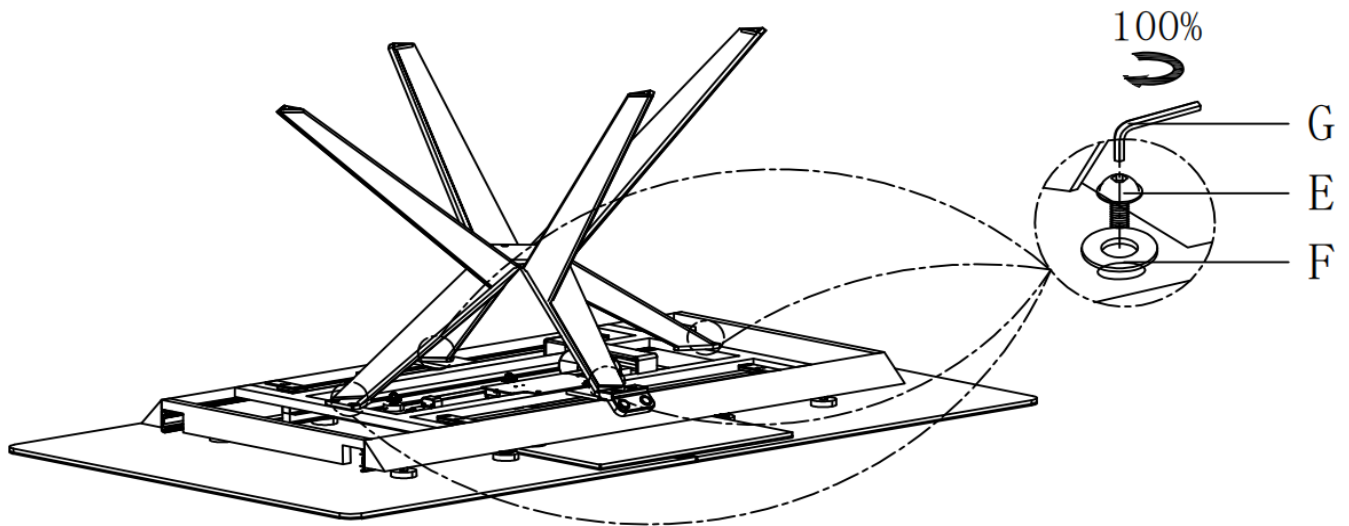

4. Please fix the bolts (E) of the connector for 100%;

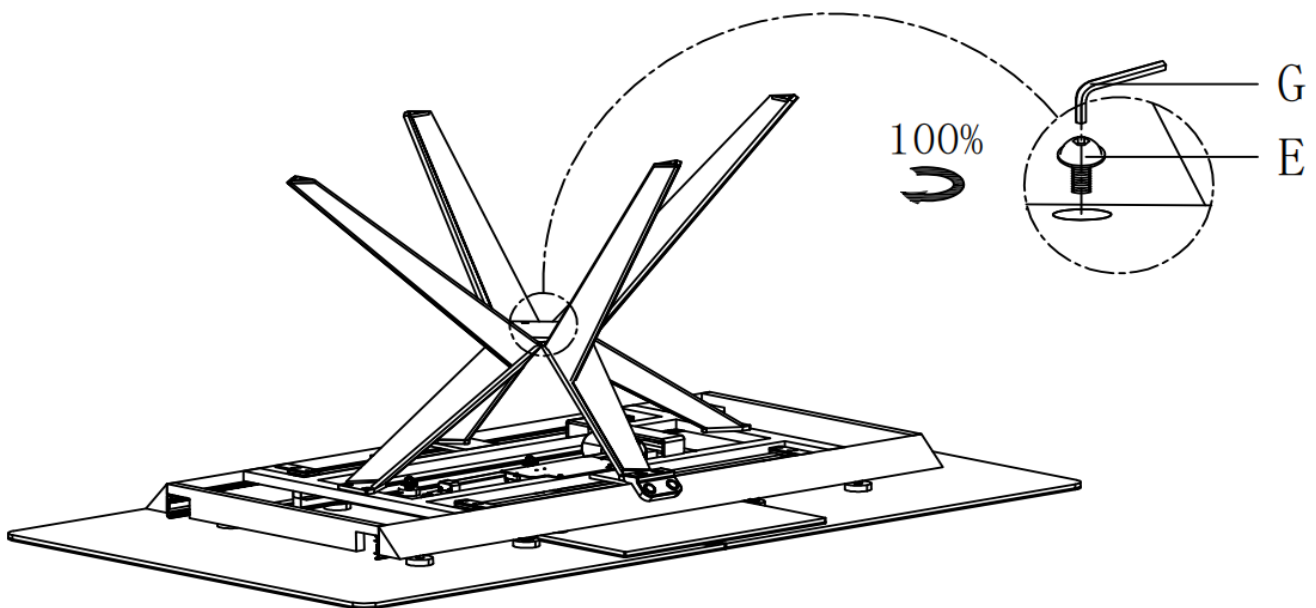


5. Please turn the table do not hold the table top, use the metal leg and frame to hold and turn around the table;

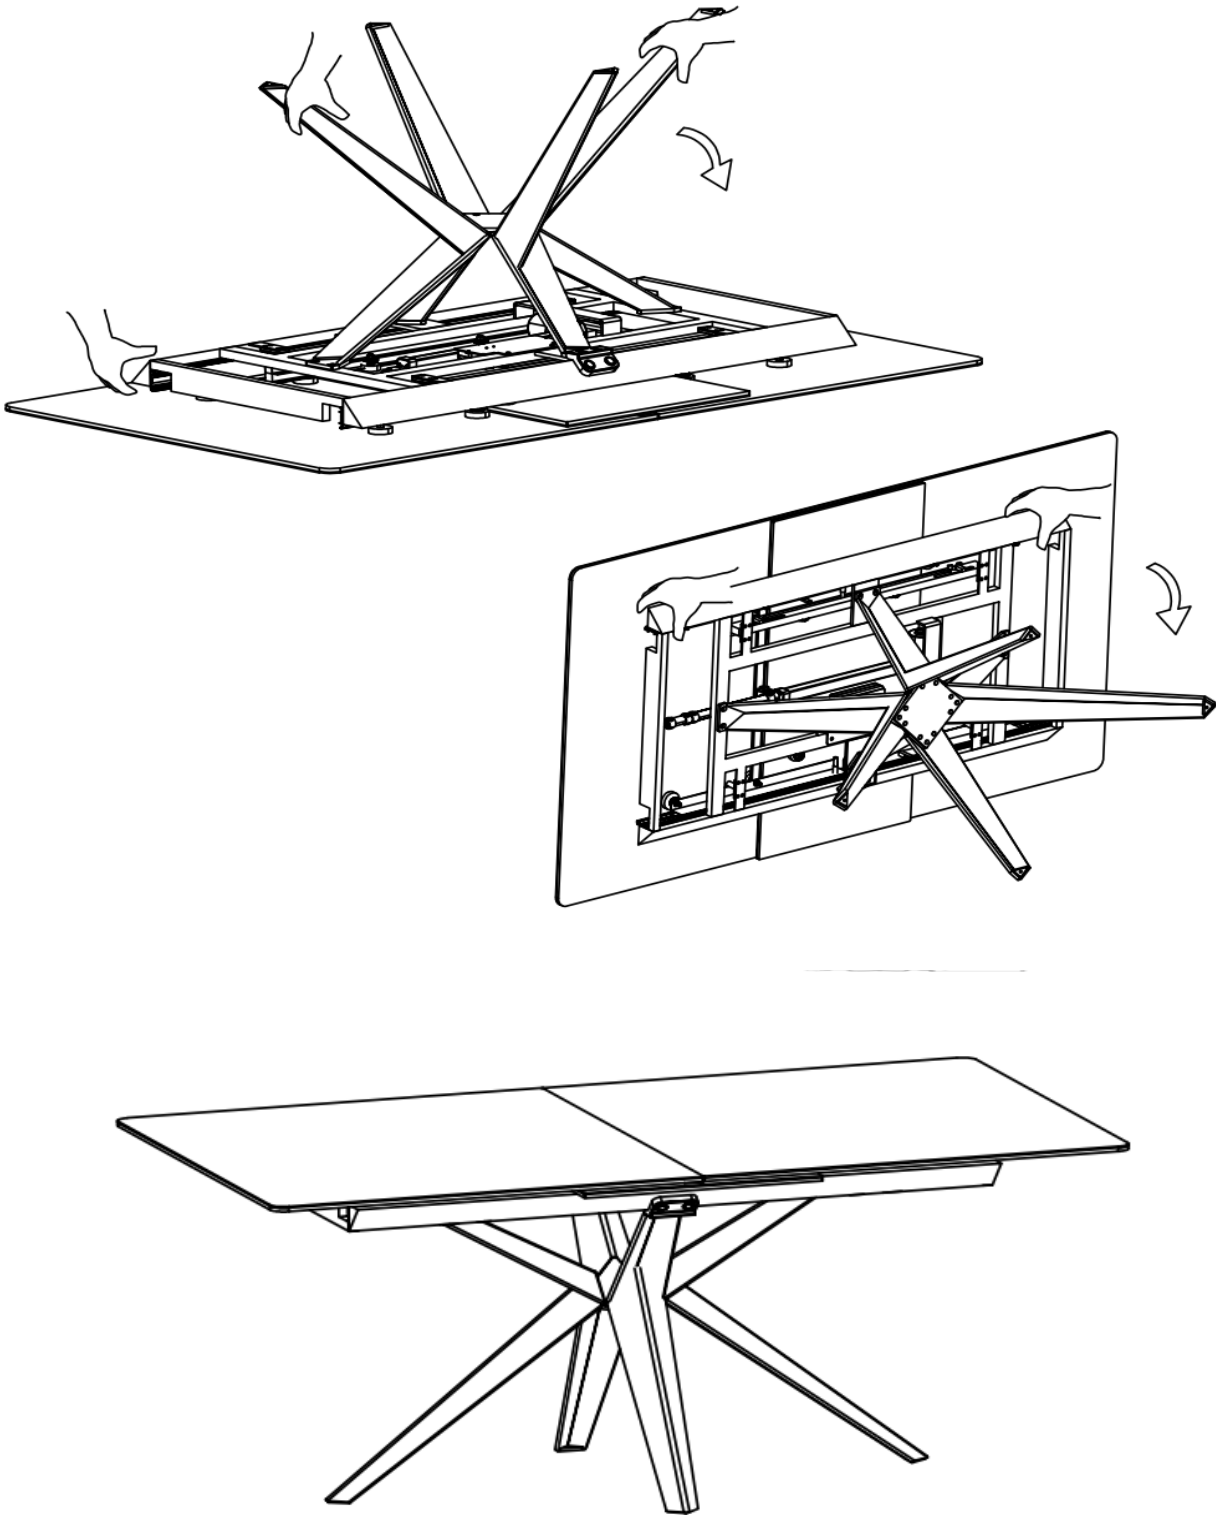


6. Recommended to place the dining table on a flat area surrounded by a space in order to avoid phase with surrounding objects collision when the dining table is expanded, should be reserved in advance before and after more than 40cm space;




7. Please adjust the adjustable plastic feet to level the table, use a leveler on the table top;

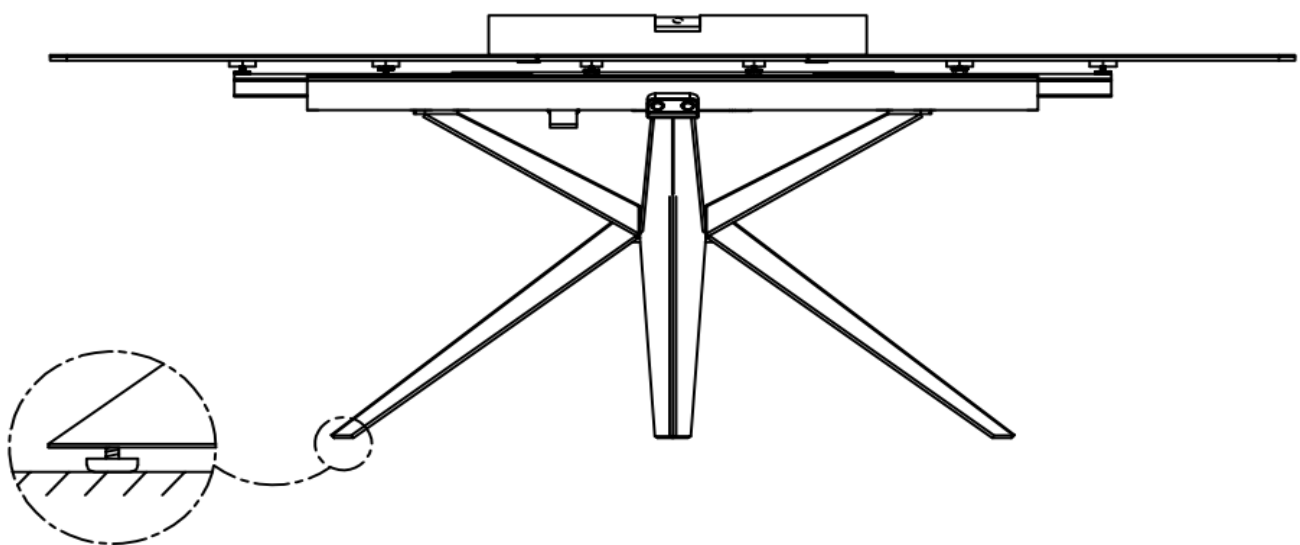


8. Please connect the battery cable to the actuator in the bottom of the table;

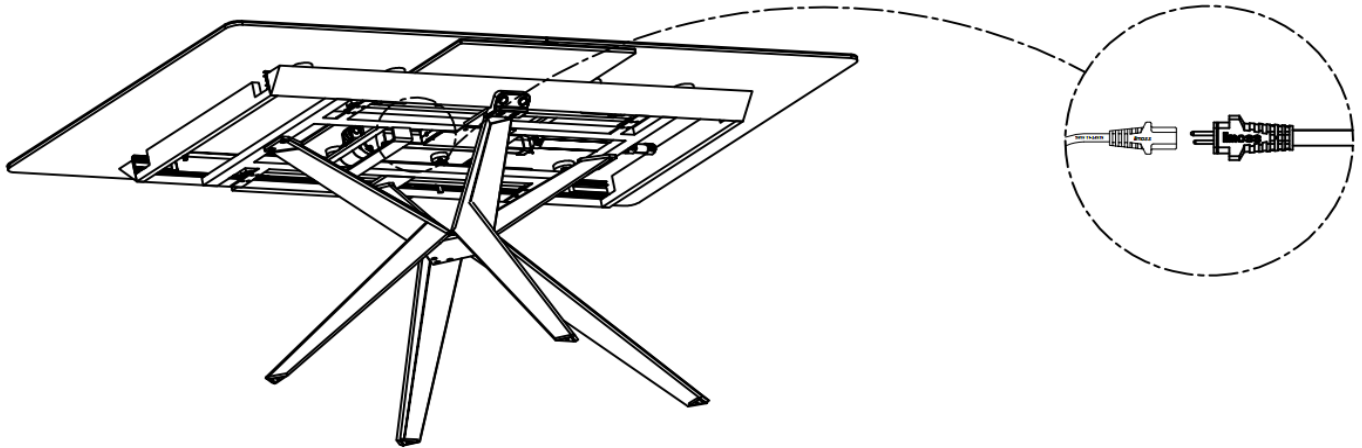


9. Please charge the battery with the provided adaptor for 7~8 hours. The system can be used while charging;

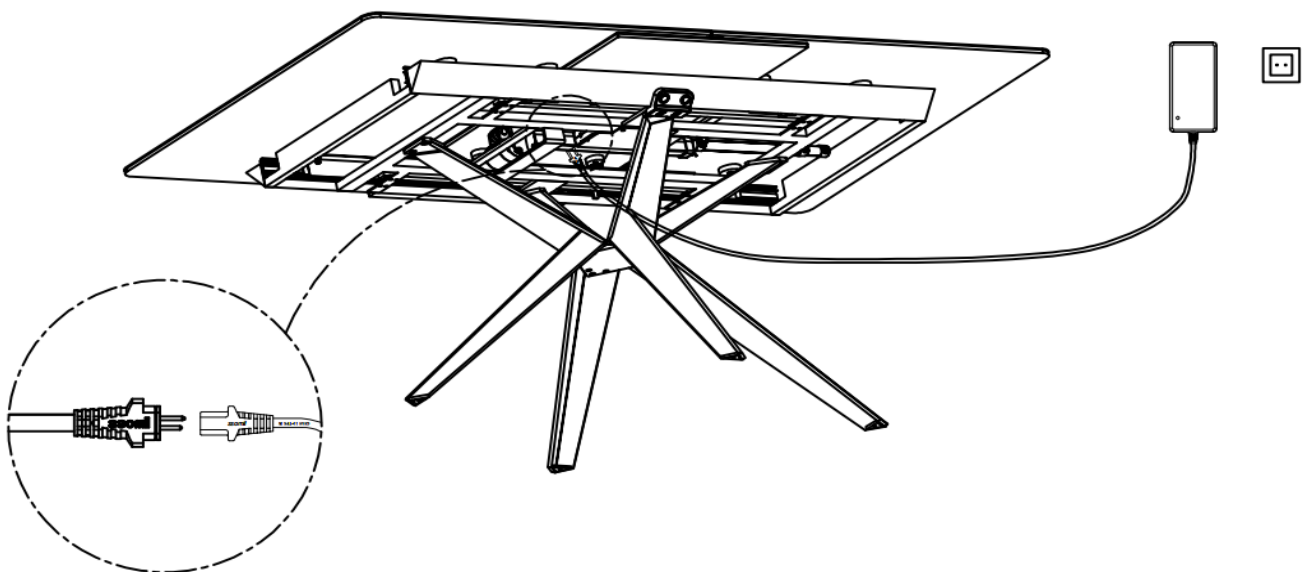


10. Please extend the table by pressing S1, then remove the 2 pieces of foam and keep them for later use in case of transportation;

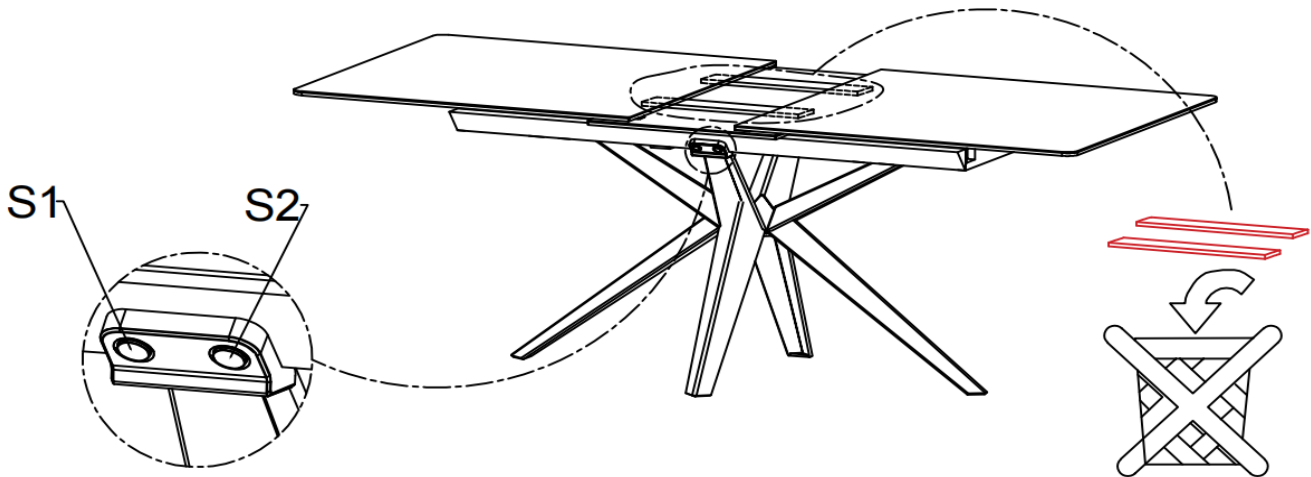


11. Please do not put heavy objects on the edge of the table;

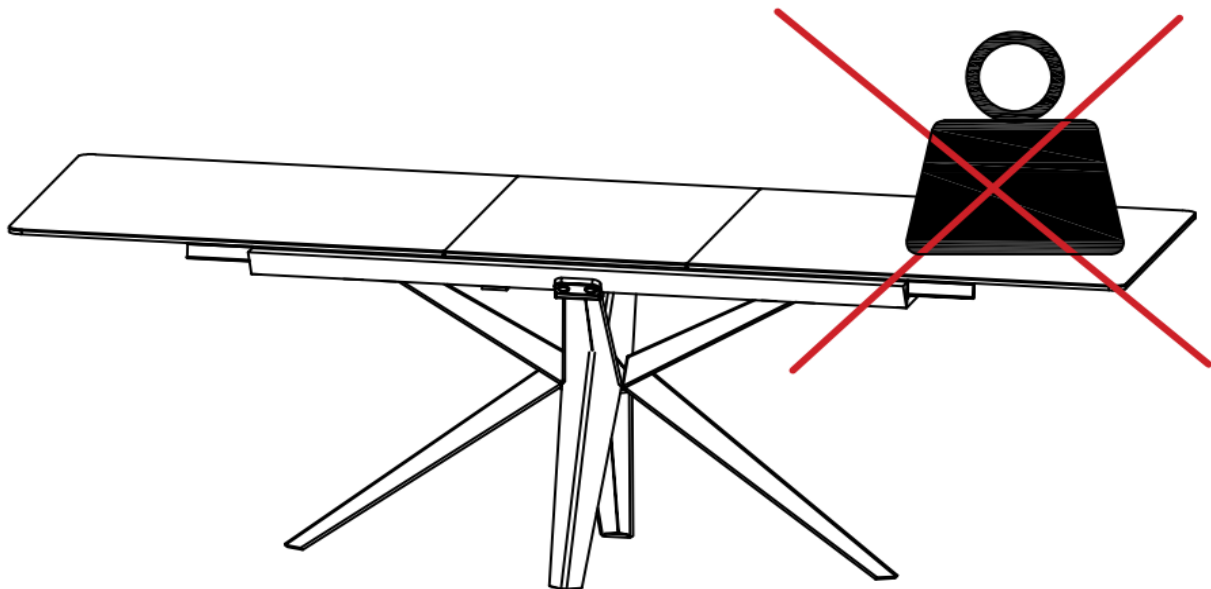


12. The table is not designed for sitting on the edge, please refrain from doing so;

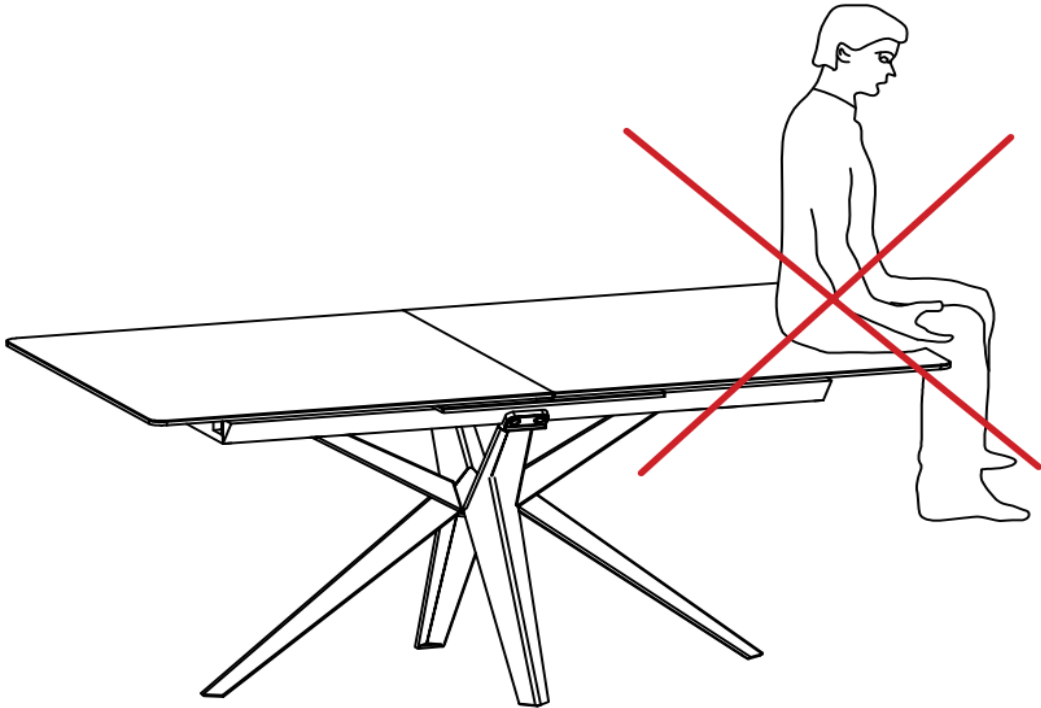

13. The table requires a minimum of two individuals to facilitate its movement. Please refrain from gripping the tabletop and instead utilize the metal leg and frame for support.

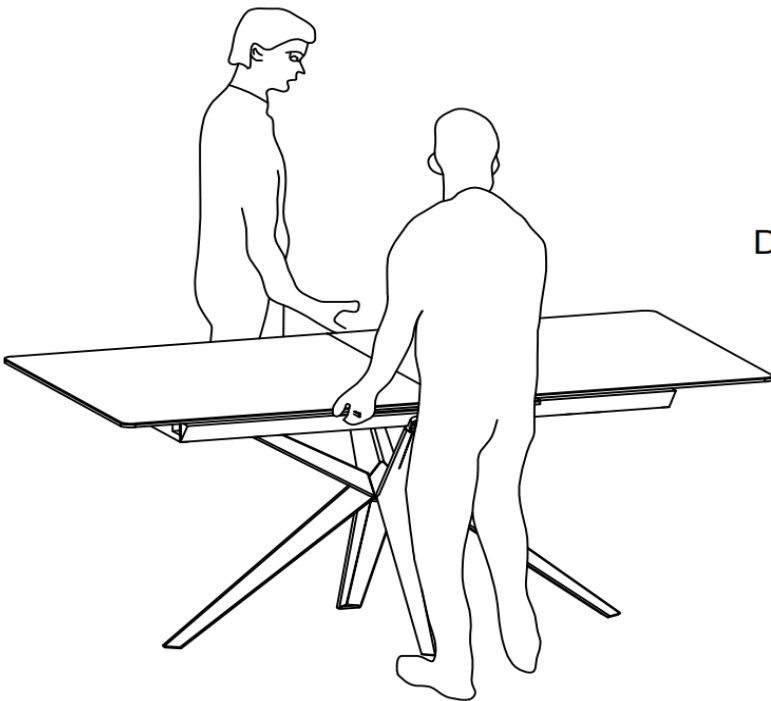

!WARNING!
DO NOT LIFT USING GLASS TOP
LIFT USING METAL FRAME

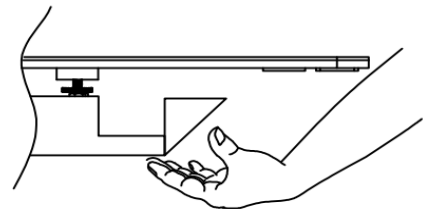

CORRECT WAY

HAKU 7116 User Manual

Table of the contents

1.Safety Instructions.....	1
2.Usage.....	2-4
3.Function.....	4
4.Disclaimer and exclusion of liability.....	4-5
5.Maintenance and Service.....	5-6
6.Decommissioning and Disposal.....	6

1. Safety Instructions

Please carefully read and follow the instructions to ensure the safe use of the motor. Non-observance of the safety instructions may cause considerable damage.

KEEP OPERATING INSTRUCTIONS IN A SAFE PLACE.



Indoor use only



Some electrical and electrical equipment forbid to abandon and disposal at will



CE mark




This product must not be use:

- Within an environment, where flammable or explosive gases/vapors can be expected
- In a damp environment (offshore-facilities, seaside), or outdoor
- With a medical product, e.g. for the installation in a medical product
- In planes or other air crafts
- In nuclear power plants

Caution:

- This appliance can be used by children aged from 12 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- The appliance is only to be used with the power supply unit provided with the appliance.
- It must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- All components must be regularly checked visually for mechanical damages, deterioration and for proper function. The inside components do not need any maintenance unless expressly recommended elsewhere.
- Care must be taken when operating this equipment around other electromagnetic equipment (such as HF device). Potential electromagnetic or other interference could occur to this or to the other equipment. Try to minimize this interference by not using other electromagnetic equipment in close proximity of it.
- Watch for unusual sounds or irregular function. System must be shut down on strange behavior. The devices must not be dunked into water.

2.Usage

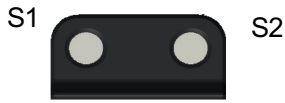

- S1: short press S1 to extend the table.



- S2: short press S2 to retract the table.




- S1+S2: hold S1+S2 for 5 seconds to activate /deactive the child-lock function

**the table is battery supported. When the power is low, the battery will remind user to charge battery with a beeping sound. In this case, please fully charge the battery for 7-8 hours.


Caution:

- While the table is extending (S1), if the extension process is interrupted, the table will stop the process; user shall press S1 to finish the extension process; the S2 button will be disabled until the extension process is completed;
- While the table is retracting (S2), if the retraction process is interrupted, the table will stop the process; user shall press S2 to finish the retraction process; the S1 button will be disabled until the retracting process is completed;
- If the table suddenly powers off, it can only operate by pressing S2 (extension) after power on, and there is no reaction by pressing S1 (retraction).
- If the device is locked, when it is powered on again after the power is off, the handset needs to be unlocked: hold S1 and S2 for 5 seconds simultaneously to unlock.
- The pressing strips of the sensor should not be bent, otherwise it may lead to non-function.
- In case there is a need to assemble the (new) actuator, the actuator need to be fully retracted. If the actuator is installed on the table in a state that is not fully retracted, it may misjudge when extending or retracting.
- In case of not using the table for 6 months, please charge the battery to extend the battery life.
- If any liquid is spited on the top of the product, need to clean up immediately.

- Please don't place items with a thickness of less than 10mm on the middle top to prevent the gap between the middle and side tops from being damaged the sensor.

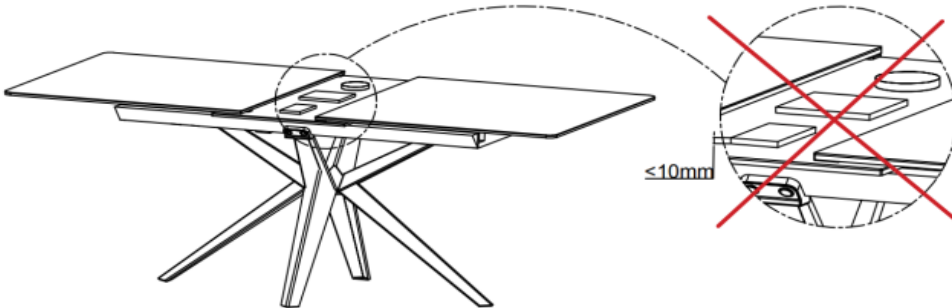


- Please don't attempt to place your fingers in between the table tops even if there is a press sensor, especially to keep it away from babies.

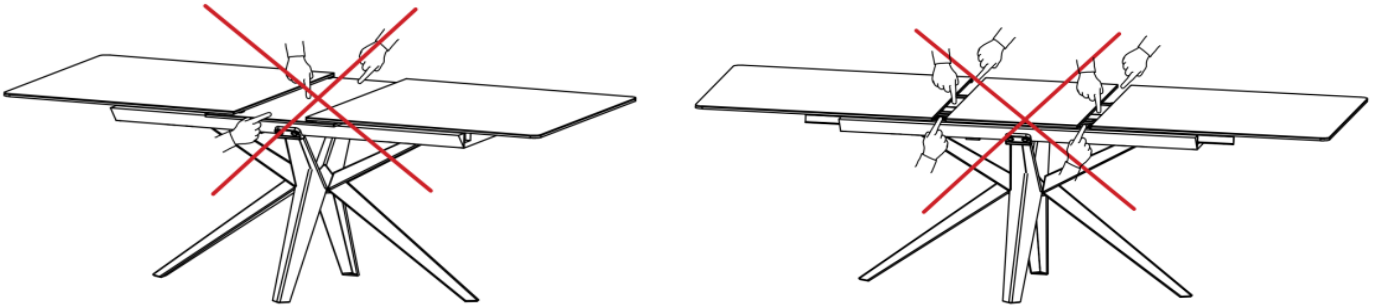

- Check the charger, cable and plug before each use. Should you notice any damage to the charger, the external cable or the battery pack, the device must no longer be used.

- The batteries may only be charged the supplied original charger.

- Keep the charger and where applicable the battery away from rain and moisture. Prevention of electric shocks.

● PLEASE NOTE  ONCE BATTERY IS FULLY CHARGED, YOU MUST TAKE OUT THE CABLE! DO NOT LEAVE THE BATTERY PERMANENTLY CHARGING!

- Do not open the charger or battery pack yourself, only have repairs carried out or parts exchanged by qualified specialist personnel using original spares.

- The battery must be removed from the appliance before it is scrapped.

- The appliance must be disconnected from the supply mains when removing the battery.

- The battery is to be disposed of safely.

- These instructions are also available in an alternative format, e.g. on a website.

● According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.



3.Function

3.1."0" standby Function

When the table extends or retracts, wait 10 seconds after it stops moving, it will enter the "0" standby mode. When it is on the "0" standby mode, please long press S1 or S2 to wake up the system until the table starts to react.

3.2.Safety Lock

Hold S1+S2 for 5 seconds to lock/unlock the handset.

3.3.Anti-Pinch

The left panel and the center panel of the table are equipped with a pressure sensor. If the table is pressed to any position of the sensor when it retracts, the table will bounce back and then stop running.

Caution!

The device is designed for indoor applications. The following ambient conditions must be maintained.

Operation: 0 °C (32 °F) to 40 °C (104 °F)

Storage: 0 °C (0°F) to 40 °C (104 °F)

Air humidity: 0 – 85 %

Devices with special types of protection are appropriately identified in the nameplate.

3.4.Technical Data

Power (MC110)

Input voltage / current:AC 100-240V, 1.6A

Output voltage / current:DC 29V, 2A

Standard nominal voltage:DC 29V

Battery (MC160)

Battery Capacity:1800mAH

4.Disclaimer and exclusion of liability

Modulax is not responsible for damage resulting from:

* Failure to observe these instructions, changes made to this product which have not been approved by Modulax or the use of replacement parts which have not been approved or manufactured by Modulax.

* We reserve the right to make unannounced technical changes in the course of our continual product improvement process.

* The table is designed with built-in safety functions. The user shall not rely on the safety functions only and will make sure no objects or body parts shall interfere with the system while in use. Modulax is not responsible for any damage or injury caused.

* Do not alter or disassemble the products.

* Only use the charging cable provided with the product.

* User must take high precautions to prevent persons from injuries and objects from damage while using this table. Modulax will not take any responsibility for any damages or injuries.

* In case of malfunction or need technical support, please contact your sales representative at your earliest convenience.

5. Maintenance and Service

● Modulax electrical components described in this manual are maintenance free.

● To clean the components, wipe the surfaces with a damp cloth and mild household cleaner. If there is concern that system components have been exposed to heavy moisture or water intrusion, we recommend having them inspected by a Modulax-qualified technician. If there is concern about water intrusion, remove the power plug and do not use the product again until it has been inspected or revised.

● If faults should occur within the guarantee period, it is important that you send the actuator for repair, since the guarantee becomes invalid if the actuator has been opened by unauthorized persons. To avoid risks in subsequent use, all repairs must be performed by Modulax authorized technicians.

● Unauthorized repair procedures and / or modifications may result in consequential damage and will void the warranty.

● In order to guarantee stability and life of the article, periodically check that the screws are correctly tightened.

● Contact with hot items can damage the surface.

● The ceramic surface is made to stand the test of time and not absorb any dirt but in general cleaning is more effective if the dirt is fresh, or at least hasn't dried yet, using hot water.

● Routine Cleaning For daily cleaning of your ceramic table top, use warm water and, possibly, mild detergents (e.g. soap or worktop detergents), using a cloth or soft sponge.

● Rinse with plenty of water then dry the surface with a soft cloth or kitchen paper.


● To prevent an opaque film from forming, it is advisable not to use products containing wax.

● Do not use detergents or abrasive sponges.


● Modulax disclaims any responsibility deriving from incorrect use of the abovementioned object.

● There is a tolerance of 1mm height difference between the table top boards.

- As there is sensor in between side and middle tops, so please keep it clean, no oil, no damage, no shedding.

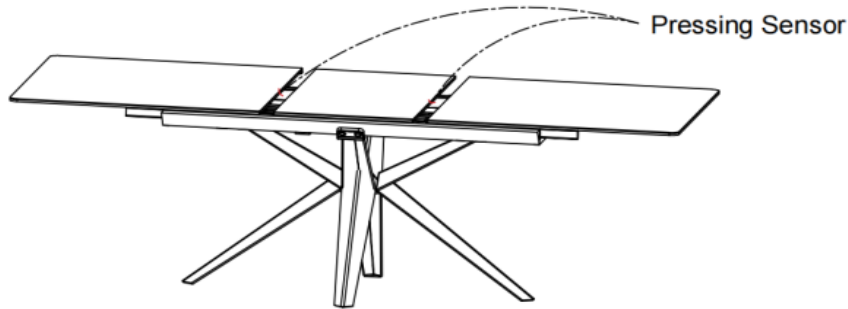

- Moving parts always need to be well lubricated to help them move smoothly and function correctly. It is possible that during transportation the lubricant applied can get time we therefore recommend to apply a lubricant to the footrest. This is something that is good to do for your recliner approximately once every six months. Please see below for the areas of application:

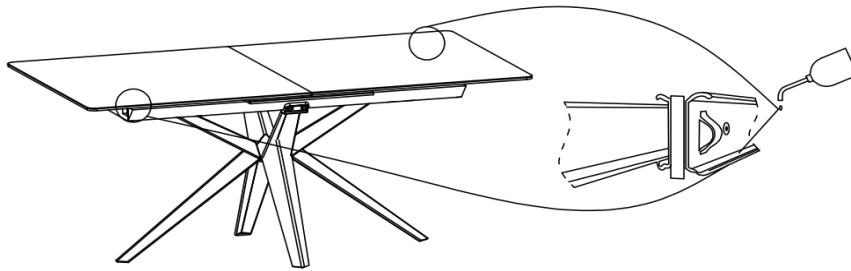

CAUTION: Please keep children away from the table during opening & closing actions.

6. Decommissioning and Disposal

1. This product may not be disposed of in household waste!
2. Upon discontinued use, this product must be disposed of as electronic waste in accordance with the disposal regulation of your district / country / state. Storage batteries that have become unusable may not be disposed of in household waste.