 


# Instruction Manual

## Electric Patio Heater

**Model:1820168**

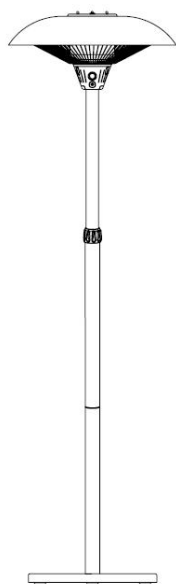

**Please read these instructions carefully before using your new  
Electric Patio Heater**

## IMPORTANT INSTRUCTIONS

Only use the halogen heater on a firm solid horizontal area where all the feet on the base are in contact with the floor. (Should the heater be tilted or fall over the auto cut off switch will activate)

1. Site the heater outside or in a large open area and well away from any obstructions such as branches or where the heater is near any objects that can be affected by heat, such as furniture, curtains or other inflammable objects (minimum distance 1 meter).
2. Do not use in unventilated areas.
3. Do not use where gas, petrol, paint or other inflammable goods are stored.
4. Do not push any items through, obstruct or cover the grill of the heater head.
5. Do not leave turned on and unattended especially when children and or animals are in the vicinity.
6. The indication of the different positions of switches shall be visible from a distance of 1M.
7. The Marking concerning covering shall be visible after the heater has been installed. It shall not be placed on the back of portable heaters.
8. The unit must be securely placed on a horizontal and flat surface.
9. The unit is at high temperature during operation. It keeps hot for a period after shut down. Potential danger would occur when touching it during this period.
10. Don't place the unit closed to curtain and/or other flammable

objects. Otherwise there will be a danger of catching fire.

11. Don't cover the unit with anything during operation or a short time after it's shut down.
12. Don't wrap the power supply cord on the unit.
13. The unit must be handled with care, and avoid vibration or hitting.
14. The unit must be securely grounded during operation.
15. When assembling, keep clear from any board or flammable material.
16. The head of the unit is at high temperature during operation. Unplug the unit and wait till it cools before cleaning.
17. Don't use this unit in place where causticity or volatile air exists, i.e. dust, steam, gas, etc.
18. Don't use this unit as a cloth drier or towel drier.
19. Don't use this unit as a sauna heater.
20. Don't use this unit in place of animal propagating and raising.
21. Don't immerse this unit into water for cleaning.
22. The unit should be plugged in a socket, which is easily visible and reachable.
23. Two Dark points may exist on the surface of the heating elements during the first few minutes after it is turned on. This is normal, and will not affect the performance of the unit.
24. Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of

 
the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

**CAUTION** — Some parts of this product can become very hot and cause burns.


Particular attention has to be given where children and vulnerable people are present.

## Assembling Process


Step 1: Connect the bottom tube with base by screwing them together.

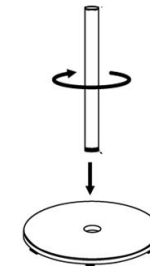

 
Step 2: Connect the 2 middle tubes with bottom tube by screwing them together..

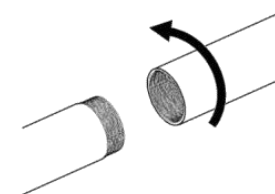

 
Step 3: Place the power cord plug through base, bottom tube, middle tube and top tube. Connect the power cord plug to the socket in the heater head.

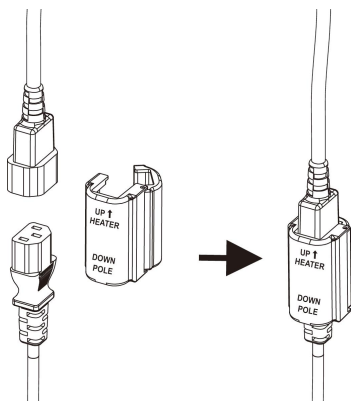

 Step 4: Push the heater head onto the top hollow tube and fix it in position using the supplied 2 X M4\*8 screws.

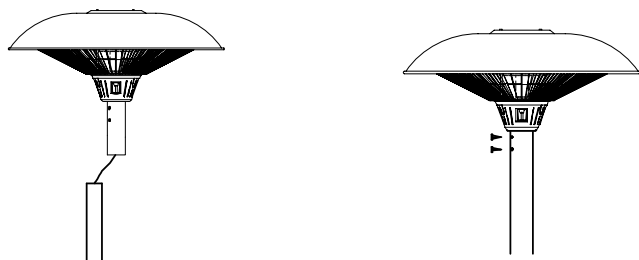

 
Step 5: Pull the power cord gently out of the base as much as possible. Fix the power cord under the weighted base using the supplied 4pcs M4 nuts.

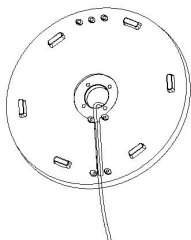

Step 6: Raise or retract the top tube to the desired height and tighten to the middle tube by screwing knob down.



 Step 7: Fix the heater on the floor. Bore three holes in the floor, fix the heater by three wedge bolts on the floor tightening the screws by spanner.

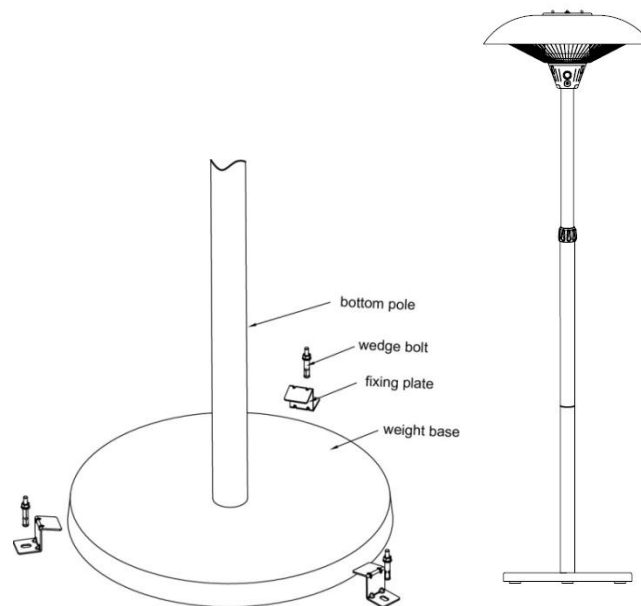


Complete!




## OPERATING INSTRUCTIONS

 
- WARNING: Plug the Patio Heater into a grounded 220-240V, 50-60Hz 13 A power outlet.
- Only operate the heater when it is in the upright position.
- The switch on the heater is used to control the Heater. When the position mean on the 【I】 , the heater will be in standby mode, The 【O】 position will turn off the Heater.

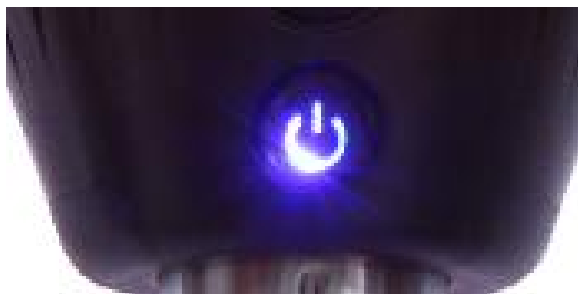


### Touch Switch





- Touch the  once to operate the heater on 900W power.
- Touch the  twice to operate the heater on 1200W power.
- Touch the  third time to operate the heater on 2100W power.

 - Touch the  fourth time to shut the heater off.

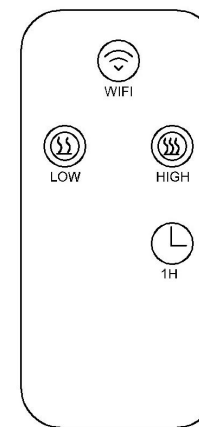
### Remote Control




- To operate the heater on 900W power, press the button LOW of the remote control.
- To operate the heater on 1200W power, press the button HIGH of the remote control.
- To operate the heater on 2100W power, press both the button LOW and the button HIGH of the remote control.
- **When the heater working,** Touch " enter timing selection mode. Press the first timer for 1 hour, then press again to turn off the timer.
- Touch the icon " to reset the WIFI.

## WiFi operation

 
1. Download TUYAAPP in the app store. Login/register according to the interface prompt.

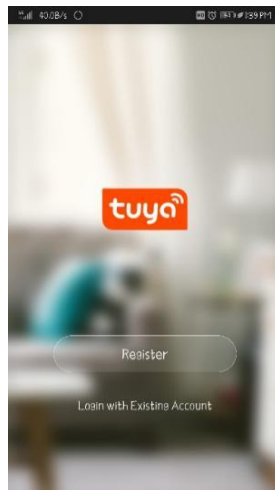

 2. Select and add the product in the current interface after login and then select “Small Home Appliance”-“heater”.

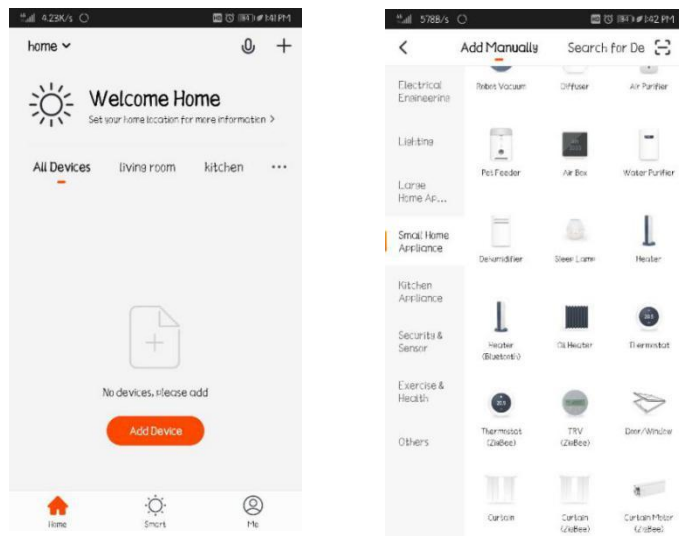

 
3. Select “Confirm Indicator Rapidly Blink”, enter WIFI password, and then connect it.

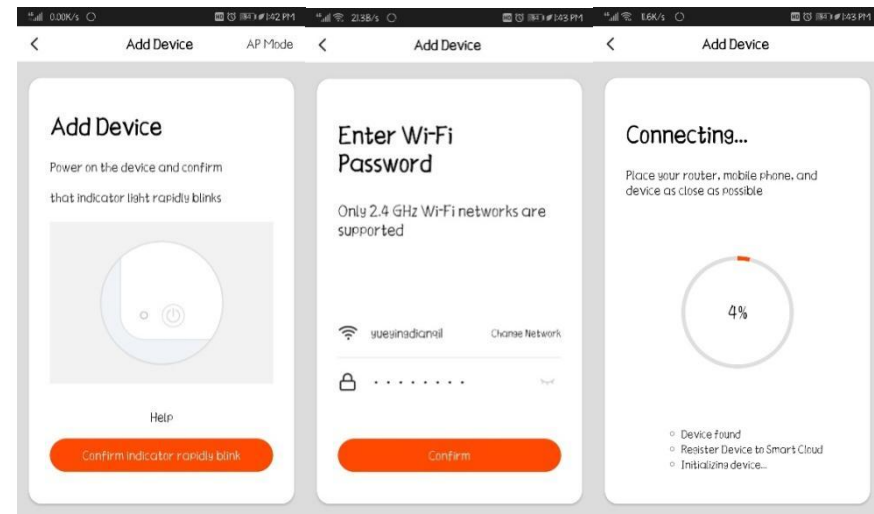

4. When device matched successful, you can editor the item No.. It will be completed.



 5. Enter the operation interface, click the button under the App to adjust switch/setting/timer. The App can be timed 24h

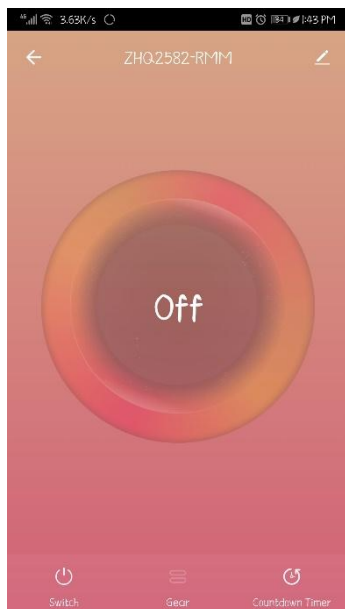

- Although the patio heater is shower proof, do not use when raining or in wet conditions.
- Always disconnect the power cable from the electrical supply, when the patio heater is not in use.

## MAINTENANCE

Unplug the unit and let it cool completely.

- To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth.
- DO NOT use alcohol, gasoline, abrasive powders, furniture polish,

or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.

- Although this heater is outdoor approved, DO NOT immerse the heater in water for your safety.
- Wait until the unit is completely dry before use.

## STORAGE

If the heater will not be used for a long period of time, store it in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

## TROUBLE SHOOTING

If the heater will not operate, please check the following before seeking repair of service:

- } Check if the power cord is plugged into an electrical outlet, if not plug in.
- } Check if electricity to the main fuse is working.
- } Make certain the power switches are turned on. If not, choose a setting.

## Technical specification

- Power supply 220-240V~ 50Hz
- Wattage max 2100W
- Insulation class I

## WEEE



This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.

