


Programming Manual

SOMMER 4020 – SOMMER 4026 – SOMMER 4031 - APERTO
TX02 - APERTO TX03

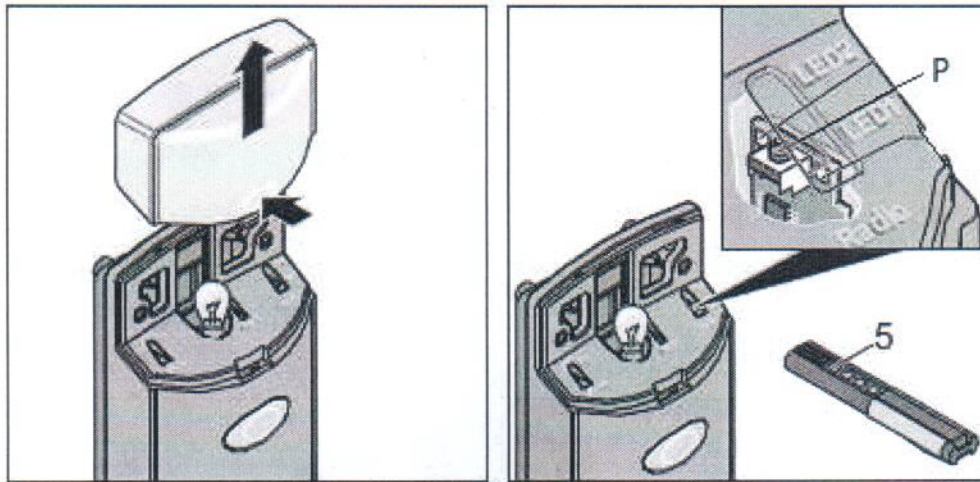

Programming of your new remote control:

Caution: The programming button on the receiver is located at the edge of the receiver board. If you hold down the programming button for too long, you will delete all previously programmed remotes.

1. Open the casing of your receiver (diagram above). It is located next to your motor.
2. On the receiver, press the programming button P. The LED light L1 on the receiver illuminates. Let the button P go.
3. During the following 5 seconds, press the button you wish to program on your new remote control for 2 seconds. Let it go.
4. Repeat this procedure for each button you wish to program.
5. Wait 10 seconds.
6. Your new remote control is programmed.