

RX MULTI WIFI 433-868 MHz MANUAL

RX-MULTI
 AC/DC: 6-30V
 AM/FM: 433-900MHz

Labels for components: L1, L2, R1, R2, R3, R4, R5, R6, R7, R8, R9, R10, R11, R12, R13, R14, R15, R16, R17, R18, R19, R20, R21, R22, R23, R24, R25, R26, R27, R28, R29, R30, R31, R32, R33, R34, R35, R36, R37, R38, R39, R40, R41, R42, R43, R44, R45, R46, R47, R48, R49, R50, R51, R52, R53, R54, R55, R56, R57, R58, R59, R60, R61, R62, R63, R64, R65, R66, R67, R68, R69, R70, R71, R72, R73, R74, R75, R76, R77, R78, R79, R80, R81, R82, R83, R84, R85, R86, R87, R88, R89, R90, R91, R92, R93, R94, R95, R96, R97, R98, R99, R100.

Pin headers: POWER, GND1, GND2, GND, ANT.

CE mark.

For learning any additional remote or button, please repeat steps number 2 and 3.

DS 201 RX MULTI WIFI

6. Learning a device


1- Download the “DASPI” App




on:



2- Create an account

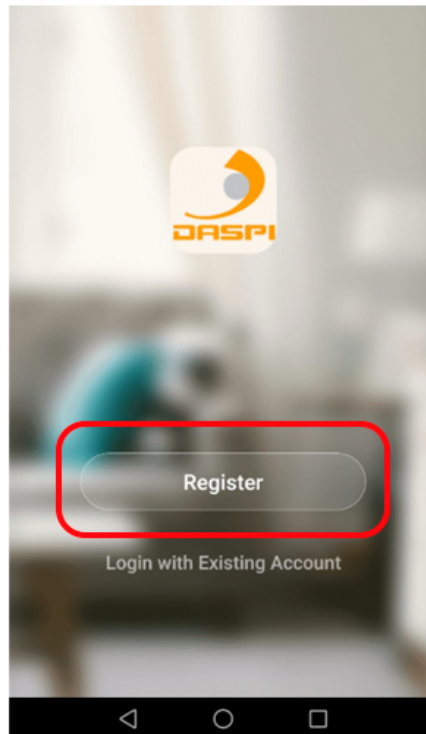


3- Press on “Add Device”

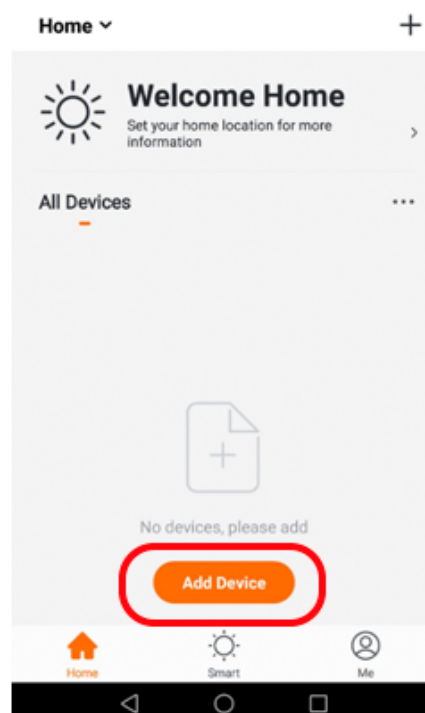


DS 201 RX MULTI WIFI

4- Choose the kind of device to be added. In this case: **“receiver”**

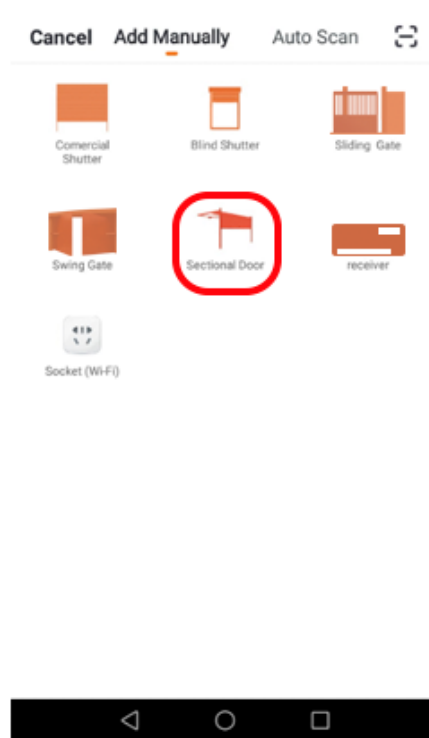


5- Check the device is connected to the power and then press on **“Confirm indicator rapidly blink”**

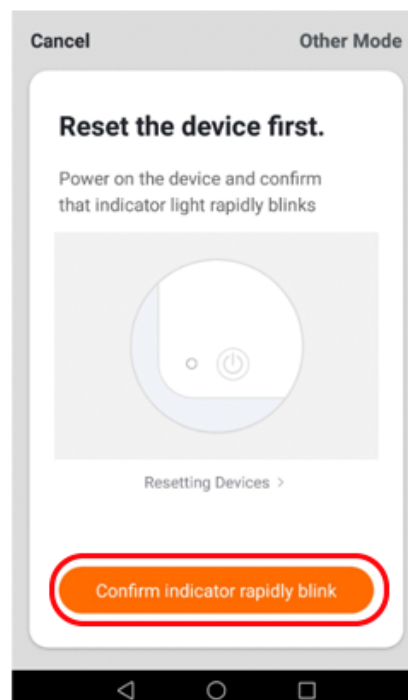


DS 201 RX MULTI WIFI

6- Connect your phone to the WiFi network the receiver will work with.

7- Choose the WiFi network on the App and introduce the password to let the receiver what network should use. Press **“Confirm”**.

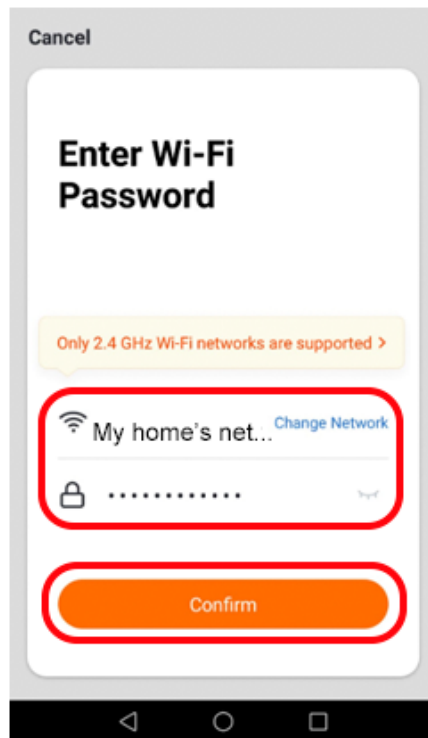


8- Keep pressed the button “S1” on the receiver for few seconds until the red LED starts flashing.

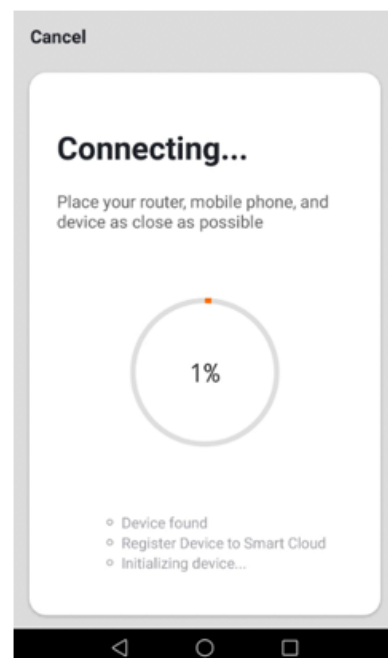


DS 201 RX MULTI WIFI

9- The receiver has been correctly added. Press **“Done”**

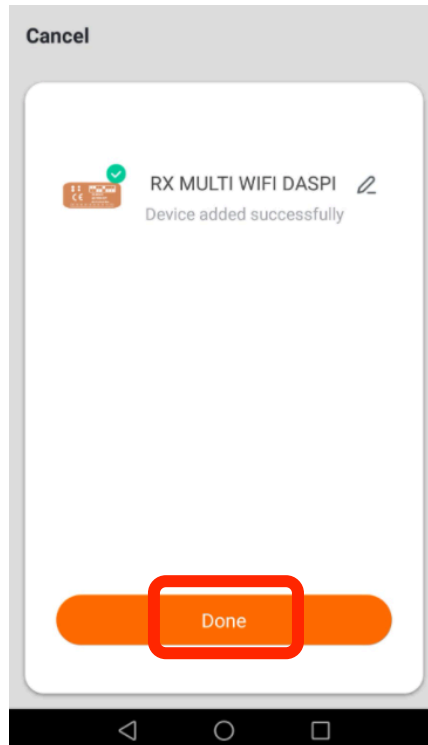

10- Once the receiver has been added, we can control the device with the smartphone.

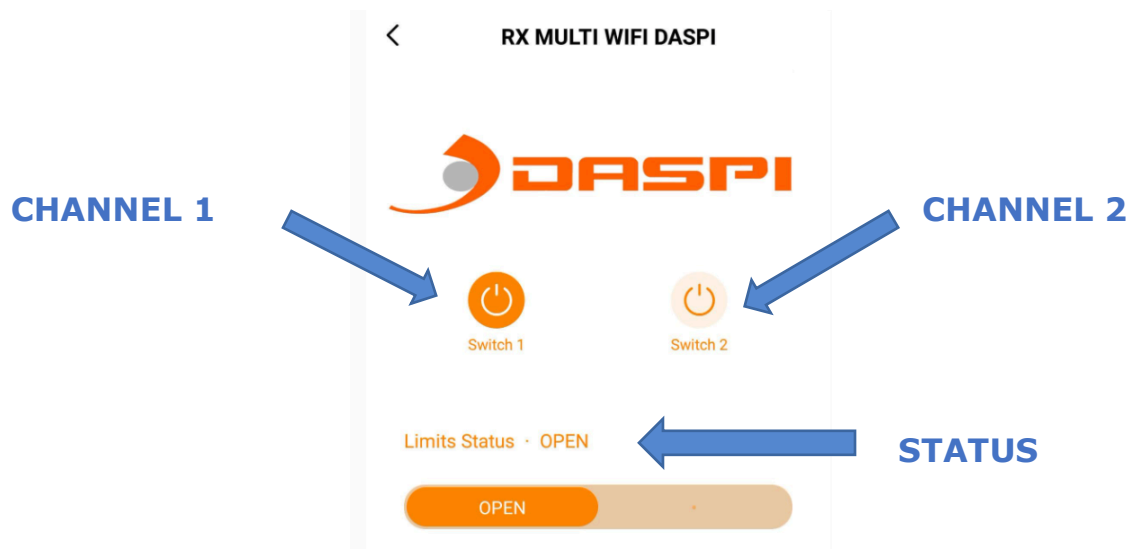


7. Deleting the stored data in the memory card:

If button S1 or S2 is pressed for few seconds the corresponding LED will remain on. Keep the button pressed until it turns off, then the data will be completely deleted (remotes and connected devices).

DS 201 RX MULTI WIFI


ATTENTION: The deleted data cannot be recovered.

8. Wiring diagram

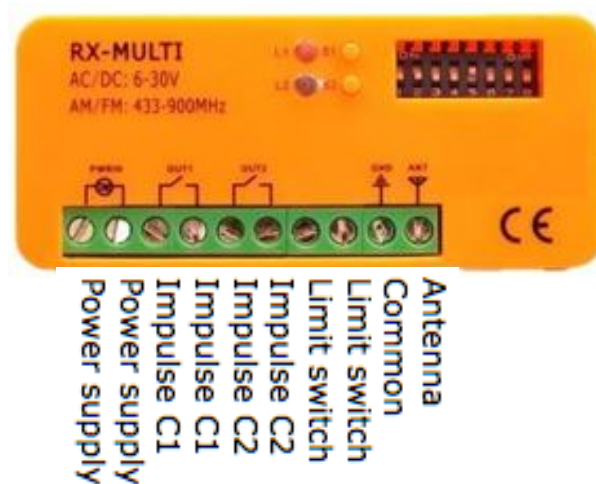

9. Parts of the receiver

Location of the LEDs, buttons and DIPs switches.

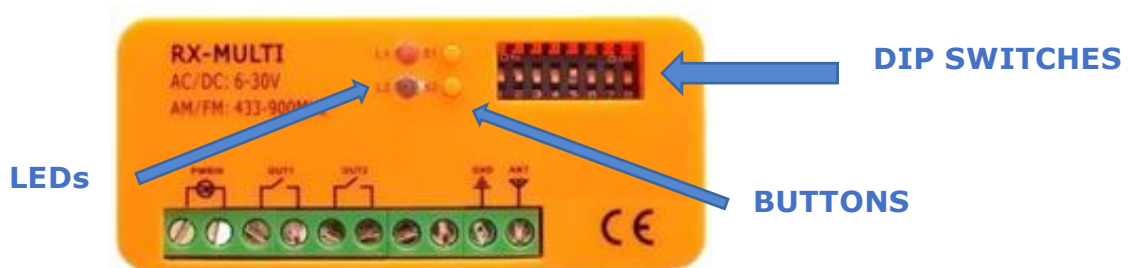

Go to the next page to see the DIP switches combinations

DS 201 RX MULTI WIFI

TABLA 1 / TABLE 1

ITEM	SELECTION DIP SWITCH	BRAND	FREQ	NOTES
1		NICE FLORS	433.92 MHz	
2		MARANTEC	433.92 MHz	
3		Universal Fixed Code Código Fijo Code Fixe	433.92 MHz	Fixed Code
4		FAAC SLH Rolling Code Code Variable	433.92 MHz	
5		Liftmaster	310 MHz	
6		Liftmaster	390 MHz	
7		Liftmaster	433.92 MHz	

DS 201 RX MULTI WIFI

8		Universal Rolling Open Code	433.92 MHz	Open Code
9		Universal Rolling Open Code	315 MHz	Open Code
10		Universal Rolling Open Code	318 MHz	Open Code
11		Universal Rolling Code ASK	868 MHz	Open Code
12		Universal Rolling Code FSK	868 MHz	Open Code
13		Universal Fixed Code Código Fijo Code Fixe	300 MHz	Fixed Code
14		Universal Fixed Code Código Fijo Code Fixe	310 MHz	Fixed Code
15		Universal Fixed Code Código Fijo Code Fixe	315 MHz	Fixed Code

DS 201 RX MULTI WIFI

16	1 2 3 4 5 6 7 8	Universal Fixed Code Código Fijo Code Fixe	318 MHz	Fixed Code
17	1 2 3 4 5 6 7 8	Universal Fixed Code Código Fijo Code Fixe	330 MHz	Fixed Code
18	1 2 3 4 5 6 7 8	Universal Fixed Code Código Fijo Code Fixe	390 MHz	Fixed Code
19	1 2 3 4 5 6 7 8	Universal Fixed Code Código Fijo Code Fixe	868 Mhz	Fixed Code
20	1 2 3 4 5 6 7 8	Liftmaster Rolling Code Billioncode Code Variable	390 MHz	
21	1 2 3 4 5 6 7 8	Liftmaster Rolling Code Code Variable	315 MHz	
22	1 2 3 4 5 6 7 8	Hormann Marantec Berner	868 MHz	

DS 201 RX MULTI WIFI

23	1 2 3 4 5 6 7 8	FAAC SLH	868 MHz	
24	1 2 3 4 5 6 7 8	Prastel	433.92 MHz	
25	1 2 3 4 5 6 7 8	Sommer	868.80 MHz	
26	1 2 3 4 5 6 7 8	Sommer	434.4 MHz	
27	1 2 3 4 5 6 7 8	Liftmaster Rolling Code	868.30 MHz	
28	1 2 3 4 5 6 7 8	Clemsa Mastercode	433.92 MHz	
29	1 2 3 4 5 6 7 8	DITEC	315 MHz	

DS 201 RX MULTI WIFI

30	1 2 3 4 5 6 7 8	DITEC	390 MHz	
31	1 2 3 4 5 6 7 8	DITEC	433.92 MHz	
32	1 2 3 4 5 6 7 8	V2	315 MHz	
33	1 2 3 4 5 6 7 8	V2	390 MHz	
34	1 2 3 4 5 6 7 8	V2	433.92 MHz	
35	1 2 3 4 5 6 7 8	MARANTEC	868.30 MHz	
36	1 2 3 4 5 6 7 8	Aprimatic Encrypted Code	433.92 MHz	

DS 201 RX MULTI WIFI

37	1 2 3 4 5 6 7 8	Aprimatic Encrypted Code	868.3 MHz	
38	1 2 3 4 5 6 7 8	JCM TECH	868.3 MHz	
39	1 2 3 4 5 6 7 8	P.N.C	868.3 MHz	
40	1 2 3 4 5 6 7 8	MAP	868.3 MHz	
41	1 2 3 4 5 6 7 8	FORSA	868.3 MHz	
42	1 2 3 4 5 6 7 8	ALMA	868.3 MHz	

DS 201 RX MULTI WIFI

43	12345678 ↓ ↓ ↑ ↑ ↑ ↓ ↓ ↓	DMiL	868.3 MHz	
44	12345678 ↓ ↓ ↑ ↑ ↑ ↓ ↓ ↑	CEA	868.3 MHz	
45	12345678 ↓ ↓ ↑ ↑ ↑ ↓ ↑ ↓	Roper	868.3 MHz	