


ML Power Box

The BeoLink Converter NL/ML can from firmware release 1.4.0 act as a ML Key master on the Master Link system. The BeoLink Converter NL/ML does not include the power functionality to drive the Master Link data bus.

This power will have to come from the ML Power Box.

The BeoLink Converter NL/ML will handle the Audio- Video master function on the Master Link including Timer for BeoLab 3500. The ML Power Box will take the 5V DC from the USB port on the BeoLink Converter NL/ML and input the ML power via the RJ45 ML connector on the BeoLink Converter NL/ML.

The ML Power Box has two RJ45 sockets so it is possible to link to other ML products via CAT7 cables.

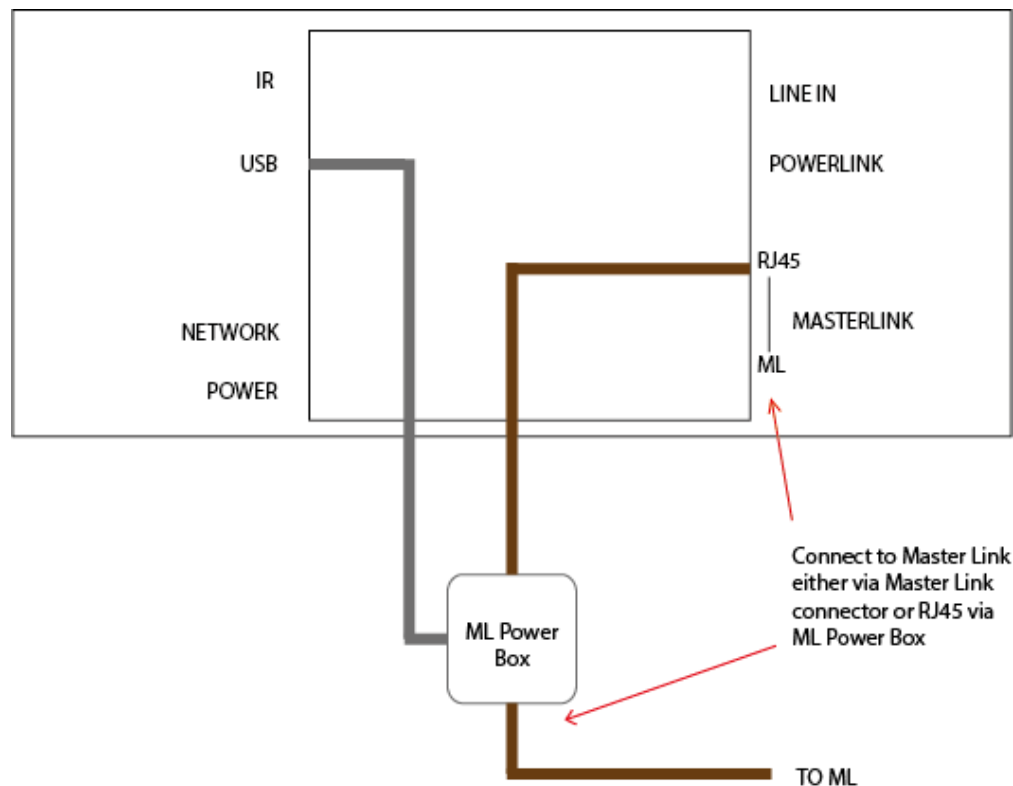

USB A – USB B mini cable. Part no 6270848