



Replace Display

- ☞ Page 8 – Beo4 in service position
- ☞ Page 13 – Remove PCB01, Main

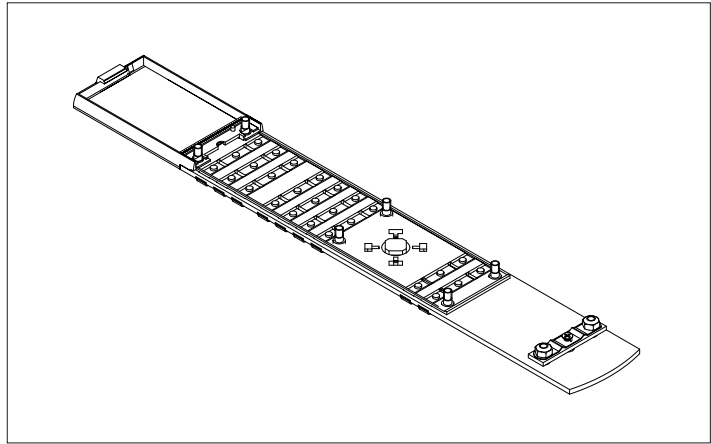

- Remove the Display and replace with new

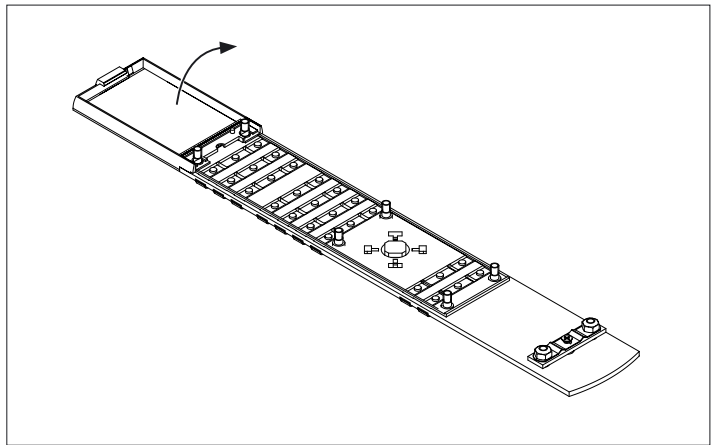

- ! Remember to adjust contrast level after replacement (refer to page 7)