

▪ BIGSTONE C500

Turning on the display


Press the "On/off" button (A) left of the display to turn electric circuit on. Display is turned on and a menu appear.

A = On/off button and lights

B = Menu display


C = Motor support up

D = Motor support down

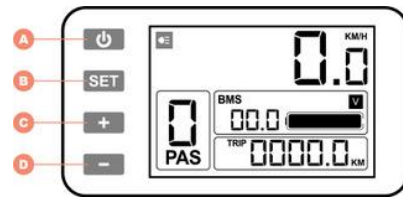

Switching bicycle lights on and off


Press the "On/off" button (A) once to turn on lights. A symbol will appear on the display. Press button (A) again to turn off.

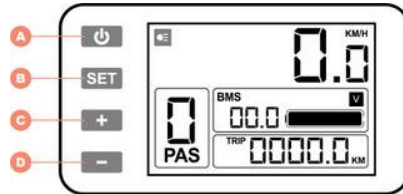

Thumb lever

By pushing the lever (A) forward when stationary, the **walk assist** will be activated (which give support up to 6 km/h). Walk assist will be activated when the (-) button is pressed for a few seconds.


Attention: Walk assist does not work when support mode is set to '0'. Using the lever while pedalling, the support will go to its maximum speed of 25 km/h.

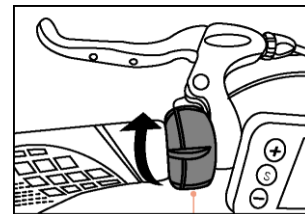

A


Switching between the 9 levels of electric support

The electric support has 9 positions. Current support setting is shown at the bottom left of the display. You can switch between these settings by briefly pressing the "+" (C) or "-" (D) button.

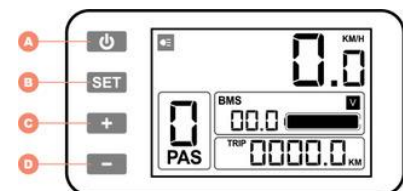

USB-port

Below the display is a USB port (A) where you can charge, for example, your smartphone or navigation device while cycling. You must activate the port by pressing the "set" and "+" buttons for a few seconds.

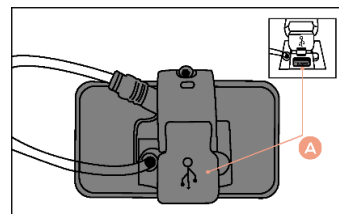

Reset Trip mode

Press the "SET" button (B) for a few seconds, maintenance menu will appear. Press the "-" button (D) once to reset trip mode. Press the "SET" button (B) again to exit menu.

