


Radiator Ventilator Instruction Manual

封面

- 5.3.4. Connect the radiator ventilator to a connector.
- Make sure that the radiator ventilator (A) faces upwards.

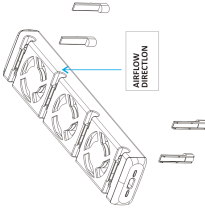

- Place the Radiator Ventilator (A) on top of the connector and allow space between the radiator ventilator and the connector. The Radiator Ventilator can also be placed on the ground below the connector if space allows.

4. If the connector block is made of magnetic material, the temperature sensor (C) can be easily positioned on it with its magnets. The temperature sensor can also be clamped between two plates of the connector block to ensure good heat transfer. The sensor can be attached to a copper pipe or any other non-magnetic location using the provided Velcro.



封底

1. Description of the User Manual

This installation manual is intended for the end-user, the general homeowner, who wants to install one or more radiator ventilators in his home.
The user does not need to be electrically trained or certified to install the ventilator.

2. Safety Warnings

Read and understand this manual and all safety instructions before using this product. Do not touch the radiator ventilator's electrical parts or other hazards that may result in damage to property and/or injuries.
The product shall only be used by persons who have fully read and understood the contents and ensure that each person who uses the product has read these warnings and instructions and follows them.
The manufacturer is not liable for cases of material damage or personal injury caused by the use of the product, even if such use is in compliance with the safety instructions. In such cases, the manufacturer's warranty will be voided.


3. Safety Instructions

- 3.1. How to Use the Product Safely
 - Never leave children alone with packaging material.
 - Children should not play with the product. This product is not a toy.
 - Do not use the product for purposes other than intended, such as for physical, sensory or mental capabilities.
 - Do not allow installation of the product by persons (including children) with reduced physical, sensory or mental capabilities.
 - Read the safety information related to the intended use.
 - Do not touch the radiator ventilator by disturbing it to a radiator. Follow the instructions in this manual to do so.
- 3.1.3. Product limitations and restrictions
 - Keep the product away from open fire, soldering (iron), or other hot tools as this could damage the product.
 - Use the product in accordance with the instructions.
 - Use, handle and transport the product with great care.
 - Pay attention and be careful when installing an electrical product. Do not install the product in the vicinity of electrical equipment if you may hurt or if you are under the influence of medication, alcohol or drugs.
 - Before connecting the power adapter to the wall socket, ensure that the local voltage corresponds to the value on the product. The maximum permissible voltage is 240 V.

- Connect the product to a properly installed and easily accessible wall socket. Make sure the product can be disconnected from the power supply at any time.
- Check all components (including cables) for any damages before installing the product.
- Never use the product outdoors. The product is intended for indoor use only.
- Do not touch the radiator ventilator's electrical parts or other hazards that could result in strong odour or overheating of the components.

- 3.1.6. Maintenance safety information
 - Keep the product away from moisture. Do not clean the product or radiator to which it is attached. Make sure you read the product through the fans.
 - 3.1.7. Service and repair safety information
 - Do not attempt to disassemble, repair or modify the product. Alterations or modifications of this product are not permitted. This will void the warranty.

4. Main components

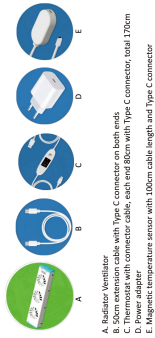


Part Name	Specification
Radiator Ventilator Set (A+B+C+D)	Model: MRV01/02 Input Voltage: 110-240V 50/60Hz AC 1500mA
Single Radiator Ventilator for Extension (A+B)	Model: MRV03/04 Input Voltage: 220-240V 0.2A

Remark: The power adapter in the package can power up to 10 ventilators maximum.


5. How to Use

- 5.1. Type of radiator can be used for this ventilator
 - Wider radiator 260mm
 - Single-sided radiator
 - Single-sided radiator
 - Connector
 - Other radiators
- 5.2. Connect the radiator to the radiator
 - Make sure that the radiator (A) is placed below the radiator plates and the magnets will automatically stick to the radiator.
 - Radiator width is 69mm
3. Identify a place where the radiator will be fixed, and connecting cable sets as follows. Attach the ventilator (A) to the bottom between the radiator plates with the adjustable magnets. The ventilator (A) can also be attached on top of the radiator and under a cover. NOTICE: Make sure the fans still have upwards!
3. Connect the thermostat cable (E) and temperature sensor (F) to the Type C connectors on the radiator ventilator (A). Connect the temperature sensor (F) to the Type C connectors on the radiator (E). Connect the thermostat cable (E) to the wall socket.
4. Match the temperature sensor (C) with its adjustable magnets on the back of the radiator. Connect the sensor (C) to the wall socket.
5. On long radiators, connect additional ventilator (A) with the 50 cm connecting cable (B). Multiple ventilator (A) (up to 10) can be connected to one

- 5.1. Type of radiator can be used for this ventilator
 - Wider radiator 260mm
 - Single-sided radiator
 - Single-sided radiator
 - Connector
 - Other radiators
- 5.2. Connect the radiator to the radiator
 - Make sure that the radiator (A) is placed below the radiator plates and the magnets will automatically stick to the radiator.
 - Radiator width is 69mm
3. Identify a place where the radiator will be fixed, and connecting cable sets as follows. Attach the ventilator (A) to the bottom between the radiator plates with the adjustable magnets. The ventilator (A) can also be attached on top of the radiator and under a cover. NOTICE: Make sure the fans still have upwards!
3. Connect the thermostat cable (E) and temperature sensor (F) to the Type C connectors on the radiator ventilator (A). Connect the temperature sensor (F) to the Type C connectors on the radiator (E). Connect the thermostat cable (E) to the wall socket.
4. Match the temperature sensor (C) with its adjustable magnets on the back of the radiator. Connect the sensor (C) to the wall socket.
5. On long radiators, connect additional ventilator (A) with the 50 cm connecting cable (B). Multiple ventilator (A) (up to 10) can be connected to one

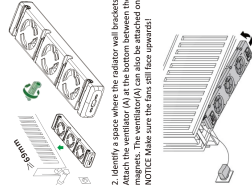

- 5.1. Type of radiator can be used for this ventilator
 - Wider radiator 260mm
 - Single-sided radiator
 - Single-sided radiator
 - Connector
 - Other radiators
- 5.2. Connect the radiator to the radiator
 - Make sure that the radiator (A) is placed below the radiator plates and the magnets will automatically stick to the radiator.
 - Radiator width is 69mm
3. Identify a place where the radiator will be fixed, and connecting cable sets as follows. Attach the ventilator (A) to the bottom between the radiator plates with the adjustable magnets. The ventilator (A) can also be attached on top of the radiator and under a cover. NOTICE: Make sure the fans still have upwards!
3. Connect the thermostat cable (E) and temperature sensor (F) to the Type C connectors on the radiator ventilator (A). Connect the temperature sensor (F) to the Type C connectors on the radiator (E). Connect the thermostat cable (E) to the wall socket.
4. Match the temperature sensor (C) with its adjustable magnets on the back of the radiator. Connect the sensor (C) to the wall socket.
5. On long radiators, connect additional ventilator (A) with the 50 cm connecting cable (B). Multiple ventilator (A) (up to 10) can be connected to one

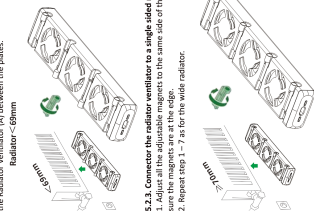

- 5.1. Type of radiator can be used for this ventilator
 - Wider radiator 260mm
 - Single-sided radiator
 - Single-sided radiator
 - Connector
 - Other radiators
- 5.2. Connect the radiator to the radiator
 - Make sure that the radiator (A) is placed below the radiator plates and the magnets will automatically stick to the radiator.
 - Radiator width is 69mm
3. Identify a place where the radiator will be fixed, and connecting cable sets as follows. Attach the ventilator (A) to the bottom between the radiator plates with the adjustable magnets. The ventilator (A) can also be attached on top of the radiator and under a cover. NOTICE: Make sure the fans still have upwards!
3. Connect the thermostat cable (E) and temperature sensor (F) to the Type C connectors on the radiator ventilator (A). Connect the temperature sensor (F) to the Type C connectors on the radiator (E). Connect the thermostat cable (E) to the wall socket.
4. Match the temperature sensor (C) with its adjustable magnets on the back of the radiator. Connect the sensor (C) to the wall socket.
5. On long radiators, connect additional ventilator (A) with the 50 cm connecting cable (B). Multiple ventilator (A) (up to 10) can be connected to one

- 5.2.5. For other radiators
 - Make the fan is vertical to the radiator fan. Put the radiator fan directly under the radiator.
 - Follow the steps of 5.2.1, steps 3, 7 to make the ventilator working.



6. How to Set the thermostat

Normally, the display shows the temperature detected by the temperature sensor if the temperature sensor is not plugged in or damaged (the display shows 0).
When the thermostat is not working, the display shows the current room temperature. The temperature on display screen flashes. Now the left key (WORK+) is for increasing the temperature and the right key (STOP?) is for decreasing the temperature, you may change the temperature by pushing the buttons continuously, stop pressing the buttons and the display will be blank. The thermostat will be set to the temperature interface of the temperature sensor. (Note: The initial WORK temperature is 32 °C. When the temperature sensed by the temperature sensor is 32 °C, the thermostat will enter the WORK mode (the display shows 32).
To adjust room temperature, the thermostat will enter the STOP mode (the display shows 0). The temperature on display screen flashes. Now the left key (WORK+) is for increasing the temperature and the right key (STOP?) is for decreasing the temperature, you may change the temperature by pushing the buttons continuously, stop pressing the buttons and the display will be blank. The thermostat will be set to the temperature interface of the temperature sensor. (Note: The initial STOP temperature is 32 °C. When the temperature sensed by the temperature sensor is 32 °C, the thermostat will enter the STOP mode (the display shows 0). The thermostat will enter the STOP mode and the fan will stop working.)

- 5.1. Type of radiator can be used for this ventilator
 - Wider radiator 260mm
 - Single-sided radiator
 - Single-sided radiator
 - Connector
 - Other radiators
- 5.2. Connect the radiator to the radiator
 - Make sure that the radiator (A) is placed below the radiator plates and the magnets will automatically stick to the radiator.
 - Radiator width is 69mm
3. Identify a place where the radiator will be fixed, and connecting cable sets as follows. Attach the ventilator (A) to the bottom between the radiator plates with the adjustable magnets. The ventilator (A) can also be attached on top of the radiator and under a cover. NOTICE: Make sure the fans still have upwards!
3. Connect the thermostat cable (E) and temperature sensor (F) to the Type C connectors on the radiator ventilator (A). Connect the temperature sensor (F) to the Type C connectors on the radiator (E). Connect the thermostat cable (E) to the wall socket.
4. Match the temperature sensor (C) with its adjustable magnets on the back of the radiator. Connect the sensor (C) to the wall socket.
5. On long radiators, connect additional ventilator (A) with the 50 cm connecting cable (B). Multiple ventilator (A) (up to 10) can be connected to one

9. Disposal

- 9.1. Disposal of the Product
 - The symbol on the product indicates that this product must not be treated as unsorted municipal waste, but must be collected separately (Disposal of the product must be in accordance with the applicable local regulations). The equipment if you live within the EU and in other European countries that operate separate collection systems for waste electrical and electronic equipment, please use these systems to dispose of the product. This helps to reduce the environmental and public health risks that could otherwise be caused by improper treatment of waste equipment. The recycling of materials contributes to the protection of the environment and public health.
- 9.2. Disposal of Packaging Waste
 - Please do not burn or throw away the packaging materials. The disposal of the packaging and packaging waste in the report manner you help to avoid possible hazards for the environment and public health.

Problem	Reason	Solution
The radiator ventilator (A) does not work.	Place the radiator ventilator (A) underneath the cover face (B) in the top of the radiator.	Follow the steps of 5.2.1, steps 3, 7 to make the ventilator working.
The radiator ventilator (A) does not work after the power is turned on.	Turn the radiator ventilator (A) around so that the two Type C connectors face the other direction or connect the power adapter to the wall socket.	
The radiator ventilator (A) does not work after the power is turned on.	Use an additional four-core cable to connect to the temperature sensor cable to the power.	
The radiator ventilator (A) does not work after the power is turned on.	Check the temperature sensor (F) is attached to the radiator (E) correctly. The temperature sensor (F) must be attached to the radiator (E) correctly. The temperature sensor (F) must be attached to the radiator (E) correctly. The temperature sensor (F) must be attached to the radiator (E) correctly.	
The radiator ventilator (A) does not work after the power is turned on.	Check the thermostat cable (E) is connected to the radiator ventilator (A) correctly. The thermostat cable (E) must be connected to the radiator ventilator (A) correctly. The thermostat cable (E) must be connected to the radiator ventilator (A) correctly.	
The radiator ventilator (A) does not work after the power is turned on.	Check the temperature sensor (C) is connected to the radiator (E) correctly. The temperature sensor (C) must be connected to the radiator (E) correctly. The temperature sensor (C) must be connected to the radiator (E) correctly.	
The radiator ventilator (A) does not work after the power is turned on.	Check the radiator ventilator (A) is placed below the radiator plates and the magnets will automatically stick to the radiator.	
The radiator ventilator (A) does not work after the power is turned on.	Check the radiator ventilator (A) is placed below the radiator plates and the magnets will automatically stick to the radiator.	
The radiator ventilator (A) does not work after the power is turned on.	Check the radiator ventilator (A) is placed below the radiator plates and the magnets will automatically stick to the radiator.	