

Philio Tech

Z-Wave Smart Dimmer Socket

SKU: PHIEPAD02







Quickstart

This is a secure Light Dimmer Socket for Europe. To run this device please connect it to your mains power supply. 1. Put your Z-Wave controller into inclusion mode by following the instructions provided by the controller manufacturer.

2. Pressing Include button of PAD02 three times within 2 seconds will enter inclusion mode.

Important safety information


Please read this manual carefully. Failure to follow the recommendations in this manual may be dangerous or may violate the law. The manufacturer, impor distributor and seller shall not be liable for any loss or damage resulting from failure to comply with the instructions in this manual or any other material. Use equipment only for its intended purpose. Follow the disposal instructions. Do not dispose of electronic equipment or batteries in a fire or near open heat sou

What is Z-Wave?

Z-Wave is the international wireless protocol for communication in the Smart Home. This device is suited for use in the region mentioned in the Quickstart s

Z-Wave ensures a reliable communication by reconfirming every message (two-way communication) and every mains powered node can act as a repeater for other nodes (meshed network) in case the receiver is not in direct wireless range of the transmitter.

This device and every other certified Z-Wave device can be used together with any other certified Z-Wave device regardless of brand and origin as long as both are suited for the same frequency range.

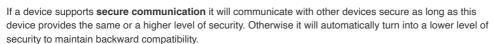

For more information about Z-Wave technology, devices, white papers etc. please refer to www.z-wave.info.



Product Description

PAD02 is an E27(EU)/ E26(US) Edison screw based lamp socket, which provides electrical connection to the E14(EU)/ E12(US) Edison screw based lamps support it in the lighting fixture. The use of socket allows lamps to be safely and conveniently replaced. You can On/Off the light by pressing the button brief pressing to control the brightness of dimmable lightbulb. This dimmer is a transceiver which is a security enabled device which based on Z-Wave Plus techniques. Wave Plus enabled devices displaying the Z-Wave Plus logo can also be used with it regardless of the manufacturer and can also be used in other manufa Wave enabled networks. Remote dim level control of the connected light is possible with other manufacturers wireless Controller. Since PAD02 supports Se Command Class, it can learn with a Secured enabled controller to fully utilize the device. Its functionality and supported command classes is identical when as a secure and non-secure device. Adding to Z- Wave Network In the front casing, there is an on/off button with LED indicator below which is used to switch off, dim level, or carries out add, remove, reset or association. When first power is applied, its LED flashes on and off alternately and repeatedly at 0.5 seco intervals. It implies that it has not been assigned a node ID and start auto inclusion. Auto Inclusion The function of auto inclusion will be executed as long a dimmer does not have Node ID and just connect the dimmer to main power. Note: Auto inclusion timeout is 2 minute during which the node information of e frame will be emitted once every several seconds. Unlike inclusion function as shown in the table below, the execution of auto inclusion is free from pressin On/Off button on the dimmer.

Prepare for Installation / Reset

Please read the user manual before installing the product.

In order to include (add) a Z-Wave device to a network it must be in factory default state. Please make sure to reset the device into factory default. You c

by performing an Exclusion operation as described below in the manual. Every Z-Wave controller is able to perform this operation however it is recommenc the primary controller of the previous network to make sure the very device is excluded properly from this network.

Reset to factory default

This device also allows to be reset without any involvement of a Z-Wave controller. This procedure should only be used when the primary controller is inope

- 1. Pressing Include button of PAD02 three times within 2 seconds will enter inclusion mode.
- 2. Within 1 second, press Include button of PAD02 again for 5 seconds.
- 3. IDs are excluded.

Safety Warning for Mains Powered Devices

ATTENTION: only authorized technicians under consideration of the country-specific installation guidelines/norms may do works with mains power. Prior to assembly of the product, the voltage network has to be switched off and ensured against re-switching.

Inclusion/Exclusion

On factory default the device does not belong to any Z-Wave network. The device needs to be **added to an existing wireless network** to communicate wi devices of this network. This process is called **Inclusion**.

Devices can also be removed from a network. This process is called **Exclusion**. Both processes are initiated by the primary controller of the Z-Wave netwo controller is turned into exclusion respective inclusion mode. Inclusion and Exclusion is then performed doing a special manual action right on the device.

Inclusion

Pressing Include button of PAD02 three times within 2 seconds will enter inclusion mode.

Exclusion

Pressing Include button of PAD02 three times within 2 seconds will enter exclusion mode.

Auto-Inclusion

Beside the standard inclusion this devices supports the so called **auto inclusion**. Right after powering up the device remains in inclusion state and can be (any) gateway without further actions on the device itself. The auto inclusion mode will time out after some time.

Product Usage

Manual dim level control:

To manually switch on the light, press and release the On/Off button shortly when the light is off. The light will dim from off to the level which was set before To manually switch off the light, press and release the On/Off button shortly when the light is on. To adjust the dim level, press and hold the On/Off button u desired dim level is achieved, then release.

LED Indication

To distinguish what mode the switch is in, view from the LED for identification.

Normal - Whenever we switch On and off of the PAD02 by On/Off button or RF command, the LED will lights up when switch on; whereas LED off when sw **No node ID** - Under normal operation, when the dimmer has not been allocated a node ID, the LED flashes on and off alternately at 2-second intervals. By On/Off button, it will stop flashing temporarily.

Learning - When PAD02 is in learning mode, LED flashes on and off alternately and repeatedly at 0.5 second intervals.



Types of lamps:

Bulb E14 up to max. 15W Dimmable LED illuminants max. 9W

Quick trouble shooting

Here are a few hints for network installation if things dont work as expected.

- 1. Make sure a device is in factory reset state before including. In doubt exclude before include.
- 2. If inclusion still fails, check if both devices use the same frequency.
- 3. Remove all dead devices from associations. Otherwise you will see severe delays.
- 4. Never use sleeping battery devices without a central controller.
- 5. Dont poll FLIRS devices.
- 6. Make sure to have enough mains powered device to benefit from the meshing

Association - one device controls an other device

Z-Wave devices control other Z-Wave devices. The relationship between one device controlling another device is called association. In order to control a di device, the controlling device needs to maintain a list of devices that will receive controlling commands. These lists are called association groups and they a related to certain events (e.g. button pressed, sensor triggers, ...). In case the event happens all devices stored in the respective association group will rece same wireless command wireless command, typically a 'Basic Set' Command.

Association Groups:

Group Number	Maximum Nodes	Description
1	5	Lifeline - The dimmer can be set to send reports to associated Z-Wave devices. It supports association group with one node support for Grouping 1. For group 1, the dimmer will report ALARM_REPORT, DEVICE_RESET_LOCALLY_NOTIFICATION and MULTILEVEL_SWITCH_REPORT.
2	5	When the On/Off status changes or the dim level is achieved manually, it will send BASIC_\$ command to group 2 nodes to make them unanimous.

Configuration Parameters

Z-Wave products are supposed to work out of the box after inclusion, however certain configuration can adapt the function better to user needs or unlock fu enhanced features.

IMPORTANT: Controllers may only allow configuring signed values. In order to set values in the range 128 ... 255 the value sent in the application shall be value minus 256. For example: To set a parameter to 200 it may be needed to set a value of 200 minus 256 = minus 56. In case of a two byte value the sar applies: Values greater than 32768 may needed to be given as negative values too.

Parameter 1: Dimmer Level Report mode

Whenever dimmer on/off state changes, it will send MULTILEVEL_SWITCH_REPORT to the nodes of group1. The default setting is Enable the function. Size: 1 Byte, Default Value: 1

Setting	Description	
0	Disable	
1	Show dimmer state	

Parameter 2: LED indication mode

1. Show dimmer Stateuff1aWhen dimmer is on, LED is on. When dimmer is off, LED is off. The default setting is Show dimmer State. 2. Show Night mode dimmer is on, LED is off. When dimmer is off, LED is on. 3. One flash mode: When dimmer on/off state changes, LED will light on one second and then off Size: 1 Byte, Default Value: 1

Setting	Description	
1	Show dimmer state	
2	Show night mode	
3	One flash mode	

Parameter 4: Restore dimmer state

Whenever the AC power return from lost, PAD02 will restore the switch state which could be Dimmer offu3001Last dimmer stateu3001Dimmer on. The definition is Last dimmer state.

Size: 1 Byte, Default Value: 1

Setting	Description	
0	Dimmer off	
1	Last dimmer state	
2	Dimmer on	

Technical Data

Dimensions	0.0680000x0.0830000x0.0270000 mm
Weight	51 gr
Hardware Platform	SD3502
EAN	4713698574406
IP Class	IP 20
Voltage	230V
Load	2A
Device Type	Light Dimmer Socket
Network Operation	Always On Slave
Z-Wave Version	6.51.09
Certification ID	ZC10-17045556
Z-Wave Product Id	0x013C.0x0005.0x0031
Z-Wave Scene Type	Scene
Color	White
Firmware Updatable	Updatable by Consumer by RF
Neutral Wire Required	ok
Frequency	Europe - 868,4 Mhz
Maximum transmission power	5 mW

Supported Command Classes

- Alarm
- Association Grp Info
- Association V2
- Basic
- Configuration
- Device Reset Locally
- Firmware Update Md V2
- Manufacturer Specific V2
- Powerlevel
- Scene Activation
- Scene Actuator Conf
- Security
- Switch Multilevel V2
- Version V2

• Zwaveplus Info V2

Controlled Command Classes

Basic

Explanation of Z-Wave specific terms

- Controller is a Z-Wave device with capabilities to manage the network. Controllers are typically Gateways, Remote Controls or battery operated wall controllers.
- Slave is a Z-Wave device without capabilities to manage the network. Slaves can be sensors, actuators and even remote controls.
- Primary Controller is the central organizer of the network. It must be a controller. There can be only one primary controller in a Z-Wave network.
- **Inclusion** is the process of adding new Z-Wave devices into a network.
- Exclusion is the process of removing Z-Wave devices from the network.
- Association is a control relationship between a controlling device and a controlled device.
- Wakeup Notification is a special wireless message issued by a Z-Wave device to announces that is able to communicate.
- Node Information Frame is a special wireless message issued by a Z-Wave device to announce its capabilities and functions.

(c) 2020 Z-Wave Europe GmbH, Antonstr. 3, 09337 Hohenstein-Ernstthal, Germany, All rights reserved, www.zwave.eu. The template is maintained by Z-Wave Europe GmbH, Support@zwave.eu. Last update of the product data: 2017-12-27 14:21:12