

Instructie en Gebruiksaanwijzing:

Plaats de dispenser op dusdanige manier dat deze in de ruimte sprayt en de spray niet neerdaalt op (kunststof) oppervlakten. De samenstelling van de spray kan een oplossend effect hebben op sommige soorten kunststof.

De Dispenser heeft functies voor het weergeven van de tijd en het instellen van de werktijd en het spray interval (van 1 tot 60 minuten).

Wanneer de dispenser op ON wordt gezet, gaat het led lampje in de eerste plaats rood licht knipperen, vervolgens groen, dan sprayt hij eenmaal en dan gaat hij in de werkstand. Als de Dispenser op OFF wordt gezet blijven alle instellingen staan en loopt de tijd door.

LED lampje: In de normale werkwijze is de led groen. Als het led lampje rood wordt en er komt een teken van een lege batterij te voorschijn met een frequentie van 0.5S, dit betekent dat de batterij vervangen moet worden. Als de teller van de spray op 3000 staat, gaat het led lampje 10 keer knipperen. Dit betekent dat de vulling vervangen moet worden.

Functies van de Toetsen.

Druk op de ronde knop om de kap van de dispenser te open en dan zie je 7 knoppen onder het LCD display.

1. RESET

Het geheugen te wissen en de oorspronkelijke instellingen herstellen.

2. SPRAY

Wanneer op de knop gedrukt wordt, spuit hij één keer na 6 keer knipperen van de LED, om te testen.

3. MODE

Wanneer op deze knop gedrukt wordt, komen de volgende instellingen één voor één langs:

START – STOP – SPRAY – INTERVAL – WEEK – HOUR – MIN

4. WEEK

Instelling voor de huidige week.

5. HOUR

Instelling voor de huidige tijd:(uur).

6. MIN

Instelling voor de huidige tijd:(minuten)

7. ON/OFF

Aan en uit knop

Gebruiksaanwijzing:

LET OP: Voor u de batterijen installeert, zorg ervoor dat de vulling geplaatst is.

1. Tijd instelling van de start en stop van de spray.

Toets 'MODE', tot er op de LCD "START" verschijnt, toets u HOUR en MIN voor de start tijd van de Dispenser.

Toets nogmaals 'MODE', tot er op de LCD "STOP" verschijnt, toets u HOUR en MIN voor het eind tijd van de Dispenser

2. Vernieuwen van de Spray teller

Toets 'MODE' tot er op de LCD "SPRAY" verschijnt, hier staan het totaal aantal spray aantallen.

Een volle vulling kan z'n 3000 keer sprayen. Als er twee keer op de ON/OFF knop drukt word de aantallen gereset.

3. Instellen van het spray interval.

Toets 'MODE' tot er op de LCD "INTERVAL" verschijnt, druk vervolgens op de "MIN" om de intervaltijd in te stellen. (1min – 60min)

4. Instellen van wekelijks werk modus.


Toets 'MODE' tot er op de LCD "WEEK" verschijnt, Toets dan "WEEK" om de gewenste setting in te stellen.

Er zijn drie verschillende instellingen waaruit u kunt kiezen:

1. Van maandag tot vrijdag (1-5)
2. Van maandag tot zaterdag (1-6)
3. Van maandag tot zondag (1-7)

5. Instellen van de tijd.

Toets 'MODE' tot er op de LCD "CLOCK" verschijnt. Toets dan "HOUR" en "MIN" om de tijd in te stellen. Toets daarna op "WEEK" om de dag in te stellen.

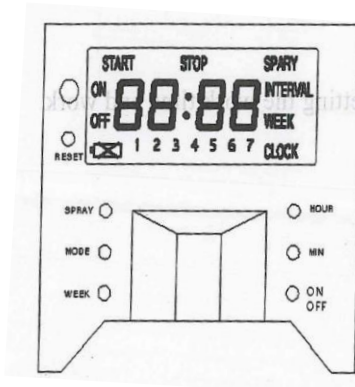

Instruction Manual

Place the dispenser in such way that it sprays in free space and the spray doesn't settle on (plastic) surfaces. The spray can have a dissolving effect on some types of plastics.

The dispenser has functions for displaying time and installing operating time and spray interval (1 to 60 minutes).

When the dispenser is turned ON, the LED-light will flash red, then green and than it sprays once and it activates working mode. When the dispenser is turned OFF, all settings will be saved and the time count continues.

LED-light: In standard working mode the LED is green. If the light turns red, a empty-battery-symbol will occur, this means the battery has to be changed. If the counting of sprays reaches 3000, the LED will flash 10 times. This means the refill has to be replaced.

Functions of the buttons

Press the round button to open the housing of the dispenser. You'll see 7 buttons beneath the LCD display.

1RESET

Clear the memory and reset to original settings.

2SPRAY

Meant for testing. When pressed the LED will flash 6 times and than the dispenser will spray once.

3MODE

When pressing this button, the following settings will pass by:

START – STOP – SPRAY – INTERVAL – WEEK – HOUR – MIN

4WEEK

Settings for the current week.

5HOUR


Settings for the current time:(hour).

6. MIN

Settings for current time:(minutes)

7. ON/OFF

On / off button

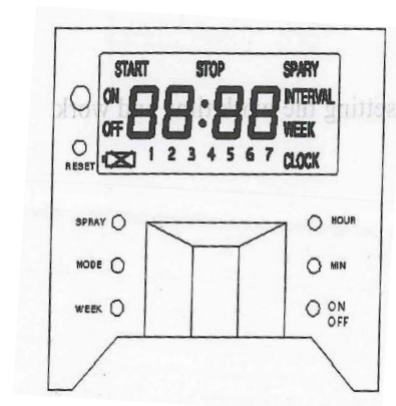

How to use:

ATTENTION: Before installing the batteries, make sure the refill is in place.

1. Time setting for starting and stopping the spray cyclus

Press 'MODE', untill the LCD shows "START", press HOUR and MIN for setting the starttime of the dispenser.

Press 'MODE' again untill the LCD shows "STOP", than press HOUR and MIN for setting the endtime of the dispenser.

2. Resetting the spray counts

Press 'MODE' untill the LCD shows "SPRAY", here are shown how many sprays are used. A new refill can spray about 3000 times. If the ON/OFF button is pressed twice, the number will be reset.

3. Setting the spray interval

Press 'MODE' untill the LCD shows "INTERVAL", than press "MIN" to set the interval time (1-60 minutes).

4. Setting a weekly work mode

Press 'MODE' untill the LCD shows "WEEK", than press "WEEK" to choose the right setting.

There are 3 settings to choose from:

1. Monday till Friday (1-5)
2. Monday till Saturday (1-6)
3. Monday till Sunday (1-7)

5. Setting the time

Press 'MODE' untill the LCD shows "CLOCK", than press "HOUR" and "MIN" to set the time. Than press "WEEK" to set the day of the week.