85.00 mm

105.00 mm

封底

封面

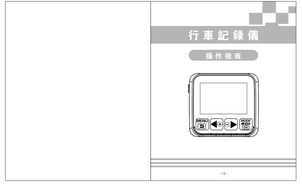

Key Operation

Menu operating instructions

Video recording Mode

In the Video recording Mode, long Press "Menu" button enter Setup interface.
Press "UP/Down" button to select specific parameters, Press "OK" to confirm and Press "Menu" to Exit.

1. Video Resolution

HD 1280*720
D1 720*480
VGA 640*480

2. Time Stamp

Off Selecting this option the Video file will not display date& time
Date Only Selecting this option the video file will only display date
Date & Time Selecting this option the video file will display date& time same time

3. REC Sound

Off Selecting this option will turn off recording sound
On Selecting this option will turn on recording sound

4. G-sensitivity

Setting G-sensor sensitivity, Off/ high/Medium/Low

Upon impact the video file name will be saved as EVE XXXX.AVI under normal circumstances the video file will be saved as REC XXXX.AVI you REC file will be overwritten by Looping recording.

5. Parking Mode

On selecting this option to turn on Parking mode function
Off selecting this option to turn off Parking mode function

6. Brightness

Selecting this option to setting Camera Brightness

Setting Mode

In the other Mode, long Press "Menu" button twice enter Setup interface
Press "UP/Down button to select specific parameters, Press "OK" to confirm and Press "Menu" to Exit.

1. Format

By selecting this option all the files will be deleted

2. Screensaver

Off Camera LCD will remain on
1 Min Camera will enter into screensaver mode after 1min without any operation
3 Min Camera will enter into screensaver mode after 3min without any operation

5 Min Camera will enter into screensaver mode after 5min without any operation
(Screensaver mode: Press any button to restore)

3. Beep

On Selecting this option will be turn on operation button sound
Off Selecting this option will be turn off operation button sound

4. Language

English/ French/ Deutsch/ Italiano/Spanish/Portuguese / T-Chinese/ S-Chinese/ Russian/ Turkish/Korean/Japan

5. Auto off

Off Camera will remain on
1 Min Camera will auto Power off after 1min without any operation
3 Min Camera will auto Power off after 3min without any operation
5 Min Camera will auto Power off after 5min without any operation

6. Sys. Reset

When encounter system error by selecting this option will restore to factory setting

7. Light Frequency

50HZ/60HZ

8. Date Input

1.) Press "Up" /Down button to select different Day/Month / Year setting
2.) Press "Mode" button jump next selection
3.) Press "REC" button Exit set

9. Time Zone

Cancel

Set Selecting this option to setting GPS Time Zone

10. Version

Check software version information

Playback Mode

Press "Mode" button change to Playback mode (Press "OK" button to playback the video file)

1.Press Up/Down button to select previous/next Video file

2.Press "OK" Play/Stop

1. Delete

Single Delete single file
All Delete all the files
Select Delete the selected file

2. Protect

All Protect all the files
Select Select file to be protected

3. Thumbnail /Execute

Selecting this option to selected thumbnail function

4. File List /Execute

Selecting this option to enter File List function

5. Volume

Adjust volume 1~8

GPS Function (Optional)

Connect the GPS module to the GPS slot ,start recording when GPS signal received
LCD will display "GPS" and the Camera date &time will be update

Playback GPS file
Open GPS Player (Displayer)

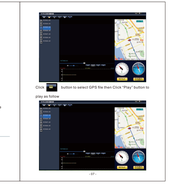

Click button to select GPS file then Click "Play" button to play on follow.

Camera Change

1)Camera 1 /Camera 2 change In the other mode. Press " Down " button can change the Camera 1 to Camera 2

2)Camera 2 /Camera 1 change In the other mode. Press " Up " button can change the Camera 1 to Camera 2

Loop Recording

When TF Card is Full the Camera will be auto deleted existing REC XXXX.AVI files .Upon impact the video file will be protected and saved as EVE XXXX.AVI these files will not be overwritten by normal Loop recording.

Flashlight function

Short Press on the Power button will turn on flashlight , Press again to turn off.

Parking Mode

When the Car ignition key is off after 3mins of non-operation the Camera will auto Switched into Parking mode and the video files will be VFR

Note :

1) According the need of customers this function is optional
2) In order to execute this parking mode option a special 16 pin cable is required to connect to the car battery or fuse box
3) Please seek technical advice from professional maintenance technicians in the auto service center in order to avoid damages due

to improper operation to the Camera

Wired Controller Function (Optional)

Camera is the Video recording Standby mode or recording mode, Press any key on the wired Controller ,Camera will auto saved Video file and Start to record a new file ,Press any key for 3 seconds TF Card is full only delete Normal Video recording file (REC_XXXX.AVI)

Data Backup

Remove the TF Card From the Camera insert into Card Reader and connect the Computer ,you may backup the files into your Computer.

Power on test

1.) First time use camera ,please use package accessory USB cable connect camera and PC ,Turn on camera power ,USB port ,power on test normal recording and other function.
2.) After power on test normal, can install and use

Charging the battery

1. Directly connect car cigarettes with the USB interface, to charge battery
2. Use a USB cable to connect the computer with the USB interface, to charge battery
3. Use the USB cable to connect charger for the USB interface, to charge battery

4. The battery level display shows the remaining power of the battery as below:

Low power Not fully charged fully charged

TF Card Installment

1. Insert the TF Card in the TF Card slot according to the indicative direction ,it may damage the TF Card
2. When removing the TF Card push in the TF Card and gently release to eject it.

Notice:

1 Make sure the TF Card are facing the right way ,if it is in the wrong direction ,it may damage the camera and TF Card
2 If the TF Card is incompatible with the camera, please try to insert again ,change other TF Card
3 Please use the high speed TF Card . (The Card have CLASS10 type)

Notice:
Remove the camera is in dead halt due to the improper operation, you can press reset
button to restore the camera will return to Normal

Technical specifications

LCD screen	2.0 TFT
Camera lens	120 degrees
Language	English/French/German/Russian/Turkish/Japan/ Portuguese/T-Chinese/ S-Chinese/ Italian/Spanish
Video format	AVI(MJPG)
Video Resolution	HD D1 VGA
Memory Card	Maximum 32GB
Microphone	Built-in
Frequency	50Hz/60Hz
Battery	Built-in
G-SENSOR	Support
Wired Controller	Optional
GPS	Optional
System	Windows 2000/XP/Vista/windows 7

Notice: Due the camera software update camera function has change, without prior notice

按鍵定義

菜單操作說明

錄像模式

在錄像待機狀態下，長按以"菜單"鍵，進入菜單設置選項，按上鍵下鍵調整選擇要設置的選項，按"確認"鍵進入菜單設置狀態。

1. 錄像分辨率設定

HD 1280*720
D1 720*480
VGA 640*480

2. 時間戳設定

關閉：錄像檔案時間戳被隱藏。
日期：錄像檔案只顯示日期。
時間和日期：錄像檔案顯示時間和日期。

3. 錄像聲音

開啓：錄像檔案聲音開啓。
關閉：錄像檔案聲音關閉。

4. 重力感應 (G-SENSOR)

設置重力感應的靈敏度，關閉/中/高

錄像過程中遇到意外碰撞，將會自動重命名檔案，檔案文件名為 (EVE XXXX.AVI)，其正常錄像檔案文件 (REC XXXX.AVI)在不開啓重錄時 (即關閉重力感應)之前將會被覆蓋。

5. 錄像重疊模式

開啓：錄像檔案重疊功能
關閉：錄像檔案重疊功能

6. 重疊設定

增加或小幅調小螢幕顯示亮度

系統設置

在錄像待機狀態下，長按以"菜單"鍵進入菜單設置選項，按上鍵下鍵調整選擇要設置的選項，按"確認"鍵進入菜單設置狀態。

1. 格式化

TF 卡格式化 (選擇"是的"，即可格式化)。

2. 屏保模式

關：螢幕常開狀態下，螢幕長時間開啓
1分鐘：螢幕常開狀態下，螢幕1分鐘後關閉螢幕
3分鐘：螢幕常開狀態下，螢幕3分鐘後關閉螢幕
5分鐘：螢幕常開狀態下，螢幕5分鐘後關閉螢幕
(屏保模式下，任意按一個按鍵，即會重回螢幕)

3. 蜂音

開啓：按鍵時發出蜂音
關閉：按鍵時無蜂音

4. 語言設置

英語/法語/德語/意大利語/西班牙語/葡萄牙語/ 繁體中文/ 簡體中文/俄語/土耳其語/韓語/日語

5. 自動關機

關：不關機狀態下，螢幕不會自動關機
1分鐘：在無操作狀態下，螢幕1分鐘後自動關機
3分鐘：在無操作狀態下，螢幕3分鐘後自動關機
5分鐘：在無操作狀態下，螢幕5分鐘後自動關機

6. 重置系統

當出現意外錯誤，可以選擇此項重新恢復出廠設置

7. 光頻

50Hz/60Hz

8. 輸入日期

1.) 選擇 (日期) 中 (月) 或 (年) 的設置型式
2.) 選擇完成 "月/年" 後，按下一個設置
3.) 完成後，按 "確認" 鍵退出

9. 時區

設置GPS時區

10. 版本

檢查機器軟件版本信息

回放模式

在錄像待機狀態下，按"確認"鍵，進入回放模式后 "確認" 鍵選擇要回放的錄像文件
(選擇 "上" 鍵、"下" 鍵選擇錄像檔案)
(選擇 "確認" 鍵重新回放)

1. 刪除

單檔：刪除當檔
全部：刪除所有文件至原狀態
選擇：選擇要刪除的文件

2. 保護

單檔：保護當檔
全部：保護所有文件至原狀態
選擇：選擇要保護的文件

3. 縮圖：執行

4. File List: 執行

5. 音量

調節回放音量數值 0~8

GPS 模式 (需選配錄像)

連接外部GPS模塊和錄像的USB接口，直接進入USB接口的錄像檔案直上的GPS播放器。

直接開啓此檔案即可進行播放軌道和資料的顯

回放模式的GPS文件
打開GPS播放器Player

打開 AcDavis 選項

點擊 Open 選擇要播放的檔案



錄像模式

在錄像待機狀態下，按"確認"鍵，進入菜單設置選項，按上鍵下鍵調整選擇要設置的選項，按"確認"鍵進入菜單設置狀態。

1. 錄像分辨率設定

HD 1280*720
D1 720*480
VGA 640*480

2. 時間戳設定

關閉：錄像檔案時間戳被隱藏。
日期：錄像檔案只顯示日期。
時間和日期：錄像檔案顯示時間和日期。

3. 錄像聲音

開啓：錄像檔案聲音開啓。
關閉：錄像檔案聲音關閉。

4. 重力感應 (G-SENSOR)

設置重力感應的靈敏度，關閉/中/高

錄像過程中遇到意外碰撞，將會自動重命名檔案，檔案文件名為 (EVE XXXX.AVI)，其正常錄像檔案文件 (REC XXXX.AVI)在不開啓重錄時 (即關閉重力感應)之前將會被覆蓋。

5. 錄像重疊模式

開啓：錄像檔案重疊功能
關閉：錄像檔案重疊功能

6. 重疊設定

增加或小幅調小螢幕顯示亮度

系統設置

在錄像待機狀態下，按"菜單"鍵進入菜單設置選項，按上鍵下鍵調整選擇要設置的選項，按"確認"鍵進入菜單設置狀態。

1. 格式化

TF 卡格式化 (選擇 "是的" 即可格式化)。

2. 屏保模式

關：螢幕常開狀態下，螢幕長時間開啓
1分鐘：螢幕常開狀態下，螢幕1分鐘後關閉螢幕
3分鐘：螢幕常開狀態下，螢幕3分鐘後關閉螢幕
5分鐘：螢幕常開狀態下，螢幕5分鐘後關閉螢幕
(屏保模式下，任意按一個按鍵，即會重回螢幕)

3. 蜂音

開啓：按鍵時發出蜂音
關閉：按鍵時無蜂音

4. 語言設置

英語/法語/德語/意大利語/西班牙語/葡萄牙語/ 繁體中文/ 簡體中文/俄語/土耳其語/韓語/日語

5. 自動關機

關：不關機狀態下，螢幕不會自動關機
1分鐘：在無操作狀態下，螢幕1分鐘後自動關機
3分鐘：在無操作狀態下，螢幕3分鐘後自動關機
5分鐘：在無操作狀態下，螢幕5分鐘後自動關機

6. 重置系統

當出現意外錯誤，可以選擇此項重新恢復出廠設置

7. 光頻

50Hz/60Hz

8. 輸入日期

1.) 選擇 (日期) 中 (月) 或 (年) 的設置型式
2.) 選擇完成 "月/年" 後，按下一個設置
3.) 完成後，按 "確認" 鍵退出

9. 時區

設置GPS時區

10. 版本

檢查機器軟件版本信息

回放模式

在錄像待機狀態下，按"確認"鍵，進入回放模式后 "確認" 鍵選擇要回放的錄像文件
(選擇 "上" 鍵、"下" 鍵選擇錄像檔案)
(選擇 "確認" 鍵重新回放)

1. 刪除

單檔：刪除當檔
全部：刪除所有文件至原狀態
選擇：選擇要刪除的文件

2. 保護

單檔：保護當檔
全部：保護所有文件至原狀態
選擇：選擇要保護的文件

3. 縮圖：執行

4. File List: 執行

5. 音量

調節回放音量數值 0~8

GPS 模式 (需選配錄像)

連接外部GPS模塊和錄像的USB接口，直接進入USB接口的錄像檔案直上的GPS播放器。

直接開啓此檔案即可進行播放軌道和資料的顯

回放模式的GPS文件
打開GPS播放器Player

打開 AcDavis 選項

點擊 Open 選擇要播放的檔案

錄像模式

在錄像待機狀態下，按"確認"鍵，進入菜單設置選項，按上鍵下鍵調整選擇要設置的選項，按"確認"鍵進入菜單設置狀態。

1. 錄像分辨率設定

HD 1280*720
D1 720*480
VGA 640*480

2. 時間戳設定

關閉：錄像檔案時間戳被隱藏。
日期：錄像檔案只顯示日期。
時間和日期：錄像檔案顯示時間和日期。

3. 錄像聲音

開啓：錄像檔案聲音開啓。
關閉：錄像檔案聲音關閉。

4. 重力感應 (G-SENSOR)

設置重力感應的靈敏度，關閉/中/高

錄像過程中遇到意外碰撞，將會自動重命名檔案，檔案文件名為 (EVE XXXX.AVI)，其正常錄像檔案文件 (REC XXXX.AVI)在不開啓重錄時 (即關閉重力感應)之前將會被覆蓋。

5. 錄像重疊模式

開啓：錄像檔案重疊功能
關閉：錄像檔案重疊功能

6. 重疊設定

增加或小幅調小螢幕顯示亮度

系統設置

在錄像待機狀態下，按"菜單"鍵進入菜單設置選項，按上鍵下鍵調整選擇要設置的選項，按"確認"鍵進入菜單設置狀態。

1. 格式化

TF 卡格式化 (選擇 "是的" 即可格式化)。

2. 屏保模式

關：螢幕常開狀態下，螢幕長時間開啓
1分鐘：螢幕常開狀態下，螢幕1分鐘後關閉螢幕
3分鐘：螢幕常開狀態下，螢幕3分鐘後關閉螢幕
5分鐘：螢幕常開狀態下，螢幕5分鐘後關閉螢幕
(屏保模式下，任意按一個按鍵，即會重回螢幕)

3. 蜂音

開啓：按鍵時發出蜂音
關閉：按鍵時無蜂音

4. 語言設置

英語/法語/德語/意大利語/西班牙語/葡萄牙語/ 繁體中文/ 簡體中文/俄語/土耳其語/韓語/日語

5. 自動關機

關：不關機狀態下，螢幕不會自動關機
1分鐘：在無操作狀態下，螢幕1分鐘後自動關機
3分鐘：在無操作狀態下，螢幕3分鐘後自動關機
5分鐘：在無操作狀態下，螢幕5分鐘後自動關機

6. 重置系統

當出現意外錯誤，可以選擇此項重新恢復出廠設置

7. 光頻

50Hz/60Hz

8. 輸入日期

1.) 選擇 (日期) 中 (月) 或 (年) 的設置型式
2.) 選擇完成 "月/年" 後，按下一個設置
3.) 完成後，按 "確認" 鍵退出

9. 時區

設置GPS時區

10. 版本

檢查機器軟件版本信息

TF 卡的安裝和取出

1. 按照指示的方向將TF卡插入卡槽直到TF卡固定在卡槽處上
2. 取出TF卡時，請輕輕推TF卡TF，卡TF卡會自動彈出TF卡

注意：

1. 請注意TF卡插入的方向，若錯誤插入可能會損壞錄像機和TF卡
2. 如TF卡無法識別卡片，請重新格式化TF卡重試
3. 請使用高速TF卡 (TF卡的速度為CLASS10類型)

備注：
錄像機在意外錯誤的情況下重行啟動恢復出廠設置，可能會出現錄像機死機，未開電情況之發生。

技術參數

液晶屏幕	2.0英寸屏
鏡頭	120度
語言選擇	英語/法語/德語/意大利語/西班牙語/葡萄牙語/繁體中文/簡體中文/俄語/土耳其語/韓語/日語
錄像視頻格式	AVI (MJPG)
錄像分辨率	HD D1 VGA
卡容量	TF 卡 最大支持32GB
麥克風/喇叭	內置
光頻	50Hz/60Hz
電池	內置聚合物電池
重力感應	支持
GPS	支持
此機需要	Windows 2000/XP/Vista/Windows 7

注意：由于軟件更新錄像系統有所改動，恕不另行通知