

SIZE SPECS.


MEN

HOW TO MEASURE

BOMBER:

Width: measure from the left to the right under the arms (A)

Length: measure from the highest shoulder point to the bottom of the bomber (B)

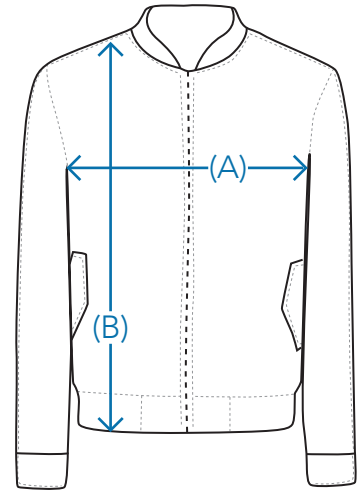

SIZE	S	M	L	XL	XXL
LENGTH (A)	59	61,5	64	66,5	69
LENGTH (B)	68,5	70,5	72,5	74,5	76,5