

## INSTALLATION INSTRUCTIONS



1. Remove rear axle lock nut & axle.



2. Remove stock OEM axle blocks.



3. Please retain the original screws.



4. Adjust the screw spacer & nut in the correct position as shown.



5. Install screws in the correct position as shown.




6. Assemble screws with chain adjusters in a proper way.



7. Install left & right side chain adjuster, tighten #2 original screws.



8. Reinstall rear axle & lock nut, adjust drive chain to factory specs with left & right side chain adjuster knobs. Tighten and lock all bolts as shown. (Please lock & tighten axle lock nut and adjust the torque from 95N.M-110N.M).

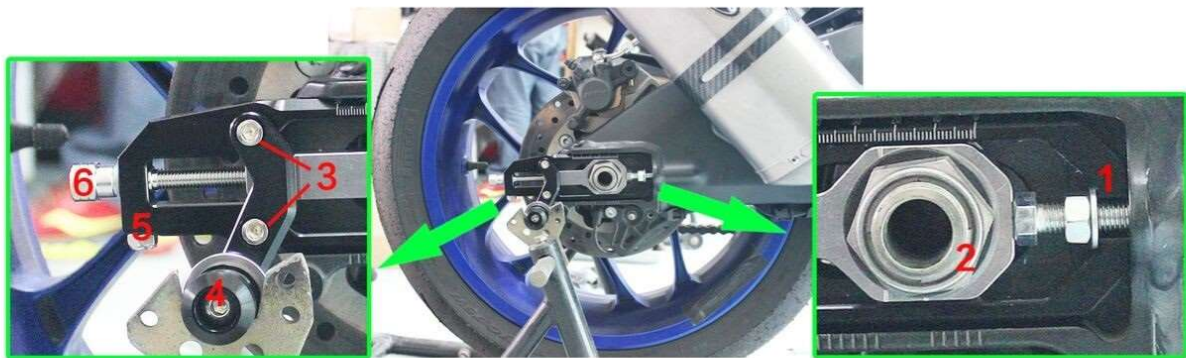

9. Please make sure that all bolts and nuts have been tightened and locked, (#1,2,3,4,5,6).



10. Respect and check all bolts & drive chain for looseness, perform final inspection, road test.