















ASSEMBLY INSTRUCTION

Maranza curtain 340cm

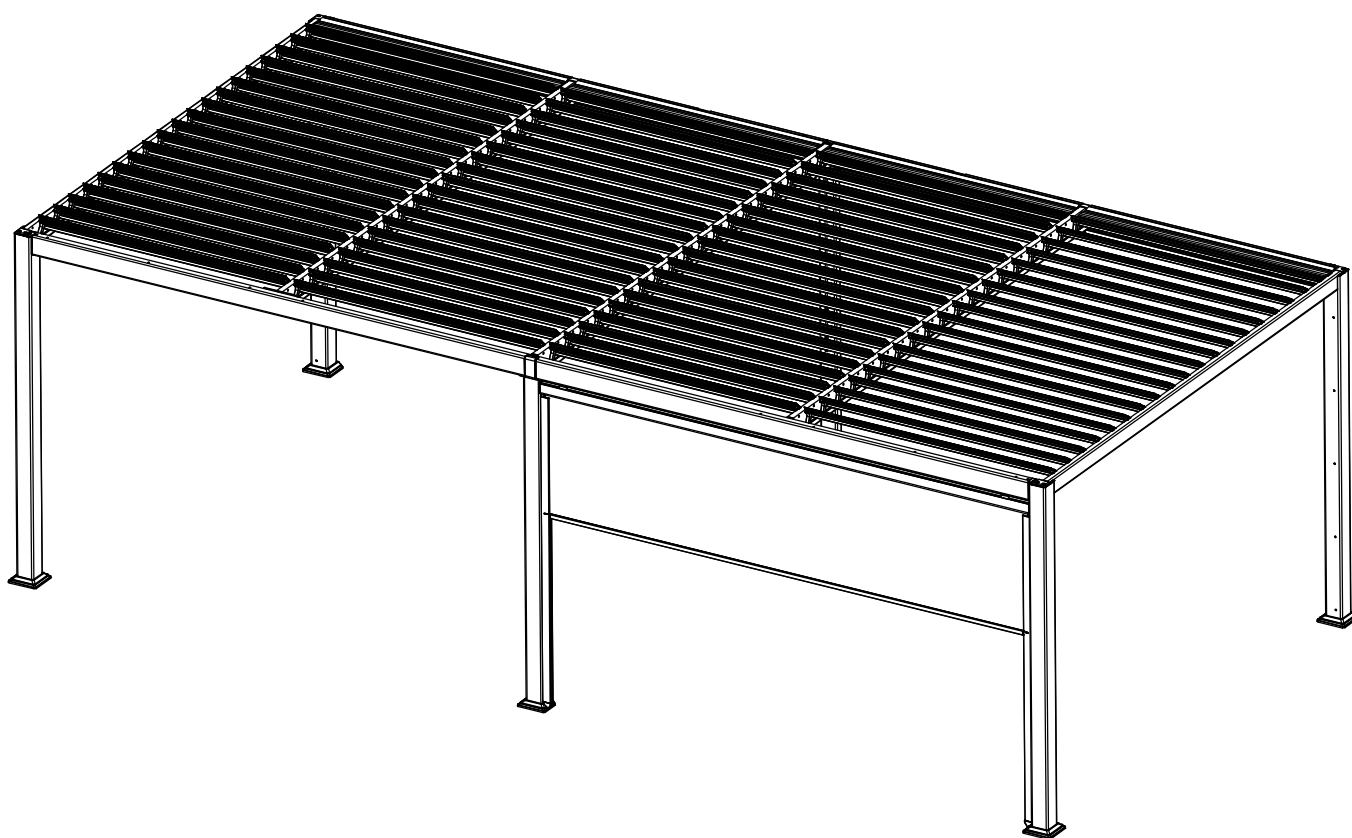


REF	PCE	PIECE	QTY	DIM
	E		2	
	K1		1	
	N		2	
	Q		2	
	S2	 M6*20	8+1	
	S6	 M6*25	10+1	
	S7	 M6*12	18+2	
	S8	 M6*15	2	
	T1	 Width:4	2	
	T4	 Width:3	2	


STEP 1

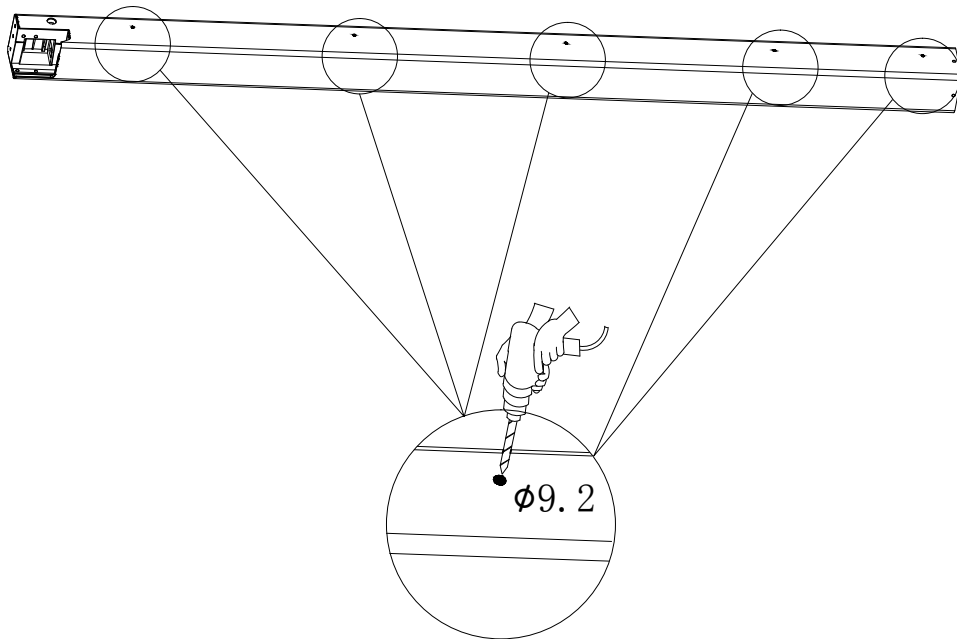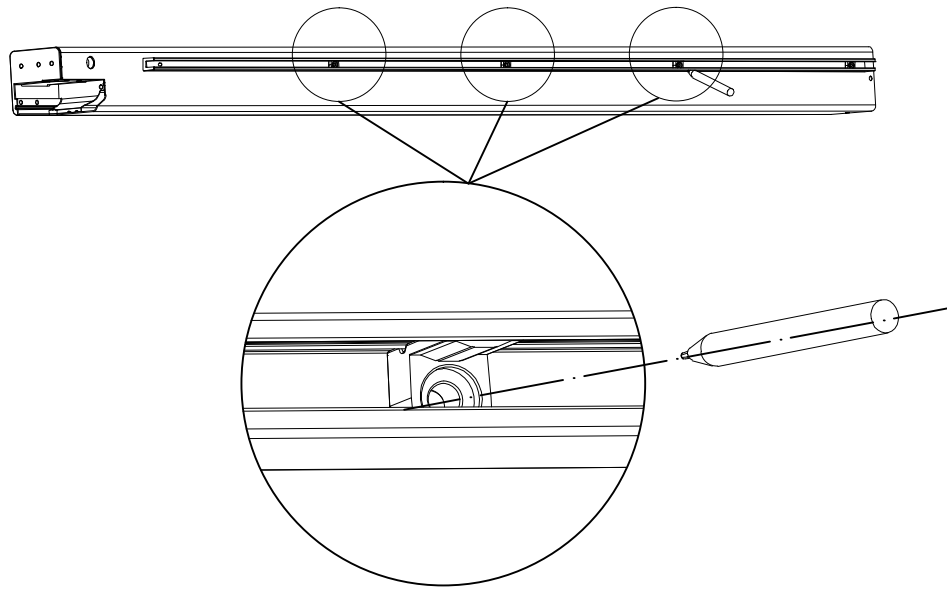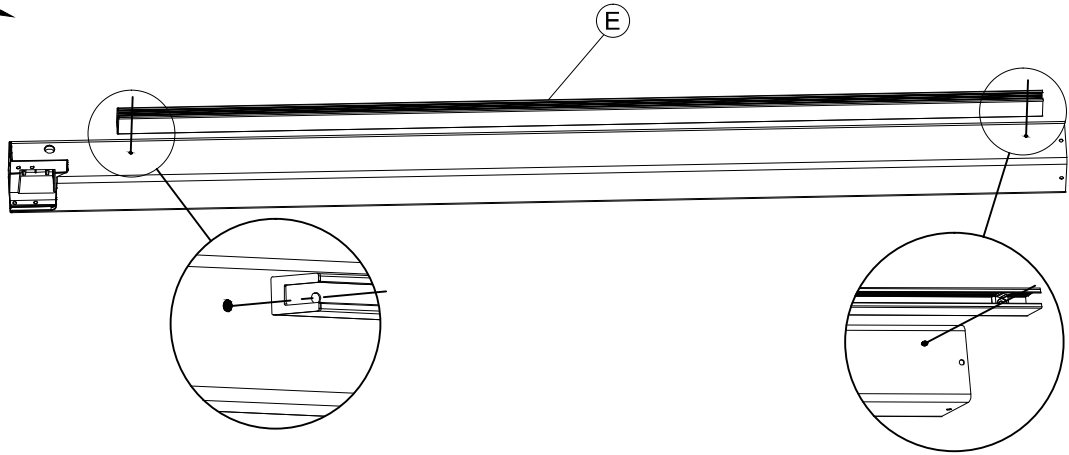




STEP 2

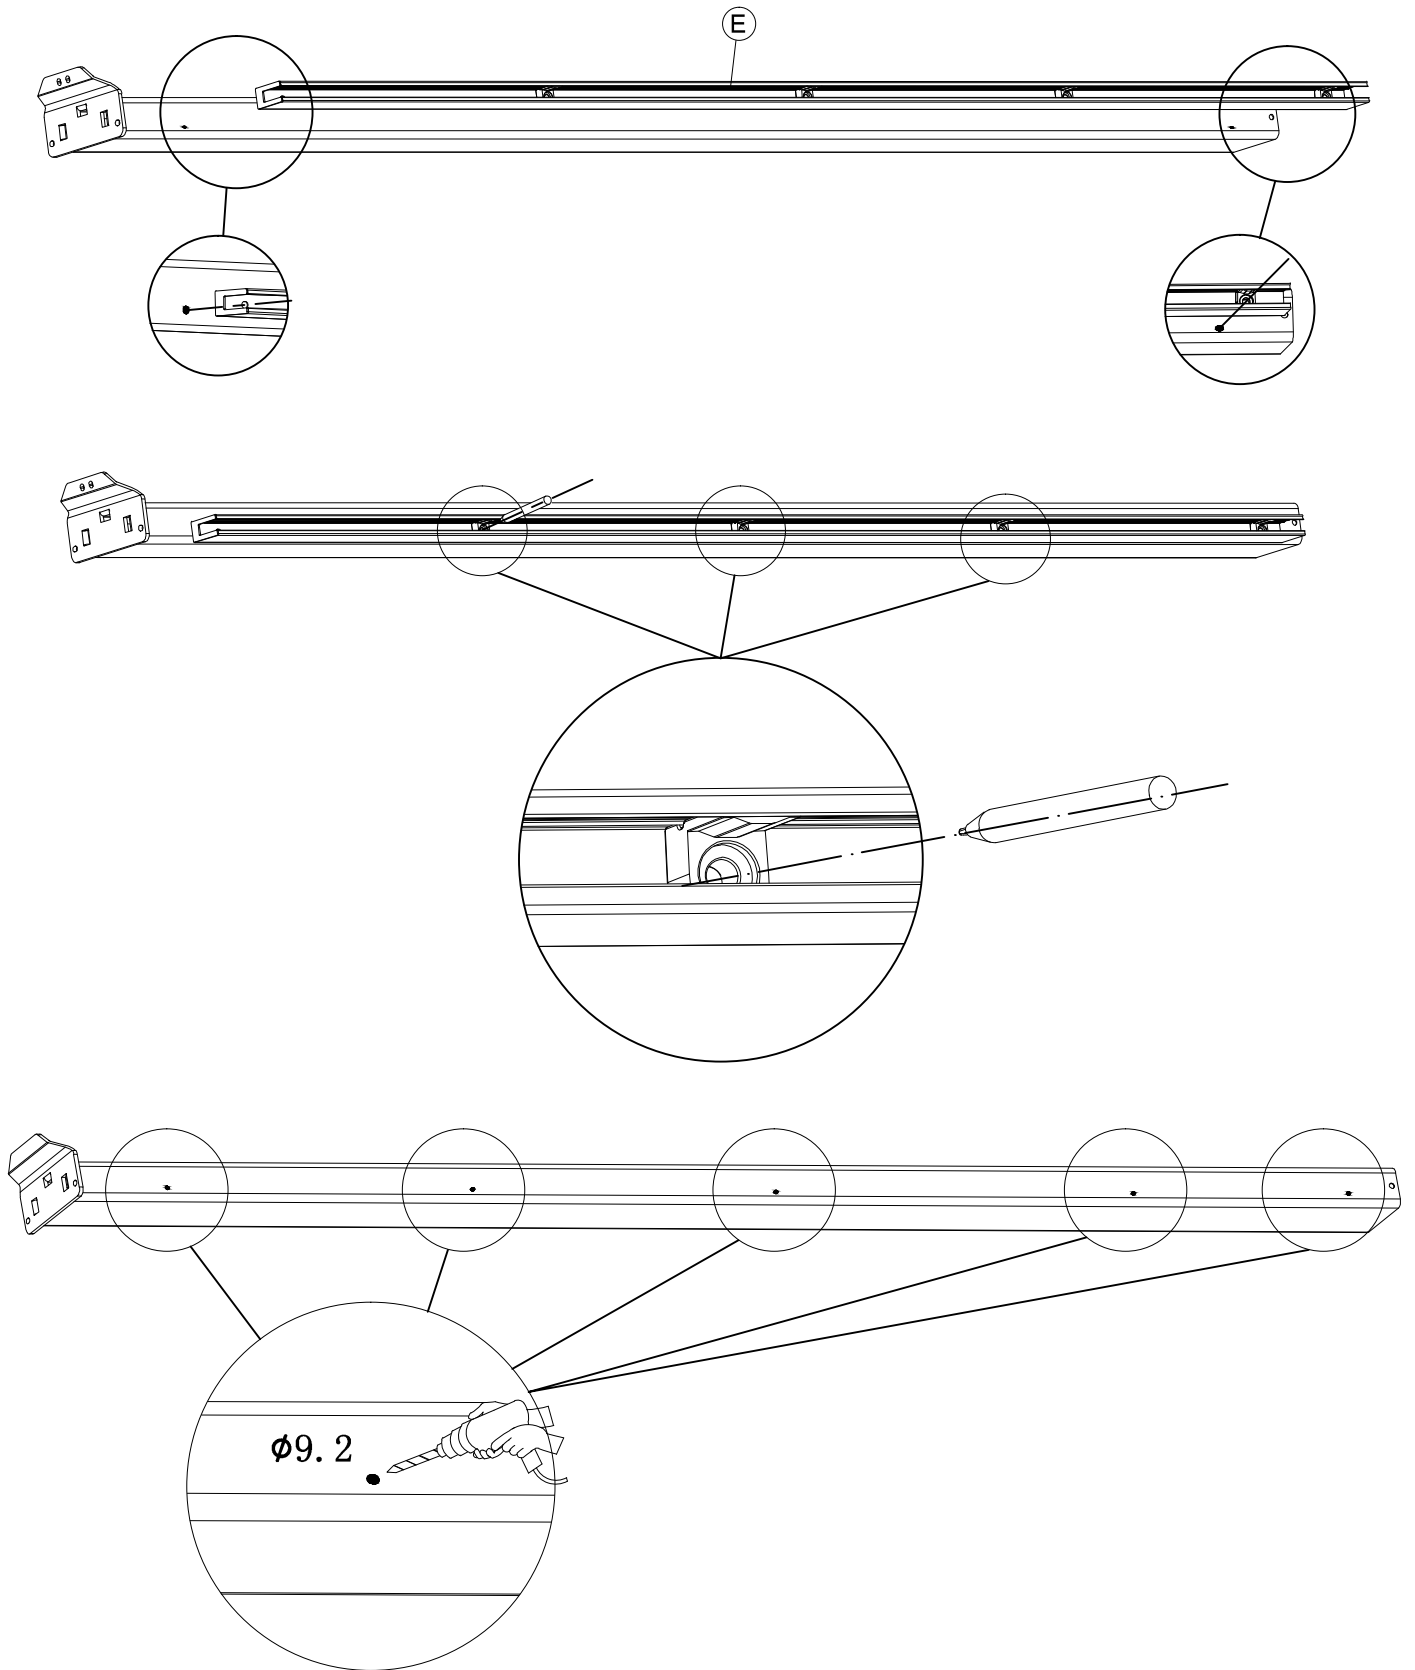


STEP 3



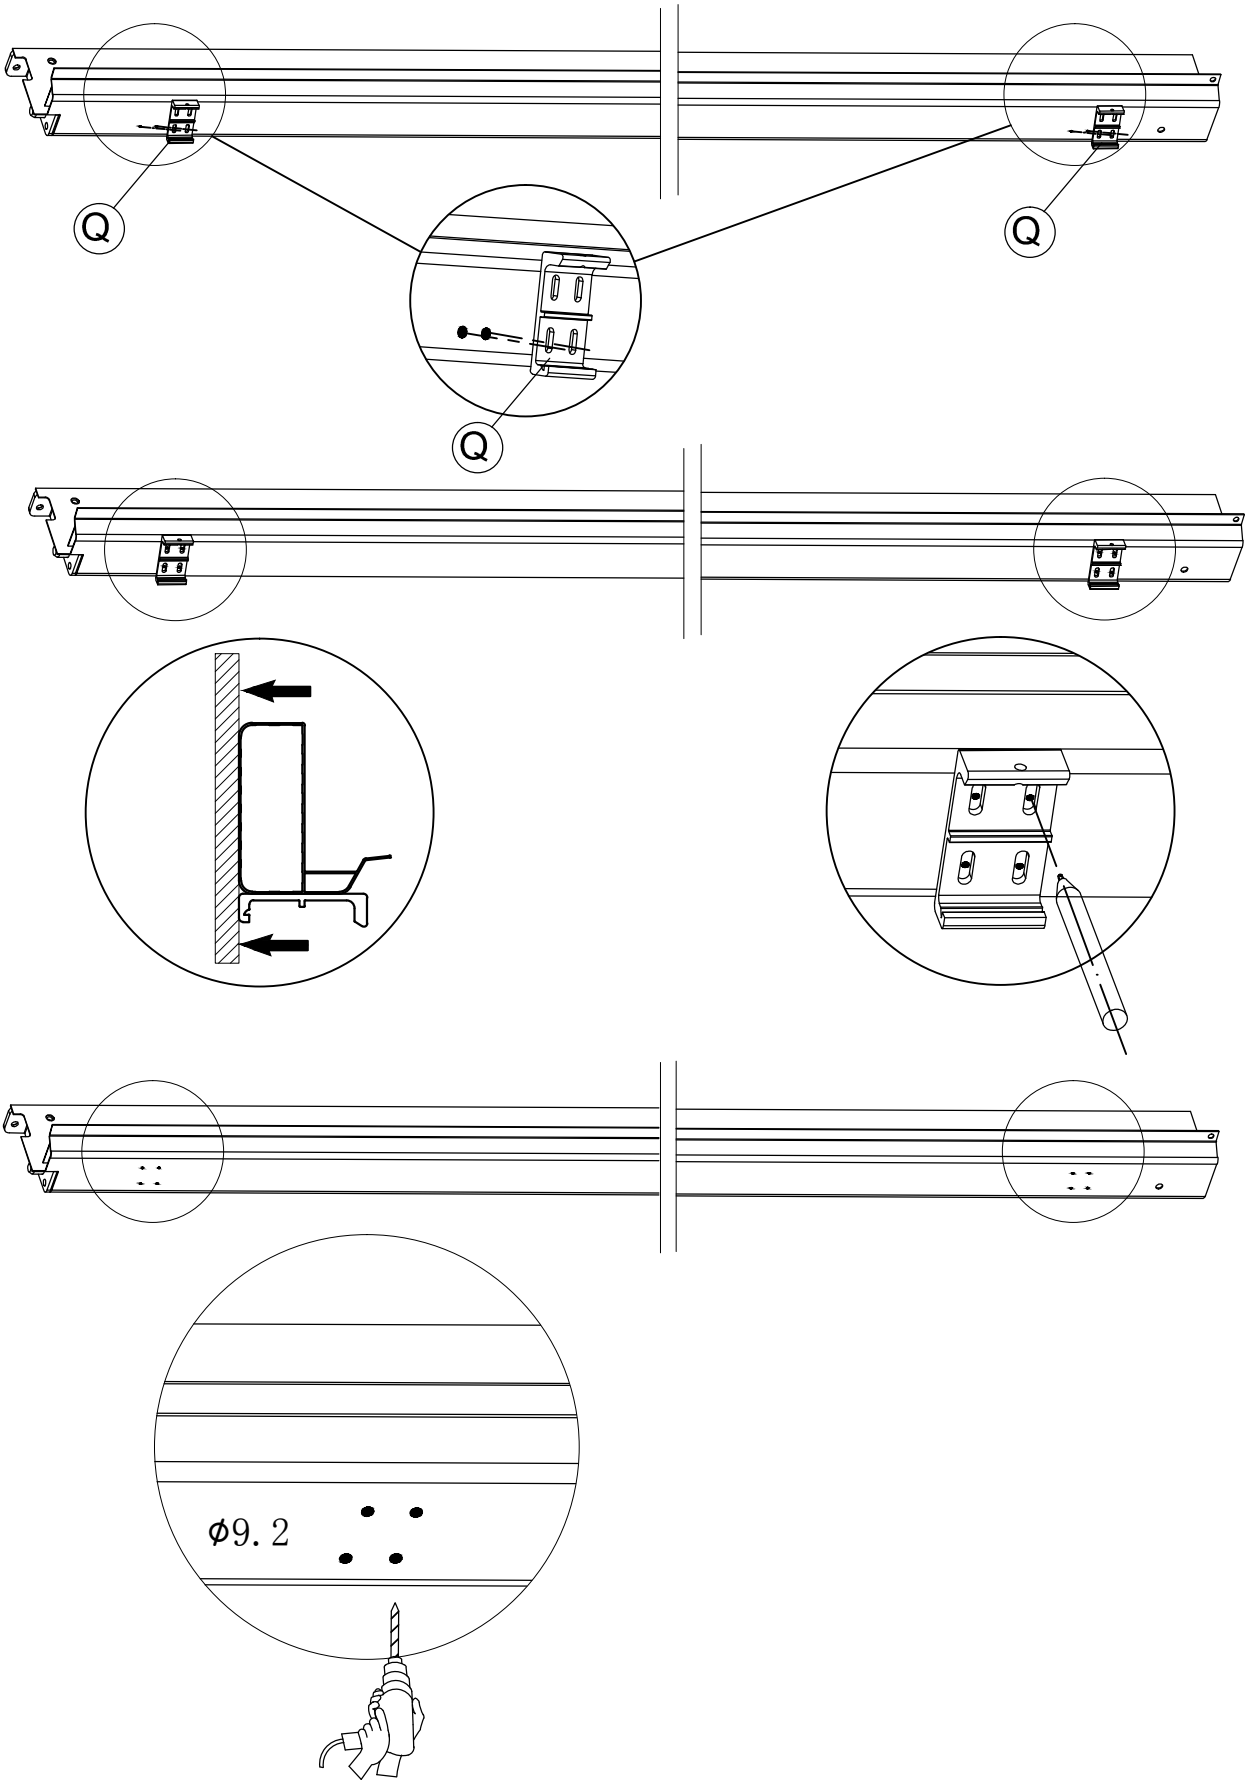



STEP 4

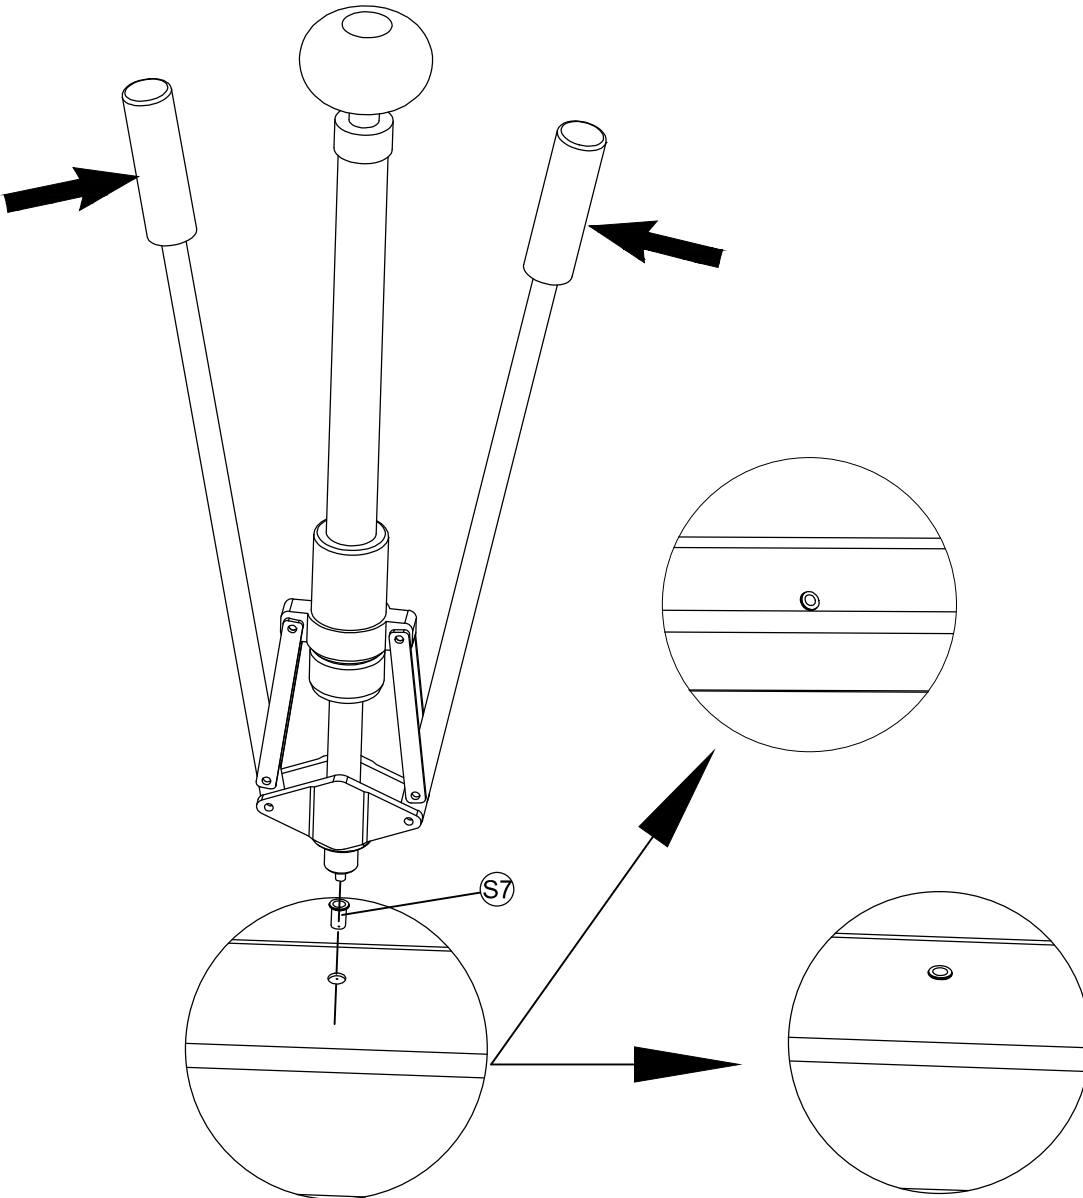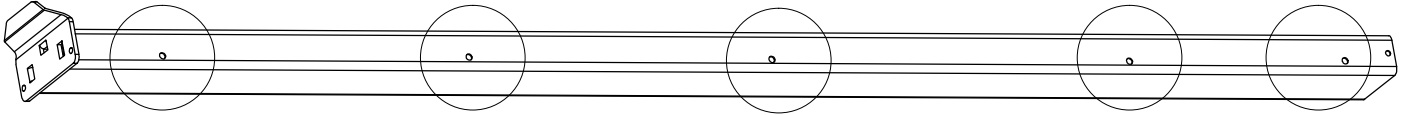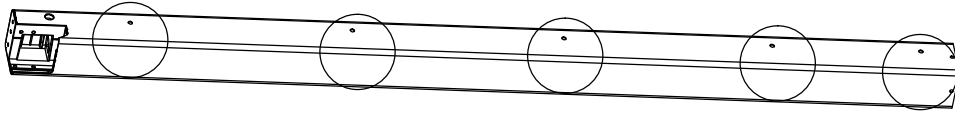








 M6*12 S7 (10X)

STEP 5

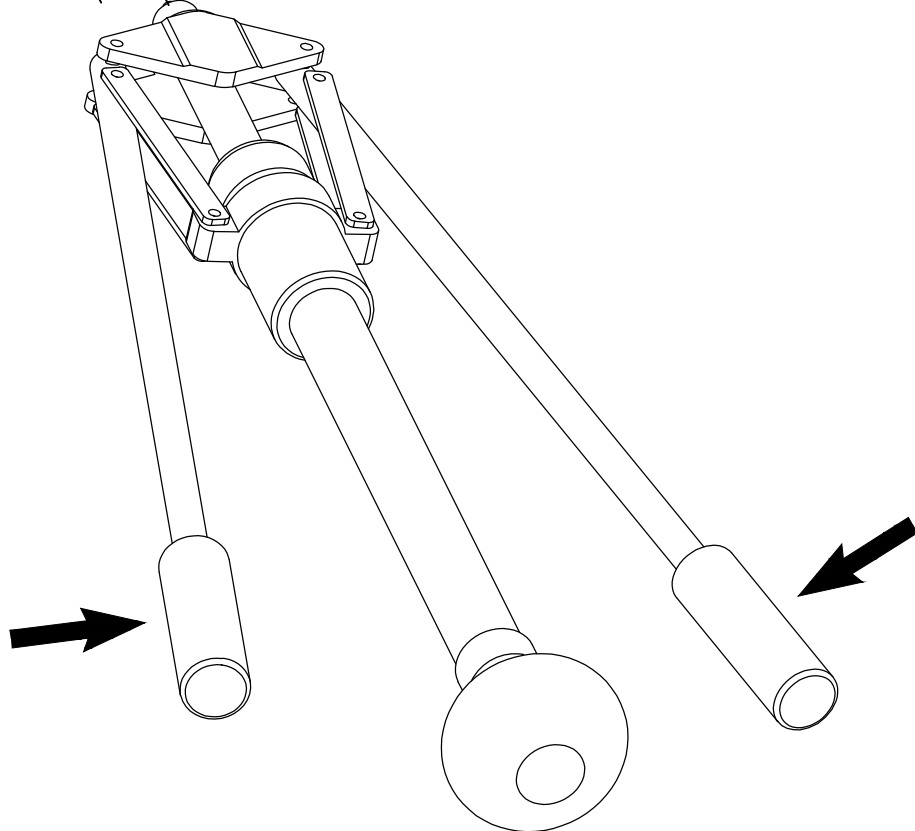
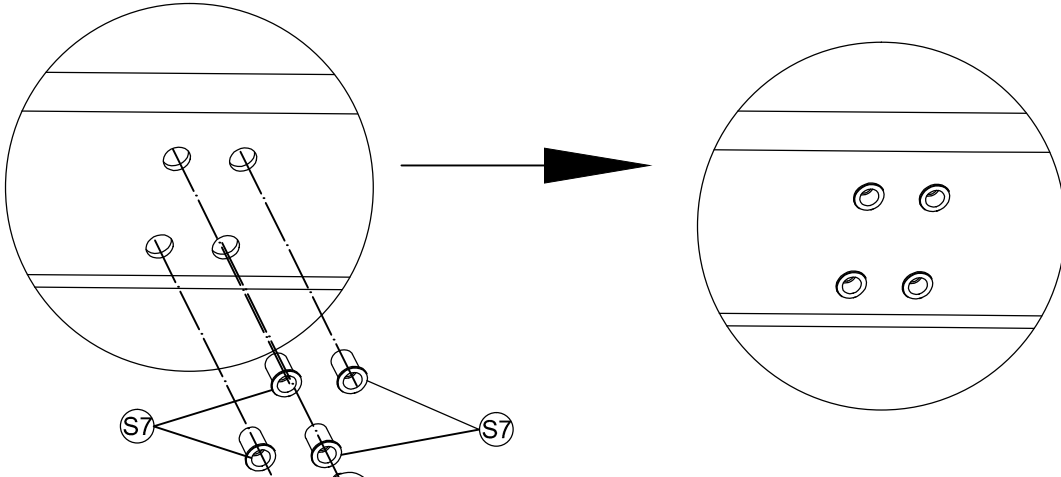
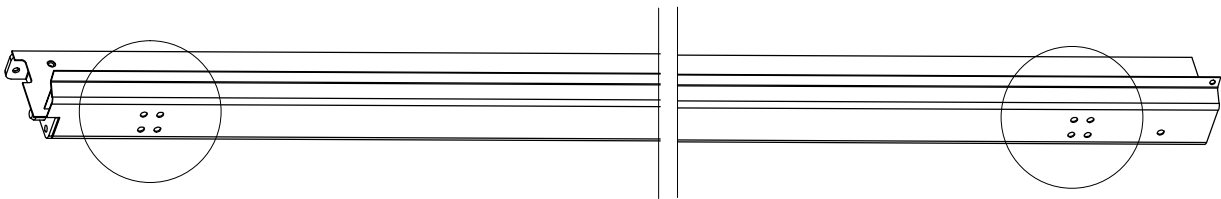


 M6*12 S7 (8X)


STEP 6

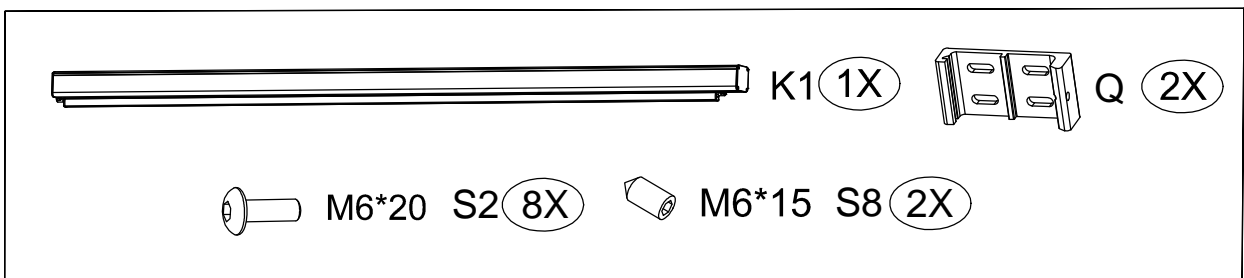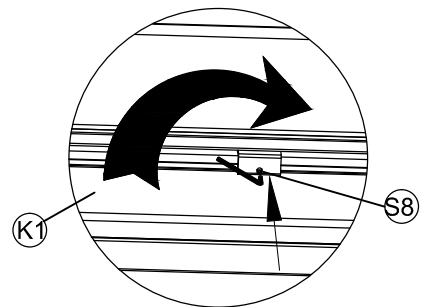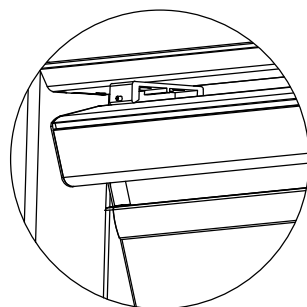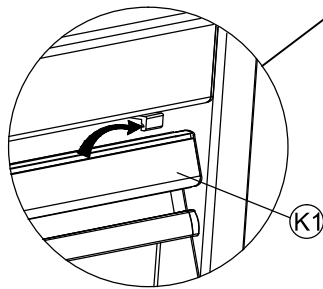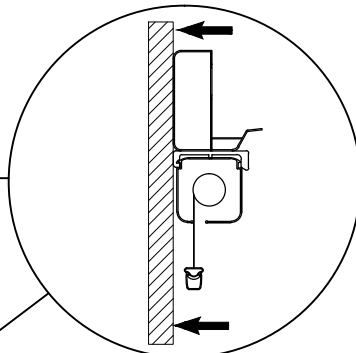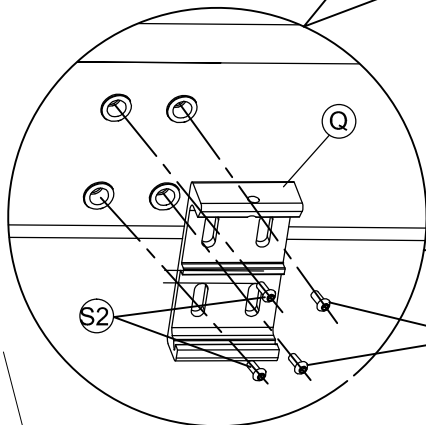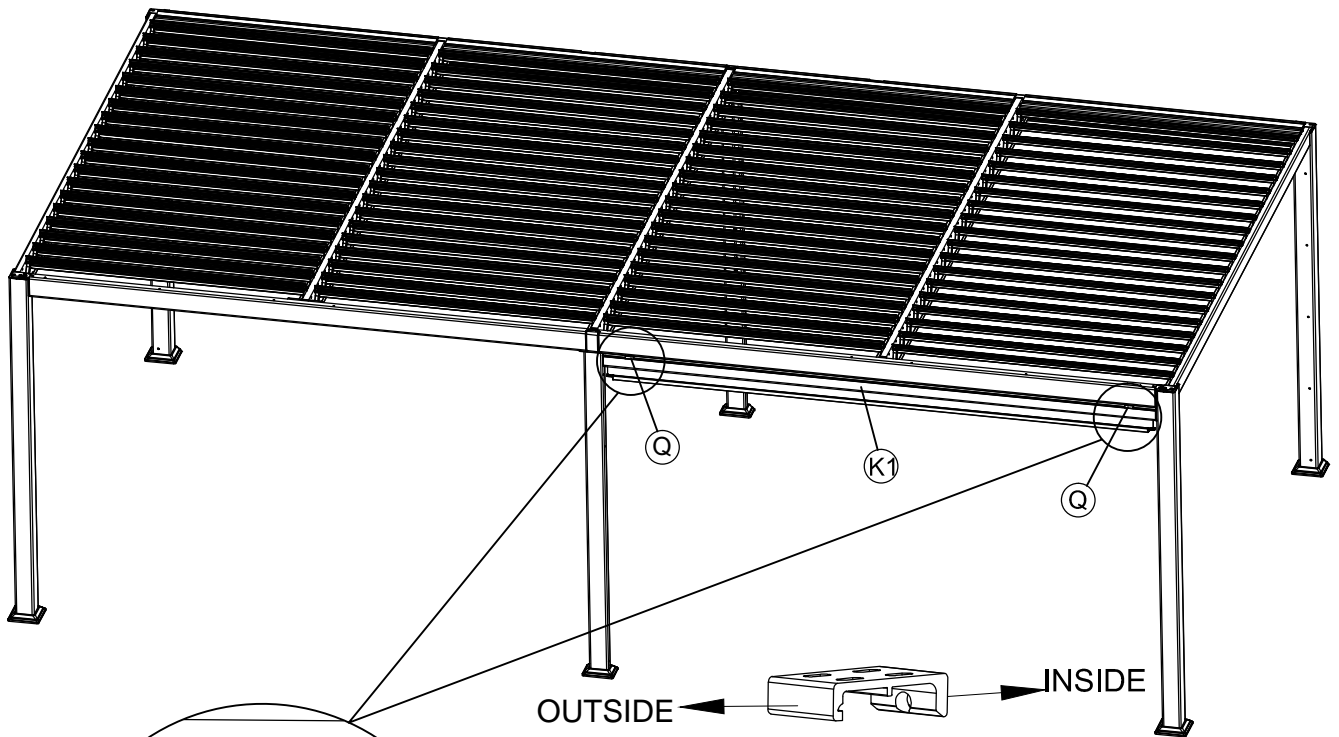


STEP 7

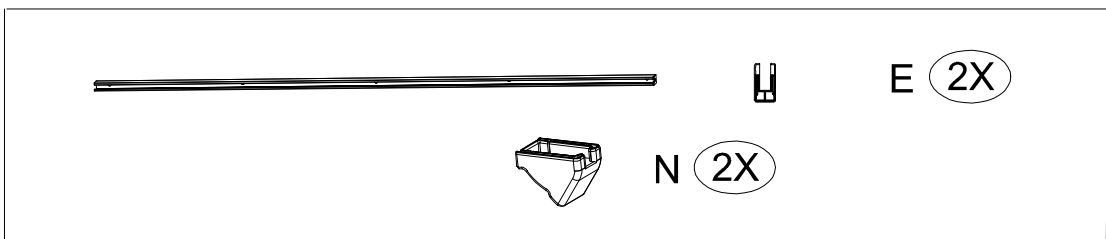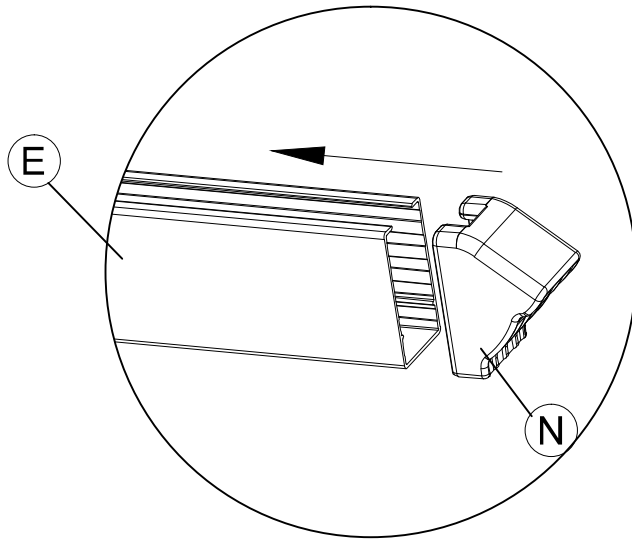

STEP 8

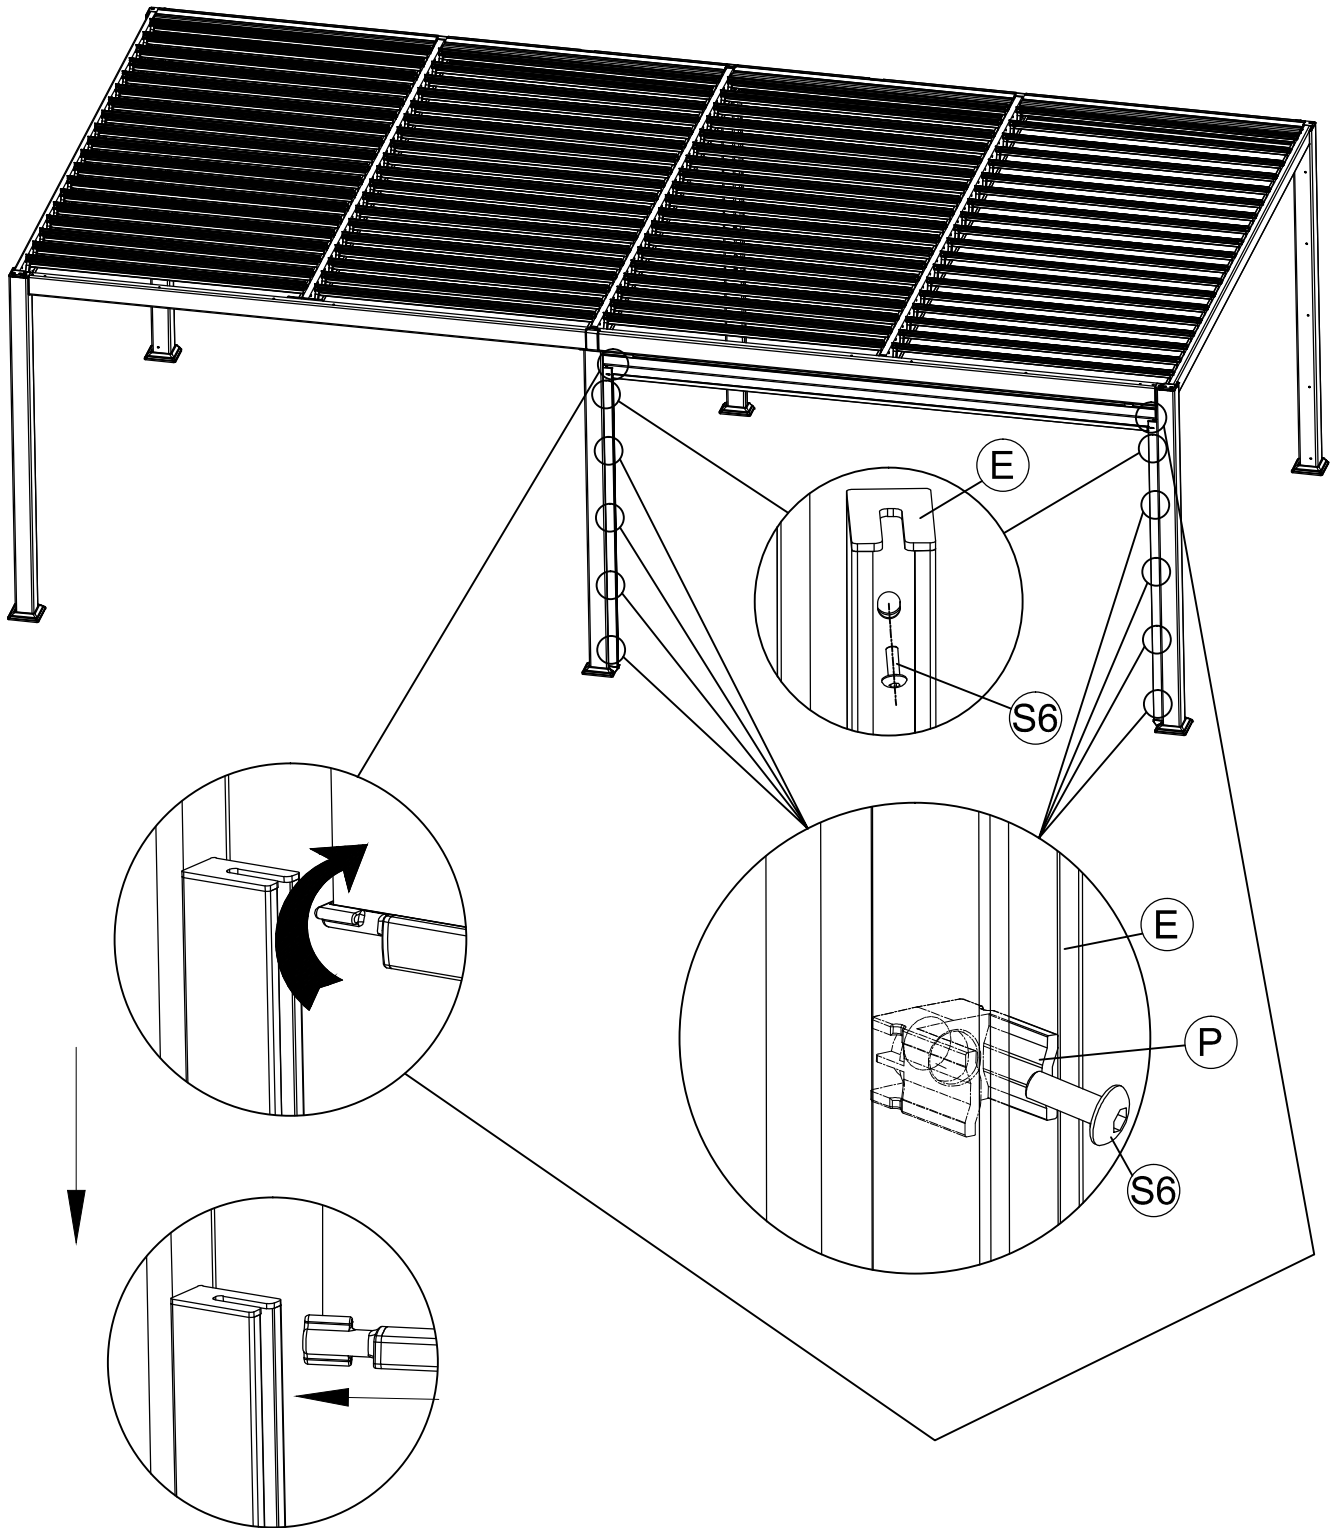

 M6*25 S6 (10X)