










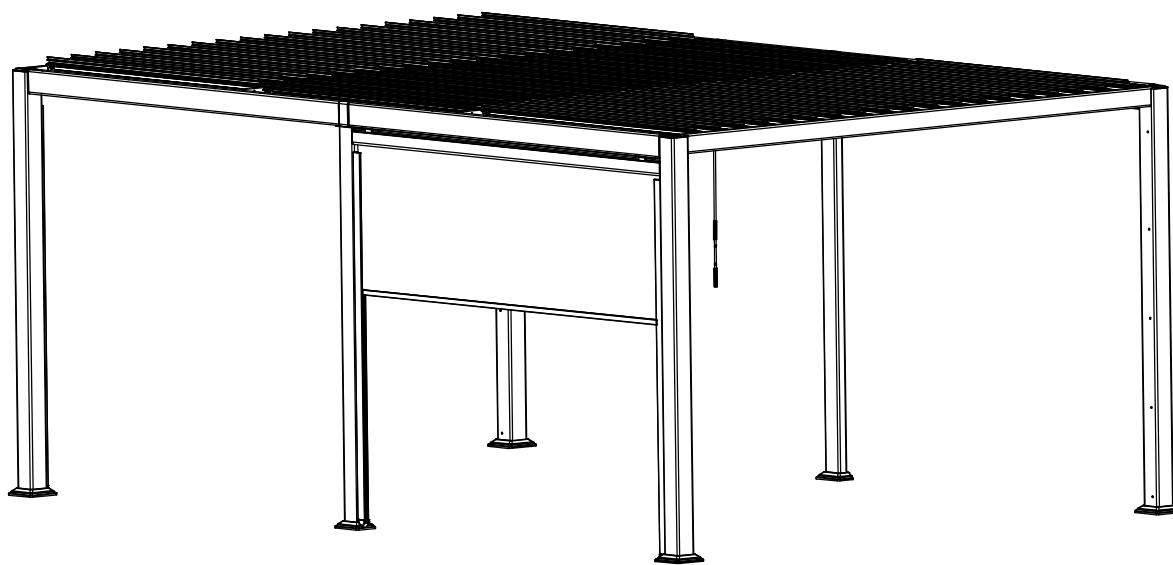


ASSEMBLY INSTRUCTION

Maranza curtain 250cm




REF	PCE	PIECE	QTY	DIM
	E		2	
	K1		1	
	N		2	
	Q		2	
	S2	 M6*20	8+1	
	S6	 M6*25	10+1	
	S7	 M6*12	18+2	
	S8	 M6*15	2	
	T1	 Width:4	2	
	T4	 Width:3	2	


STEP 1

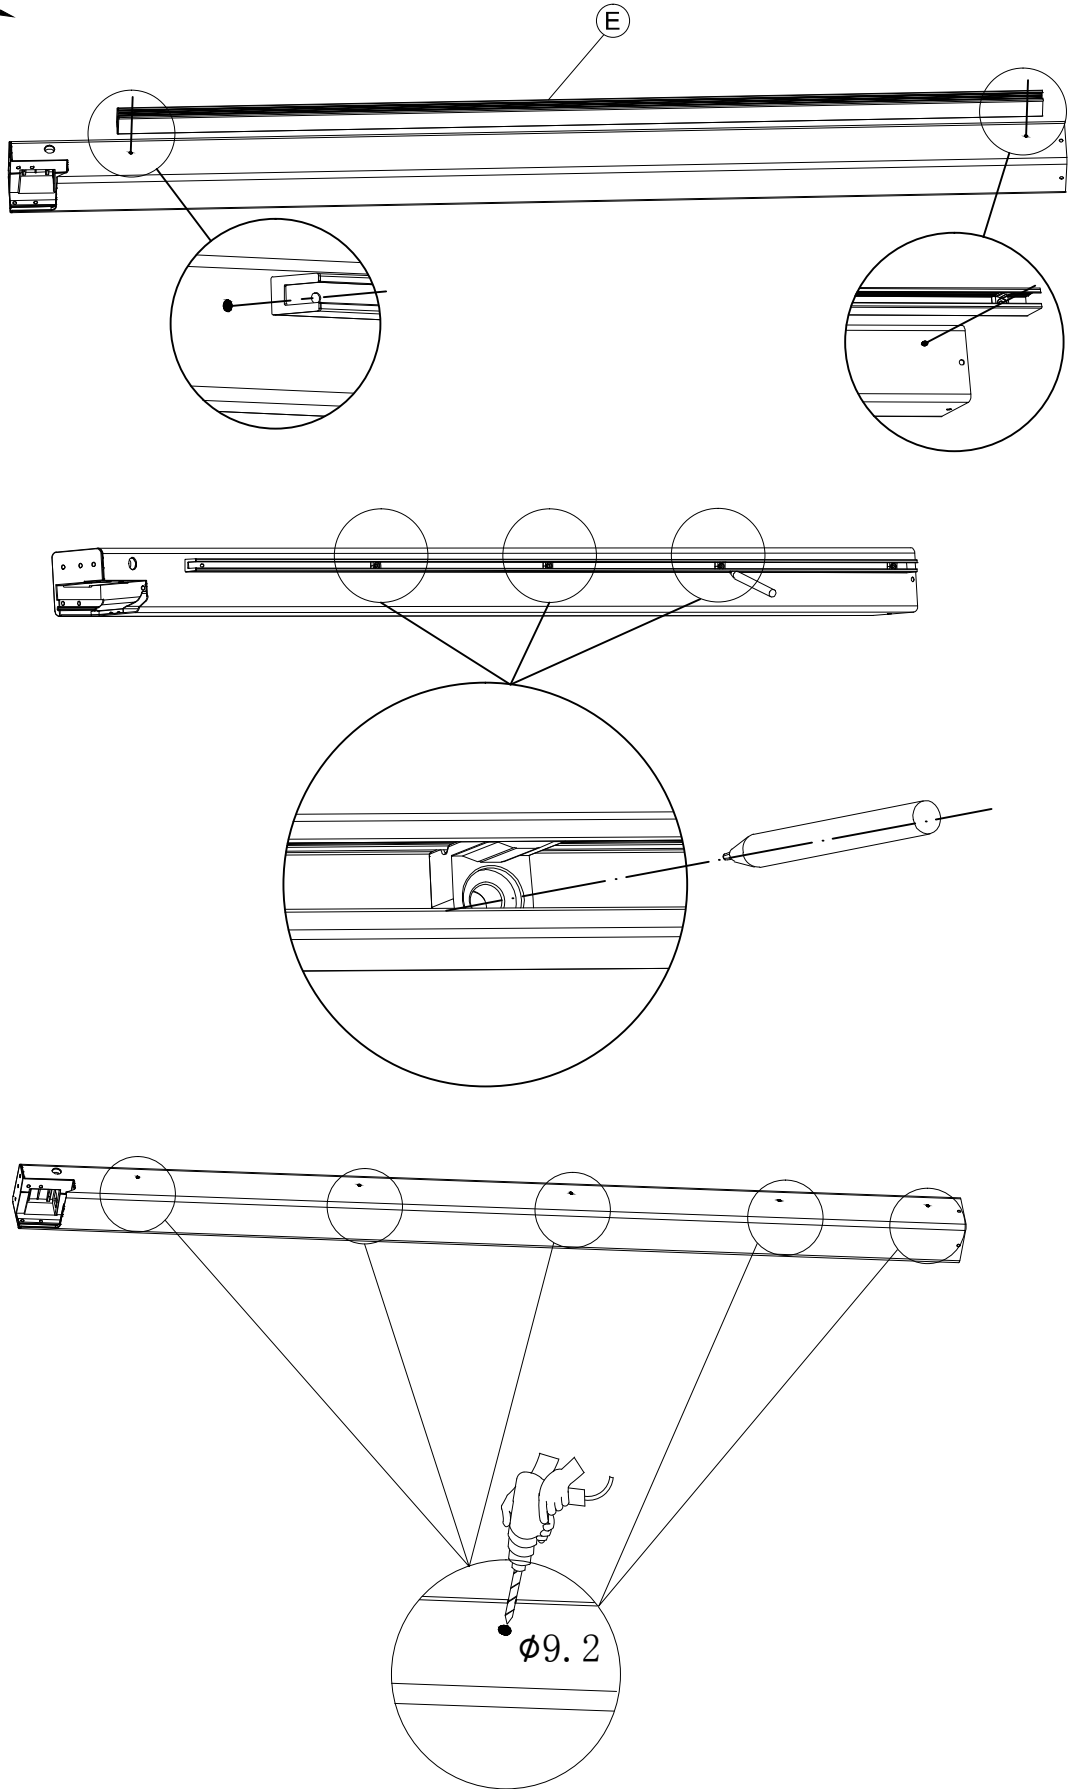




STEP 2

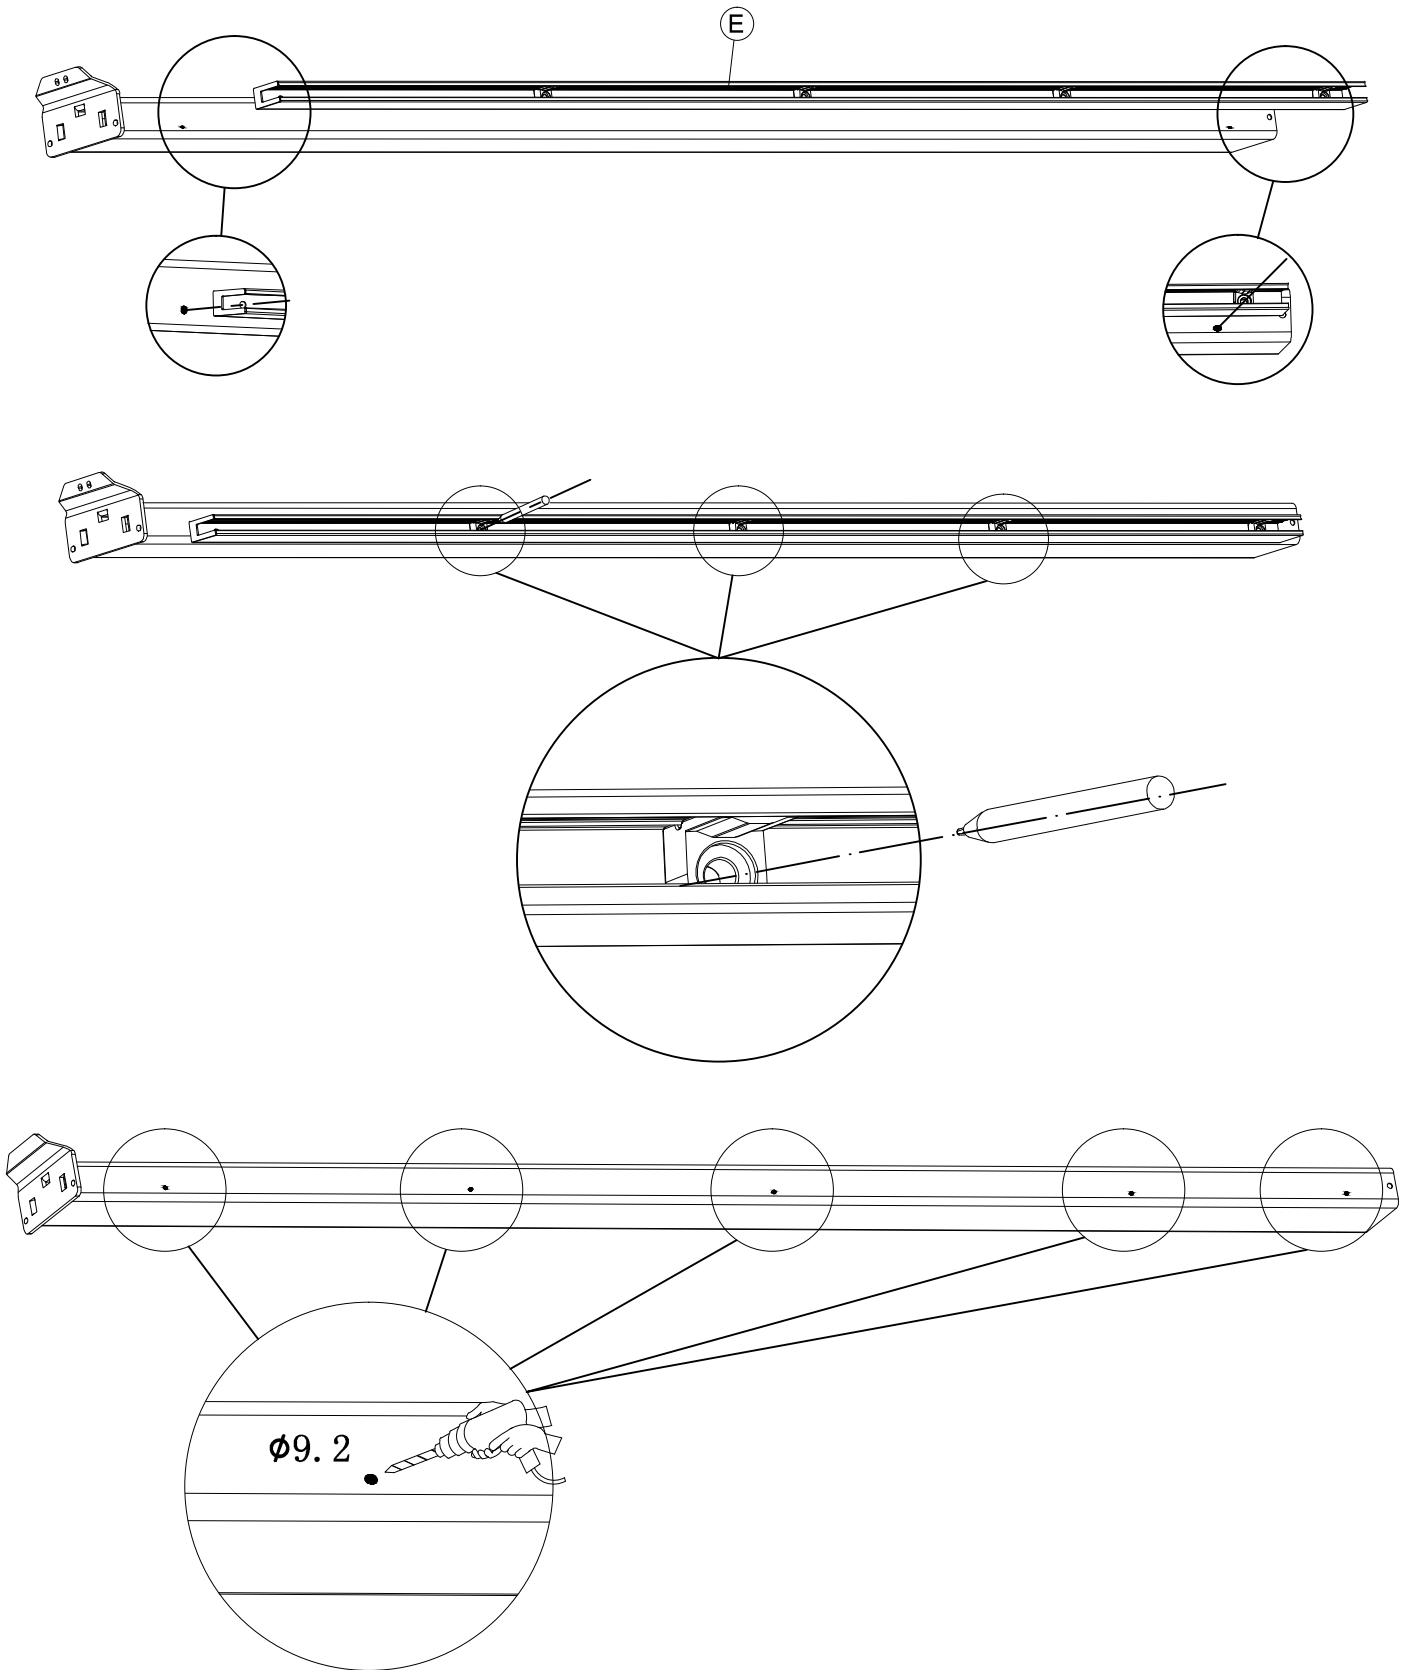


STEP 3


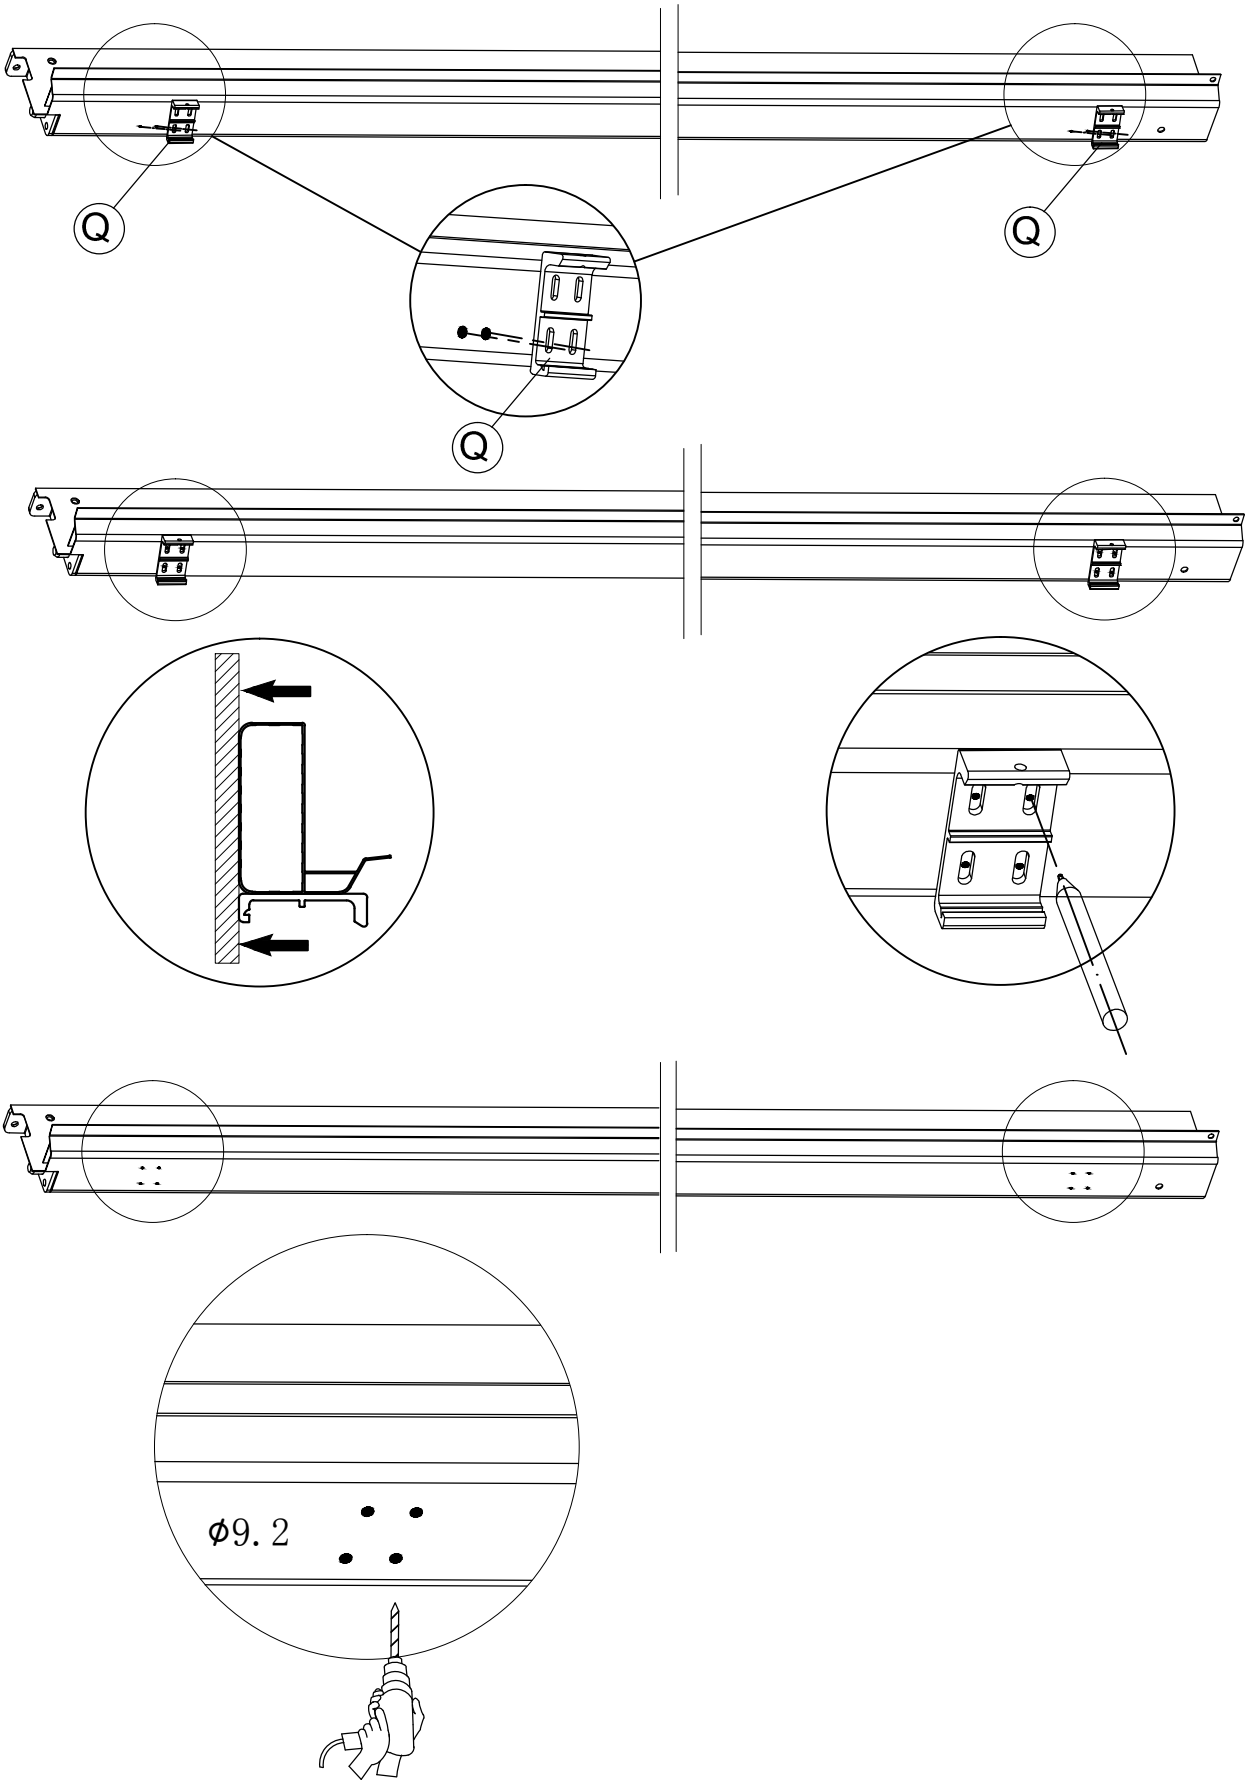


STEP 4

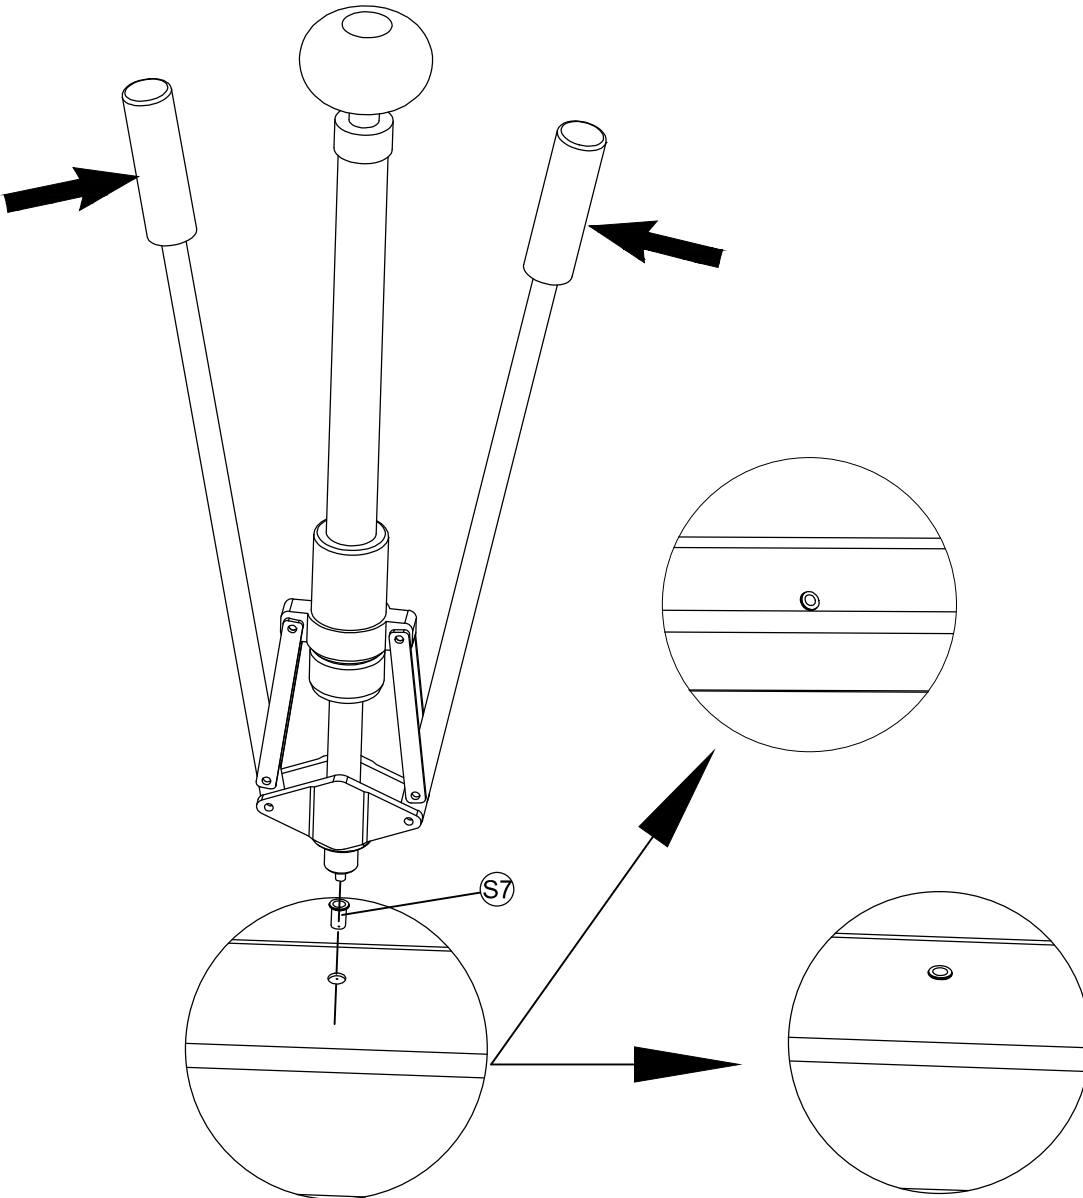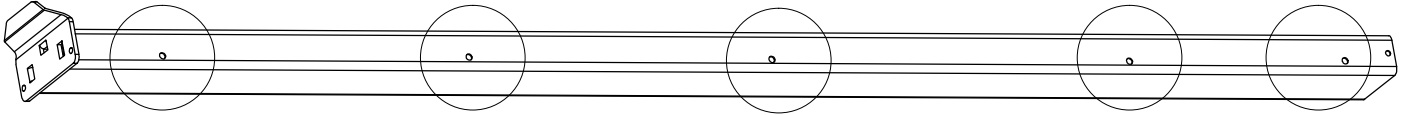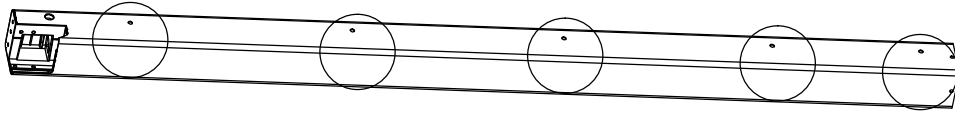



 M6*12 S7 **10X**

STEP 5






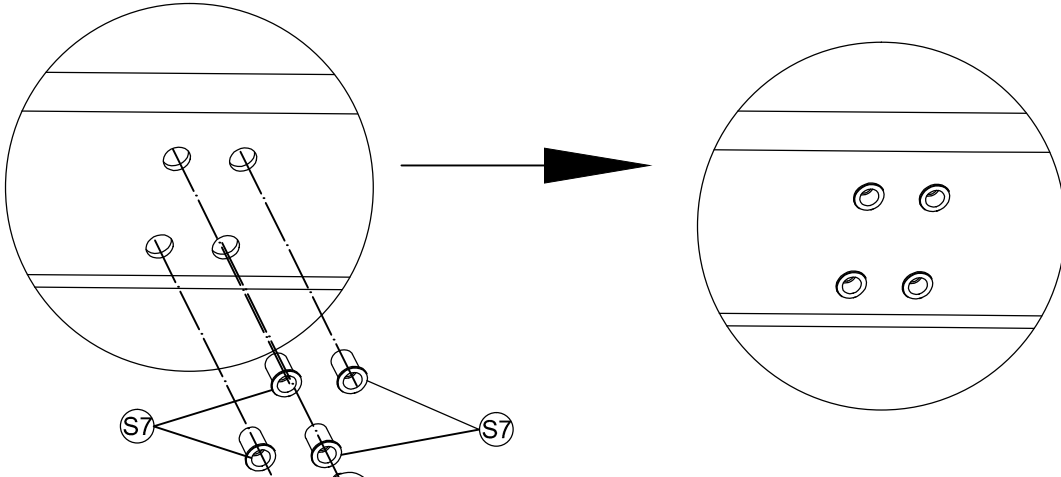
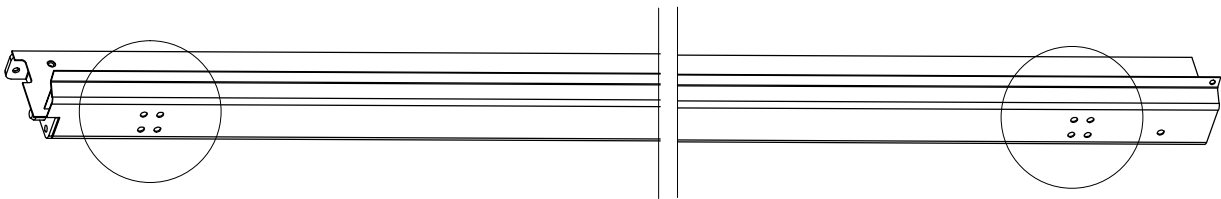


S7 S7

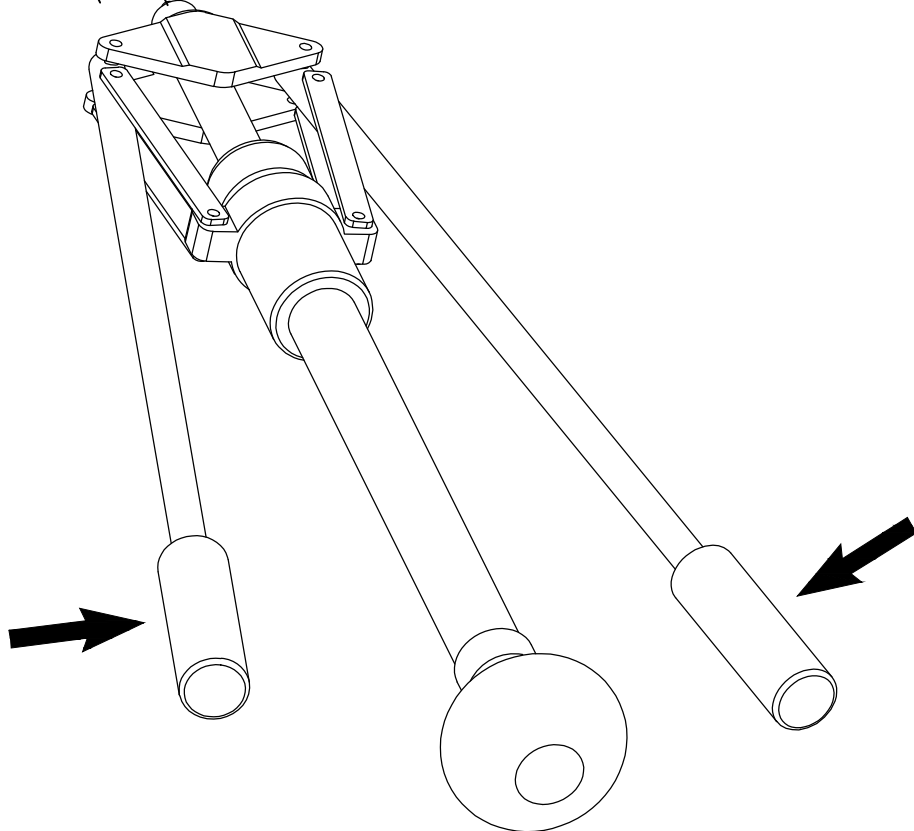


 M6*12 S7 (8X)

STEP 6

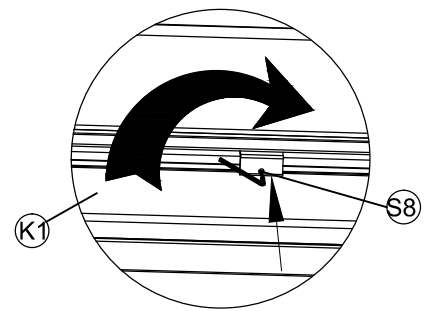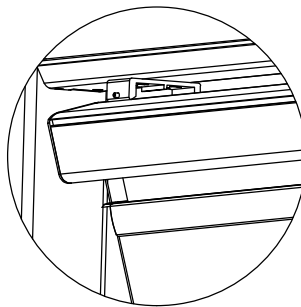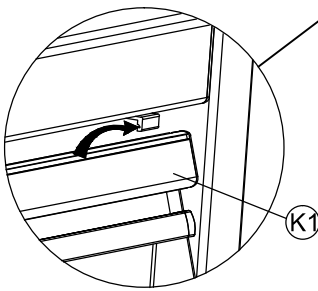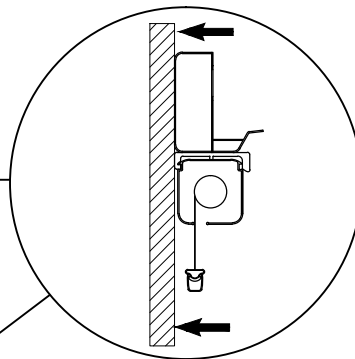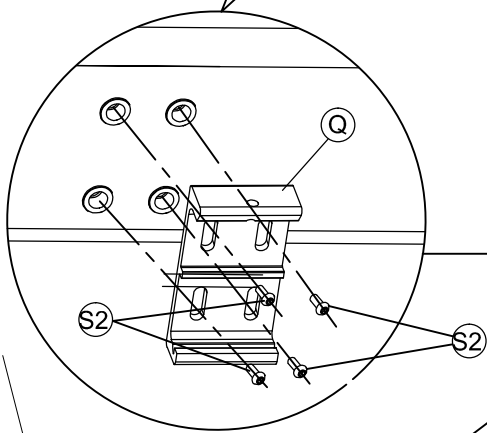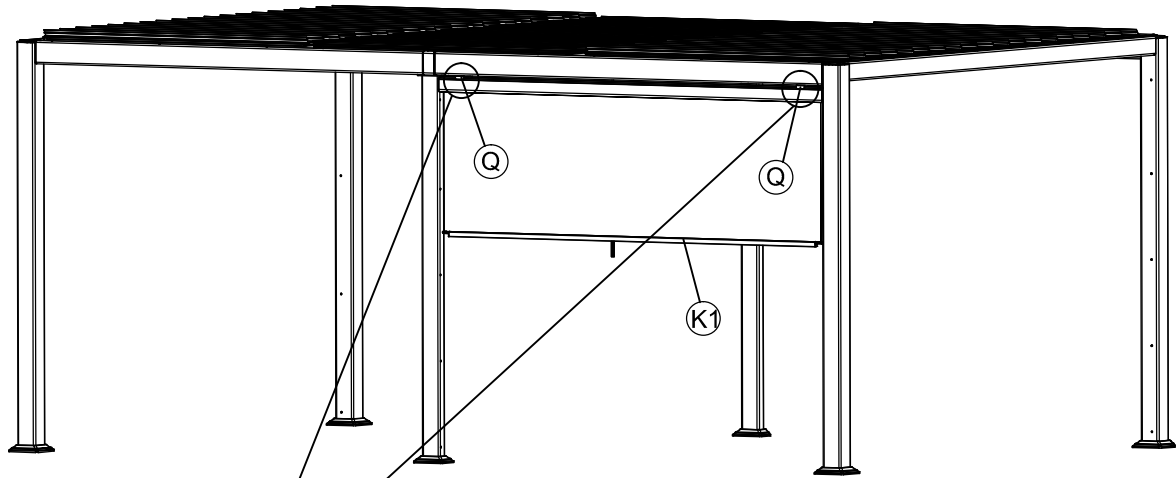

K1 1X



Q 2X





M6*20 S2 8X





M6*15 S8 2X

STEP 7

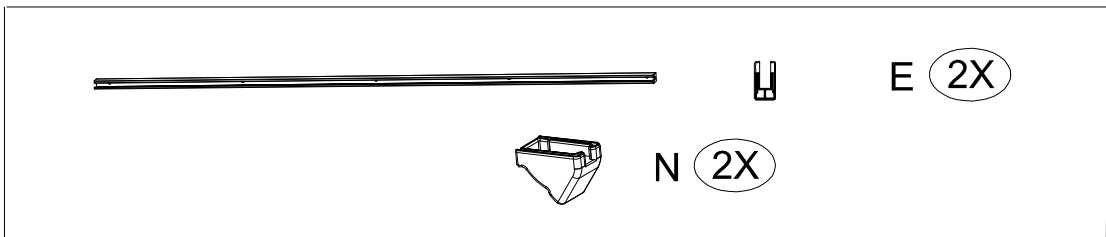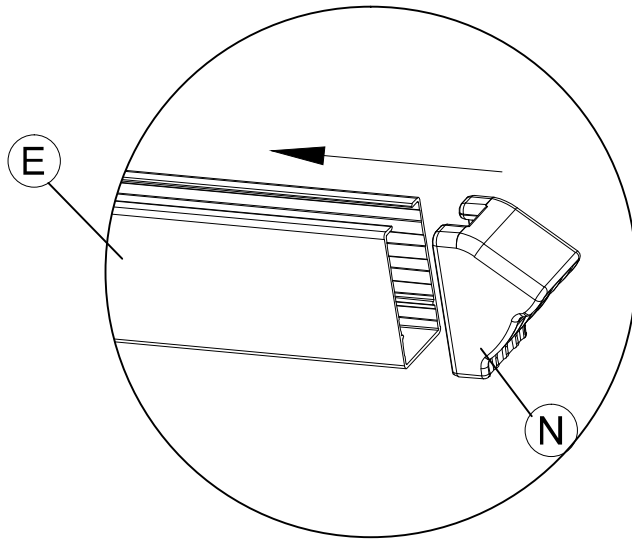

STEP 8

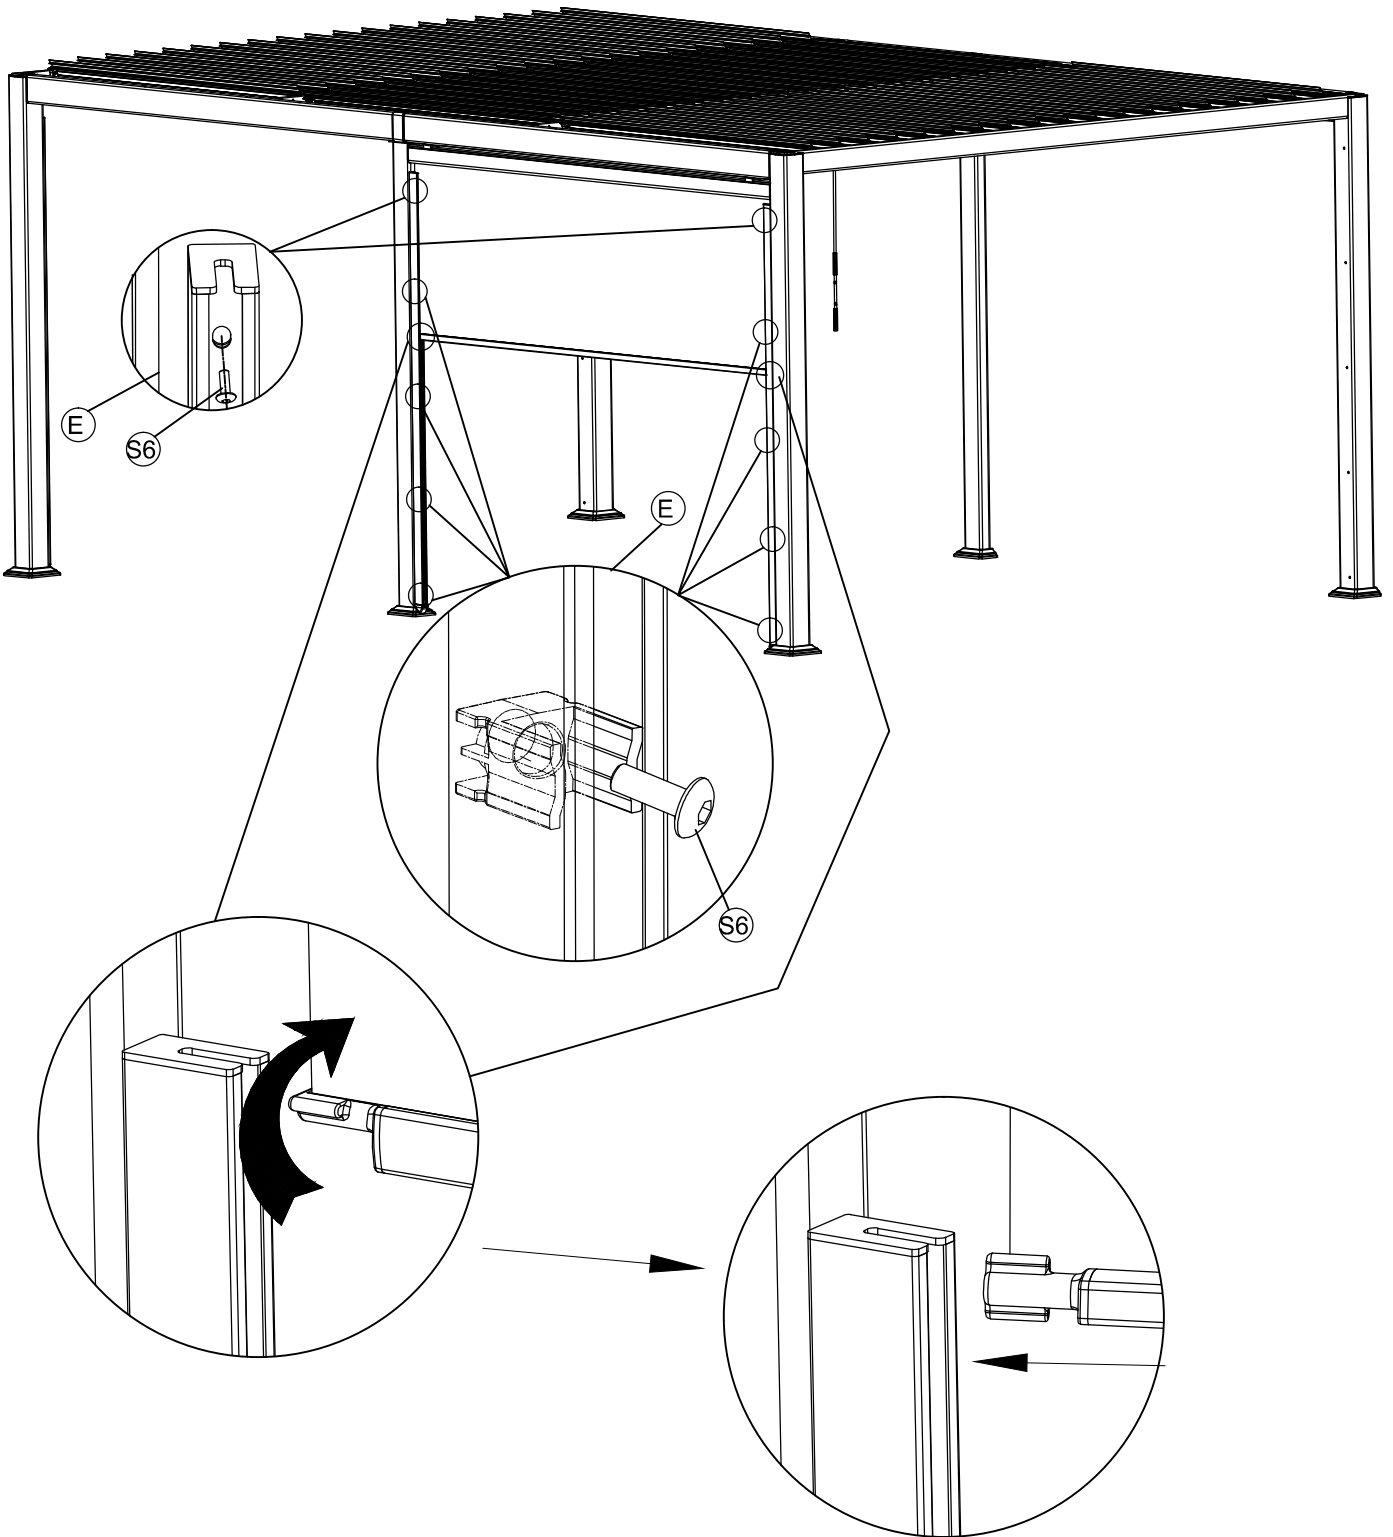

 M6*25 S6 (10X)