



LEDSTORES

Instructions for the installation
of Aluminium mounting frame

CE




ROHS







Installation Instruction

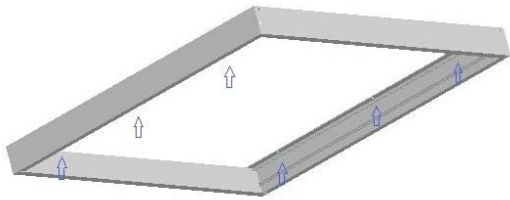


1. Match the Aluminium mounting parts holes on ceiling and mark it , then make hole on the ceiling marked places , after that fill in with Sealant

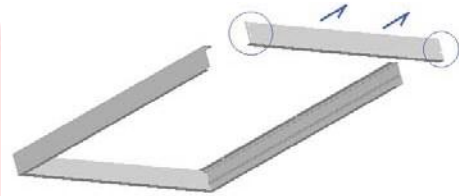


2. Remove one side which has fixed

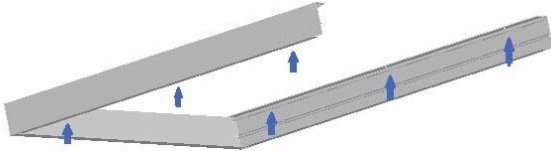


3. Match the holes on the Aluminium mounting parts with the holes on the ceiling which made in Step 1, tighten with the screws, to fix the Aluminium mounting parts on the ceiling

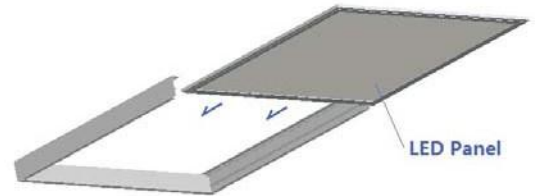


4. Slowly push the Led Panel into the fixed Aluminium mounting parts

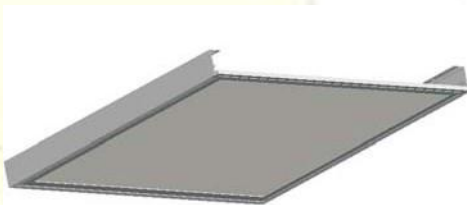


5. Led Panels in the Aluminium mounting parts

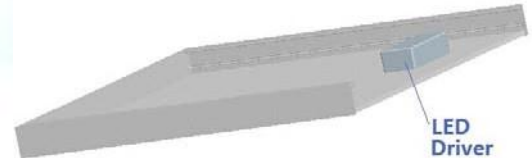

6. Connected the Panel with Led Driver

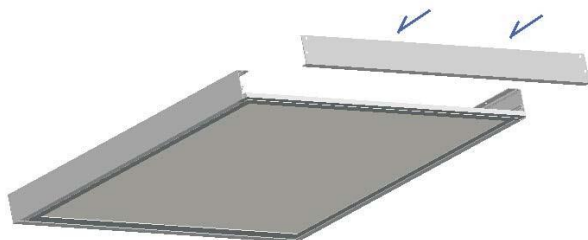

7. To put the removed side in step 2 back and fixed them

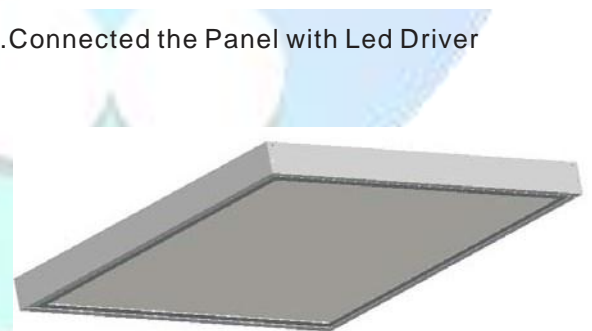

8. Tighten the screws, then finish the installation