




GB	DOOR HANDLE PROTECTION FILM Installation Instruction
D	SCHUTZFOLIE FÜR TÜRGRIFFE Einbauanleitung
E	PELÍCULA DE PROTECCIÓN DE LA MANIJA DE LA PUERTA Instrucciones de montaje
F	FILM DE PROTECTION POIGNÉE DE PORTE Instructions de montage
I	PELLICOLA PROTETTIVA DELLA MANIGLIA DELLA PORTA Istruzioni di montaggio
P	PELÍCULA DE PROTEÇÃO DA MAÇANETA DA PORTA Instruções de montagem
NL	DEURKRUK BESCHERMFOLIE Inbouw-instructie
DK	BESKYTTESEFILM TIL DØRHÅNDTAG Monteringsvejledning
N	BESKYTTESEFILM TIL DØRHÅNDTAG Monteringsveiledning

S	SKYDDSFILM FÖR DÖRRHANDTAG Monteringsanvisning
SF	OVENKAHVAN SUOJAKALVO Asennusohje
CZ	OCHRANNÁ FÓLIE NA KLIKU DVEŘÍ Návod k montáži
H	AJTÓKILINCS VÉDŐFÓLIA Beszerelési utasítás
PL	FOLIA OCHRONNA POD KLAMKĘ Instrukcja zabudowy
GR	ΠΡΟΣΤΑΤΕΥΤΙΚΗ ΜΕΜΒΡΑΝΗ ΛΑΒΗΣ ΠΟΡΤΑΣ Οδηγίες τοποθέτησης
RUS	ПЛЕНКА ДЛЯ ЗАЩИТЫ ДВЕРНЫХ РУЧЕК инструкция по установке
SVK	OCHRANNÁ FÓLIA NA KĽUČKU DVERÍ Návod na inštaláciu

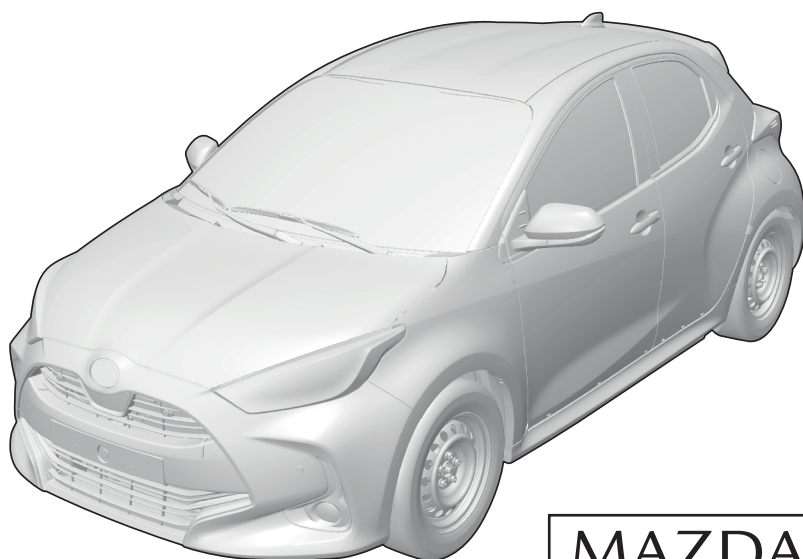

MAZDA 2 HYBRID

ZV

Part Number: ZR74-V3-110C

Date: 22-04-2025


© Copyright MAZDA

Sheet 1 of 5

Expert Fitment Required
Montage durch Fachwerkstatt erforderlich
Montaje sólo por el concesionario
Montage par spécialiste nécessaire
E' necessario in officina specializzata
Especialista em montagem requerido
Montage door vakman nodig
Montage ved professionelt værksted påkrævet
Nødvendig med montering fra fagvegværksted
Verkstadsmontage erfordras
Asennus tarpeen merkkikorjaamossa
Montáž ve specializované dílně nutná
A szereléshez szakműhely kell
Konieczny montaż przez warsztat specjalistyczny
Να τοποθετηθεί από εξουσιοδοτημένο συνεργείο
Необходима установка специалистами
Vyžaduje sa odborné vybavenie



KIT CONTENT

ZR74-V3-110C



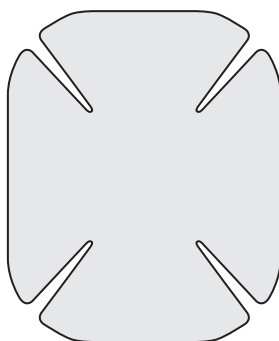


A

2x



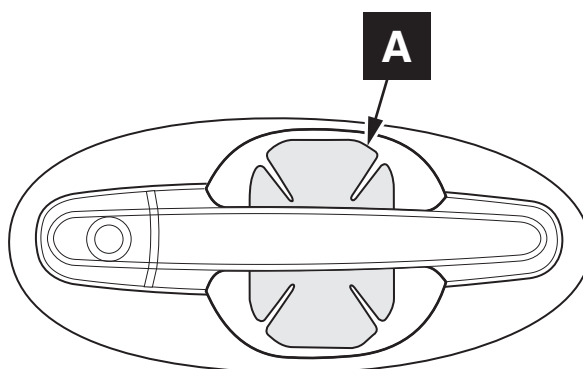
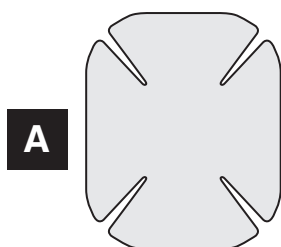



TOOLS & CONSUMABLES & PPE

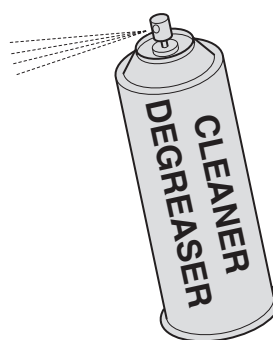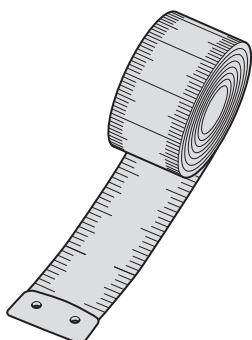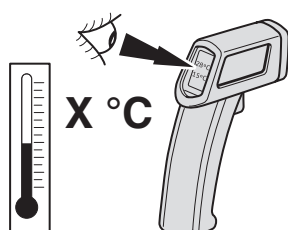


**VINYL
APPLICATION FLUID**

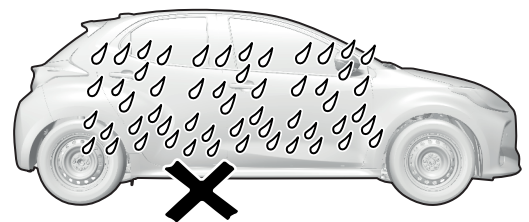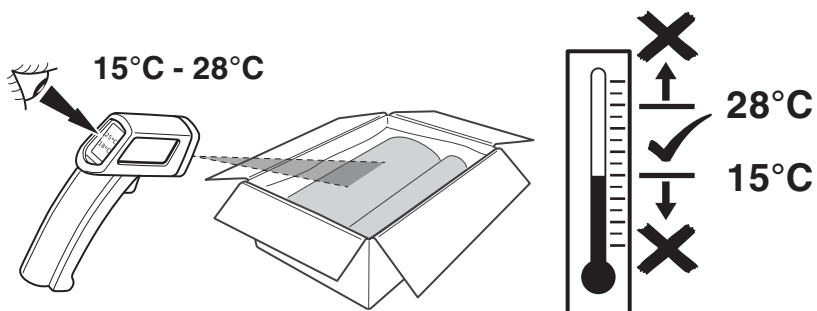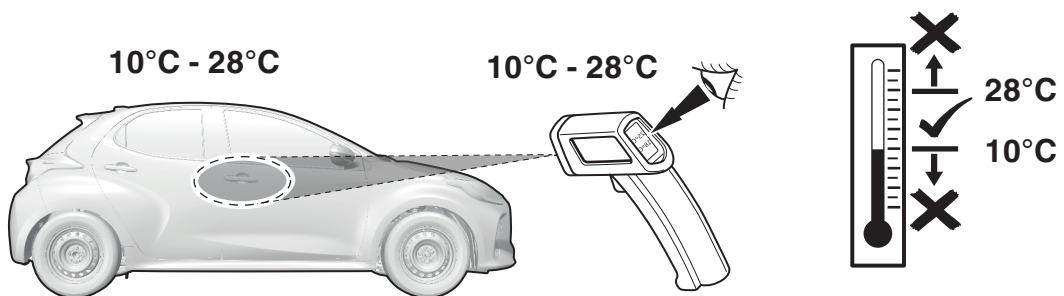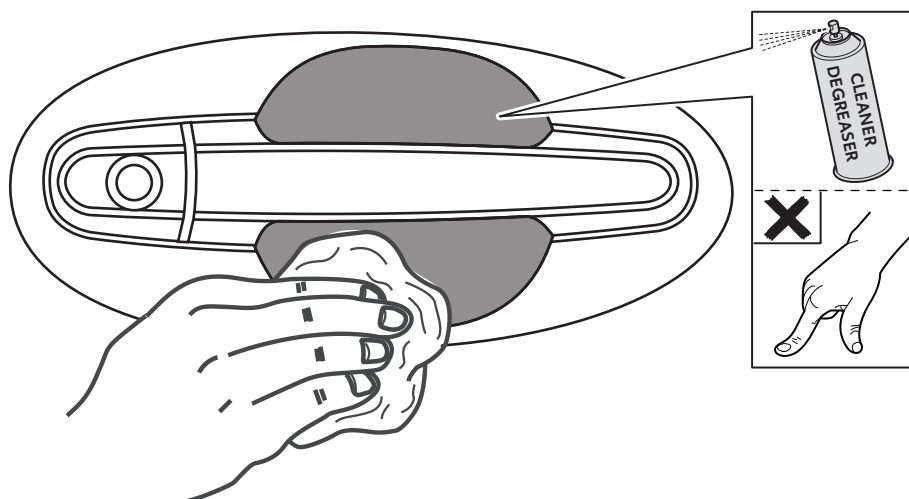


IMPORTANT INFORMATION**Material Safety Data Sheet****Technical Data Sheet****INSTALLATION INSTRUCTIONS**

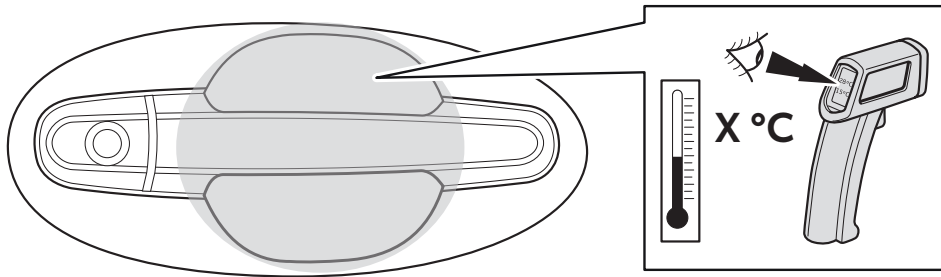


2

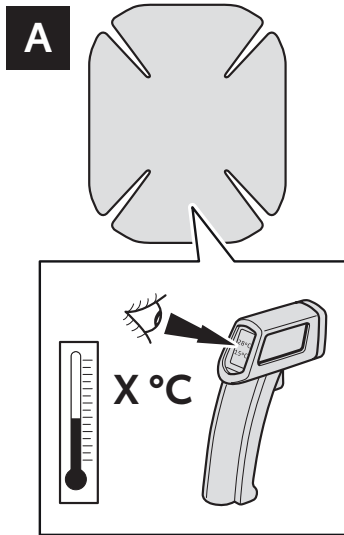


3

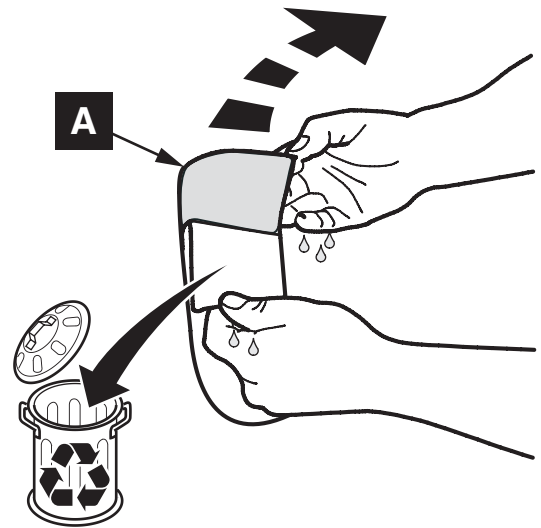

4

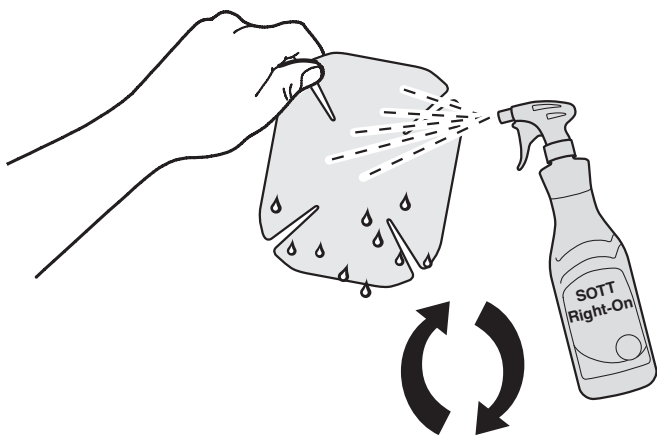


5




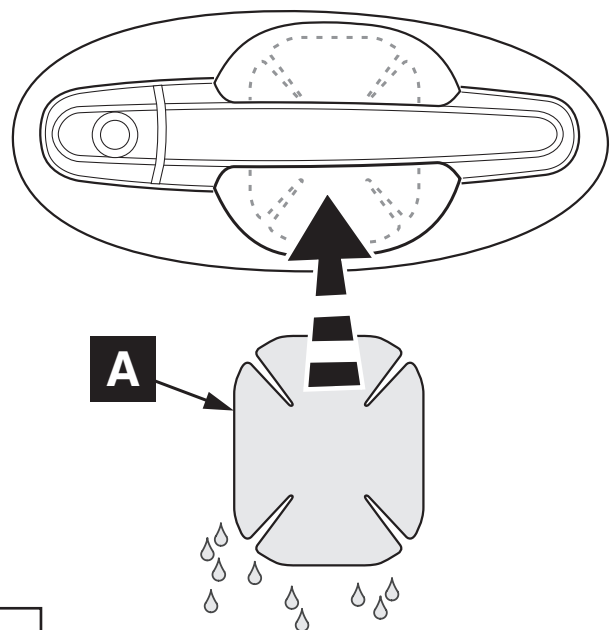


6

7

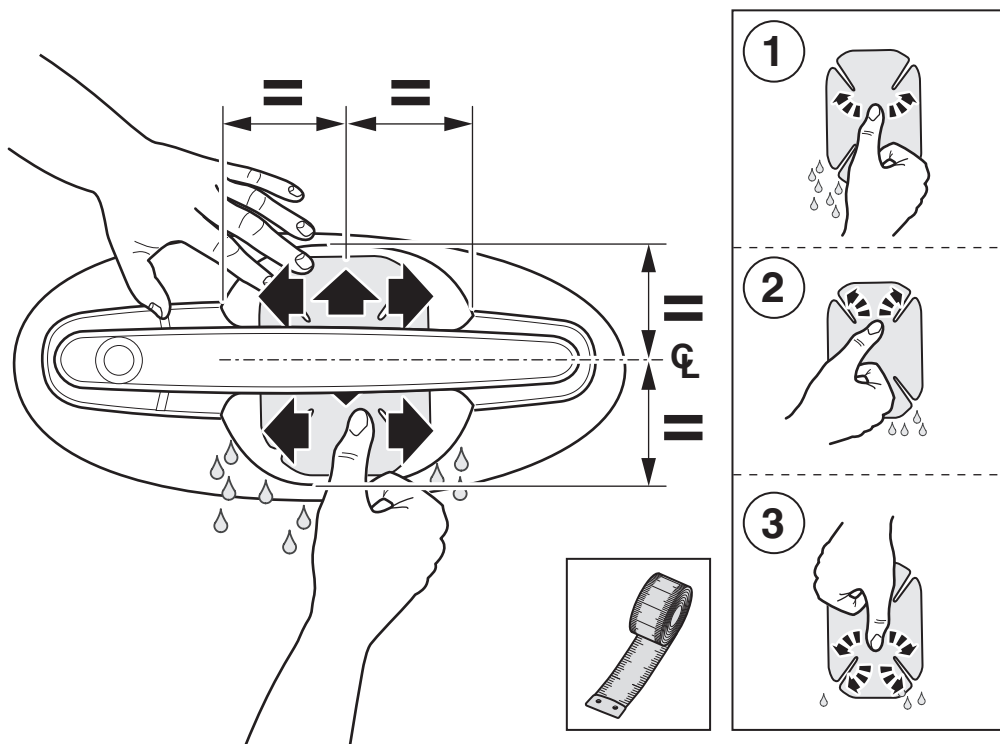

RH = LH

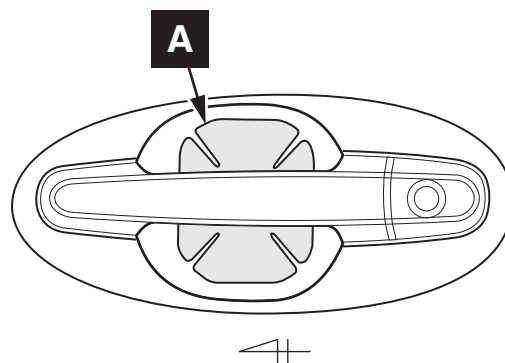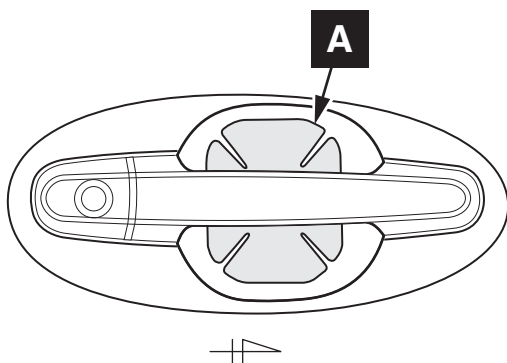

8

INFORMATION

