



# FERRO CONCEPTS - CHESTY RIG MINI + WIDE - INSTRUCTIONS


COMPATIBLE WITH ALL FERRO CONCEPTS G-HOOK TOP FRONT FLAPS. OTHER FLAPS ARE NOT COMPATIBLE.

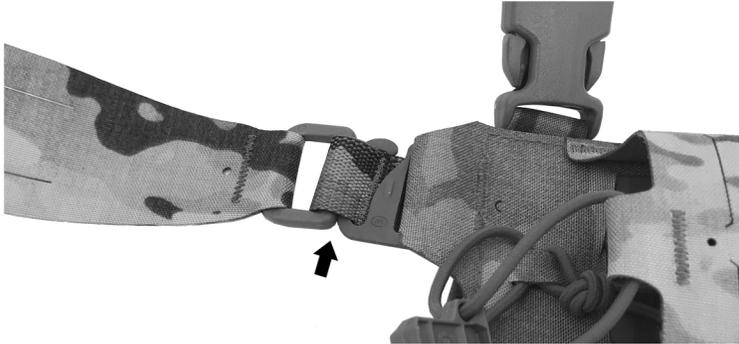

1. INSERT G-HOOK OF FRONT FLAP INTO THE SAME LOOP AS THE RING ON THE SHOULDER STRAP.

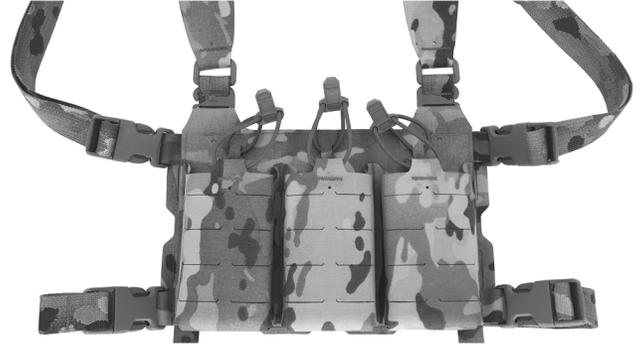

2. REPEAT STEP 1 FOR OPPOSING SIDE. PULL DOWN GENTLY ON FRONT FLAP TO REMOVE SLACK IN THE G-HOOK CONNECTION. FASTEN FRONT FLAP TO CHESTY MAIN BODY.

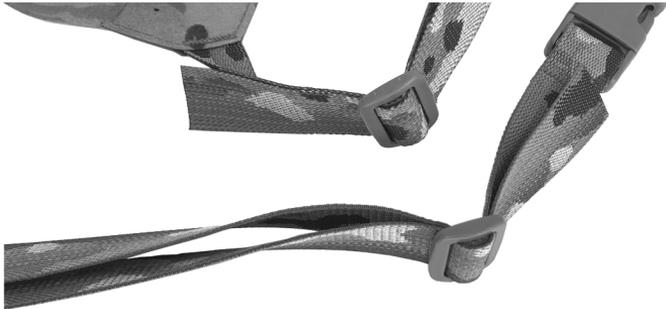

3. ADJUST WEBBING STRAPS WITH TRI-GLIDES LOCATED ON BOTH SHOULDER STRAPS AND THE WAIST STRAP TO DESIRED FIT.



4. TO DON/DOFF THE RIG QUICKLY, MANIPULATE THE SIDE RELEASE BUCKLES NECESSARY FOR YOUR SITUATION.