



HANGING GUIDE

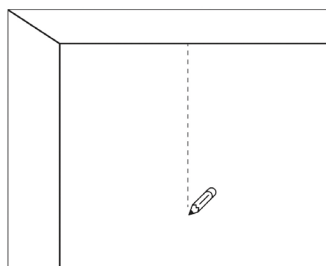

01

Prepare the wall by applying an undercoat on the wall if needed. The wall has to be smooth, flat, without any cracks, clean, dry and preferably white.


By using a plumb bob and line, draw a straight plumb line on the wall, this will be the template for the first length of wallpaper.

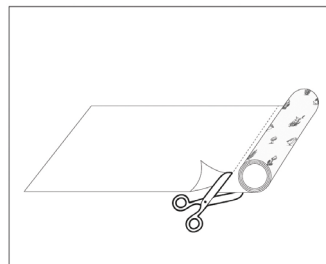

02

Cut the first length of wallpaper. Measure precisely the wall height and add 5cm as a reserve to adjust the length once hung. Respect the size of design repeat.


Cut the followings lengths just as the first one and accordingly to the design repeat.

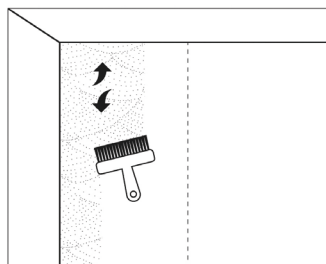

03

Prepare the paste. Paste the wall evenly, try to avoid to put on too much as otherwise it will drip and be seeable through the wallpaper.


You can hang the first strip to the wall from the top to the bottom and paste it along by using the marked vertical line you drew as a guide.

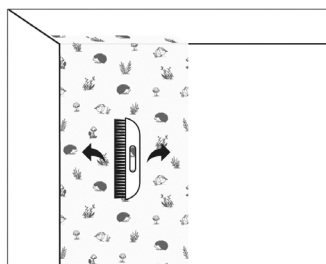

04

By using a wallpaper brush, smooth the length from the middle to the outside in order to take off the air and surplus paste. Make sure your tools do not get in contact with it.


Remove immediately and delicately paste in excess with a slightly wet sponge. Avoid moistening too much the wallpaper.

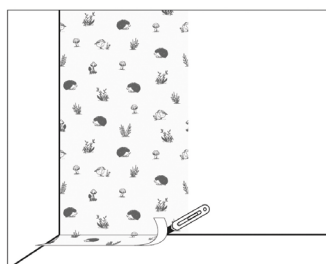

05

Adjust the length to the bottom of the wall and trim the excess wallpaper by using a ruler and a cutter.

Repeat the process for each strip, by making sure to match the designs and not to overlay on the previous strip.

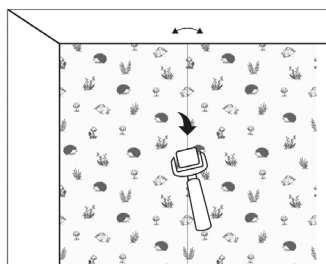

06

To get nicer and flattened connexions, use a small rubber roller to smooth the joints.

YOU WILL NEED



- Bucket, clean sponge, soft cloth
- Special non woven wallpaper paste
- Plumb bob and line or level
- Cutter & measuring tape
- Wallpaper roller
- Paste brush or roller
- Wallpaper Brush
- Ruler

PRECAUTION FOR USE

Design printed on white non woven wallpaper. The material has a touch and porosity that makes it a delicate product.

Upon reception of your products and before hanging them, check the batch number on the rolls. This number ensures that all the rolls belong to the same series and have identical colors.

Always store the products in a cool and dry place in their original packaging.

An extended exposure to sunlight can cause wallpapers colors fading.

• Surface preparation:

Before hanging the wallpaper, you need a perfect wall.

It has to be white, smooth, clean, and dry : stainless and free of grease. The surface has to be evenly and painted with a white undercoat. Eventual cracks or holes have to be filled up.

Non woven wallpaper won't cover irregularities and shouldn't be pasted onto layers of old paint of wallpaper. Every color differences will be visible once the wallpaper is hung, if the wall is not properly prepared beforehand.

• Paste & Pasting:

Only use special non woven wallpaper paste, marked as such in every DIY shop. Follow indications from the manufacturer to find the correct ratio of water and powder. The past shouldn't be too liquid. Apply the past directly to the wall and spread evenly on the whole wall. Proceed strip by strip.

Only use the necessary amount of paste: a small amount is enough. The surplus paste can leave stains on the wallpaper. Clean immediatly and gently the surplus paste with a slightly moist sponge, then use an absorbent dry cloth until there is no more paste stain. Do not rub or put too much water as it could damage the surface of the non woven wallpaper.

If paste is lacking, gently lift up the strip and add some with a pencil.

To remove the wallpaper: soak thoroughly the wallpaper and wait for the paper to absorb water. If the paper hasn't been humidified enough, repeat the process if needed.

• Design repeat:

The repeat is a number in centimeters, marking the length after which the wallpaper pattern repeats.

Add this interval measure while cutting your wallpapers lengths. For a straight match: always proceed to the same cutting. For a drop match: proceed to the same cutting every other time.

Design repeat sizes are provided on our website and on the product.

• Smoothing:

Smoothing aims to press wallpaper of the wall by removing air bubbles and irregularities. Use a wallpaper brush and move it from the bottom up and from the middle to the outside.

TIPS

- To apply wallpaper around sockets and switches, turn off the electricity before removing the frames and surrounds of switches and sockets. Apply the length of wallpaper as usual, covering the sockets/switch, which you will easily felt through the wallpaper. Use a cutter knife to cut the wallpaper crosswise before removing the excess wallpaper.

- To apply wallpaper behind heater, if you can't remove it, slip and push down carefully the length behind it. Smooth out the wallpaper on the wall with a ruler.

- To proceed to the wallpaper cutting, if your ceiling or your floor are irregular, we recommend the use of a spatula instead of a ruler.