

SolarGuard

EXCLUSIVE TRUCK PARTS

Instruction mounting Scania Next Generation complete frontplaat.

Step 1


Remove the original front plate



Step 2


Degreasethe supports and primer(1) these.

Primer the front plate on the inside in the designated areas , and let it dry for at least 20 minutes.

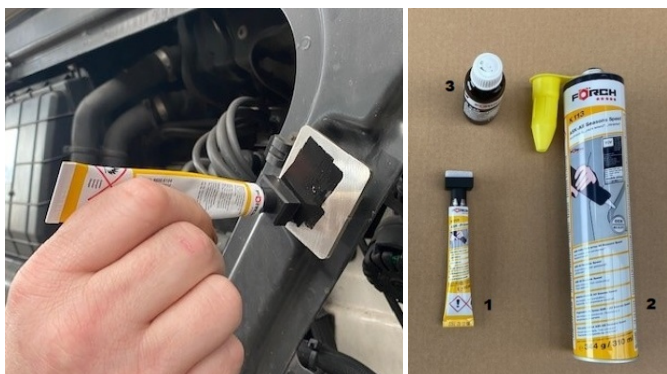

Step 3

Place the supports with the correct spaced bus in the designated mounting areas on the frame of the truck.

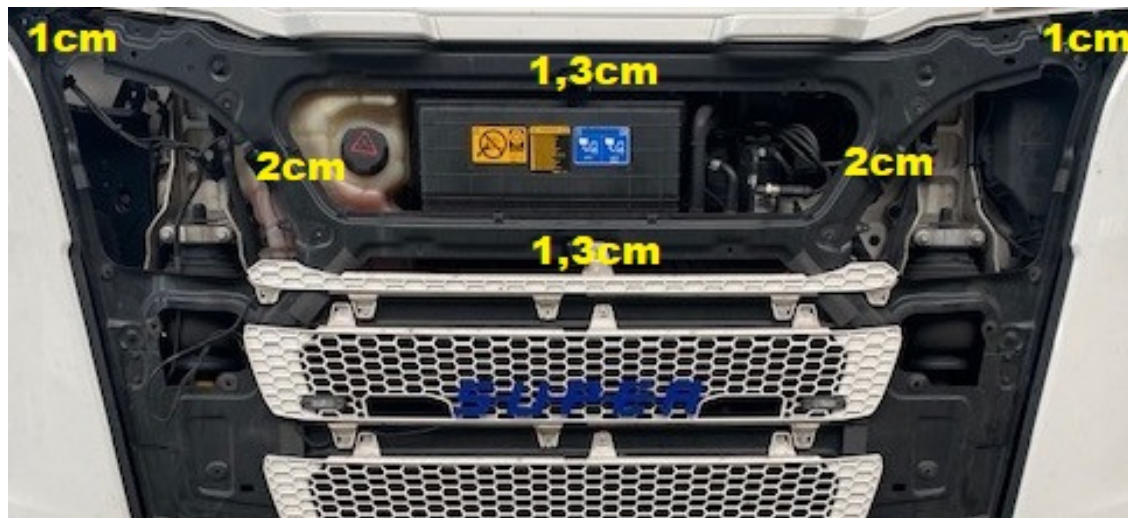

Step 4

Apply the supplied kit(2) to the supports, apply a little more to the corner supports.



Step 5

Apply the Solarguard front plate and adjust it to your wishes.

Fix it with the supplied bolts.



Allow this to dry for at least 4 hours before disassembling the front plate again and reinforcing and finishing the stuck supports with the supplied kit(2).

After this, the front plate is ready to be sprayed.