


## INSTALLATION MANUAL SCANIA NGS STONEGUARD





CONTENT BOX : 1 X STONEGUARD, 1 GAS DAMPER, 2 BRACKETS, 2 X NUT, BOLT, WASHER SET



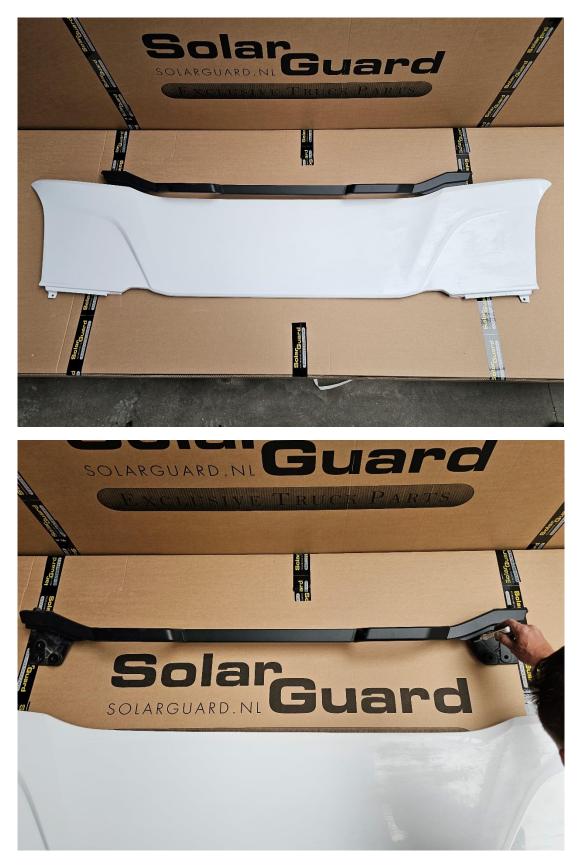

REMOVE THE CABIN HANDLE SET FROM THE TRUCK.





MARK THE BONNET HINGE AS SHOWN




CUT ALONG THE WHITE LINE.





ORIGINAL BRACKET VERSUS CUT BRACKET



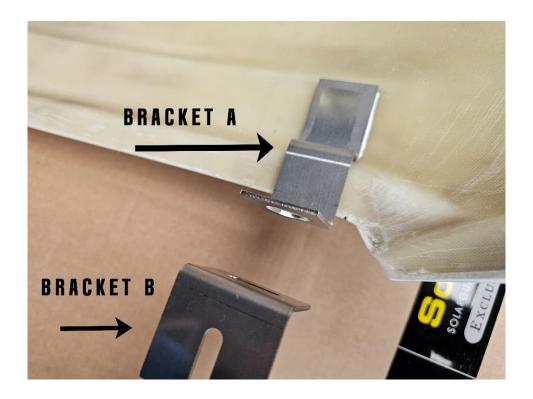









GAS DAMPER REPLACES ONE OF THE ORIGINAL GAS DAMPERS. THIS SHORTER DAMPER, PREVENTS THE GRILLE FROM OPENING TOO FAR.





MAXIMUM OPENING POSITION GRILLE





MAXIMUM OPENING POSITION GRILLE



FITMENT AFTER INSTALLATION

