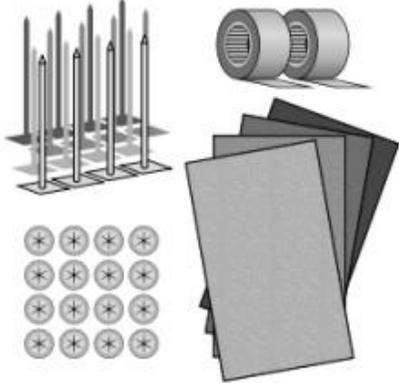
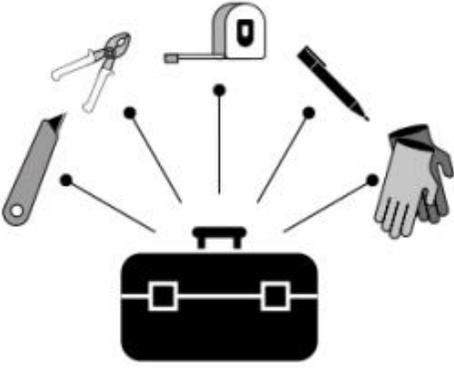
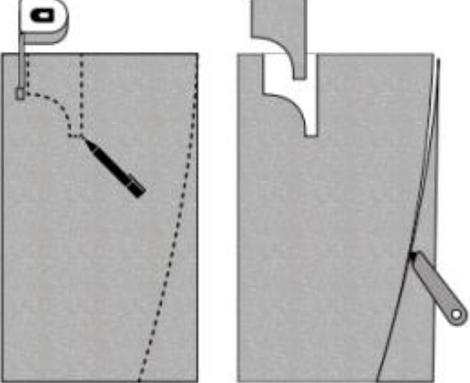
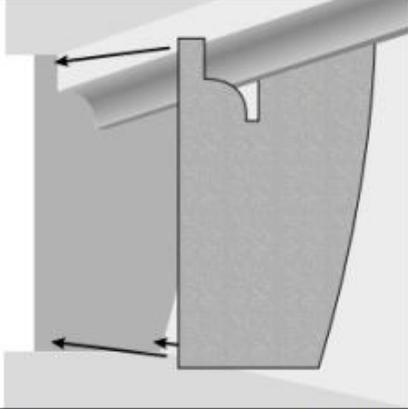
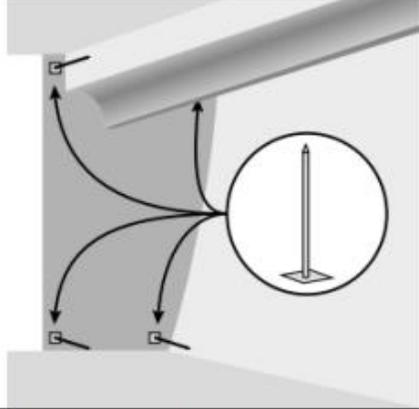
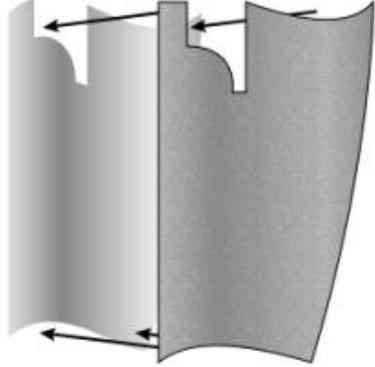


Siderise Aquafon – Installation Guidance 1

		
<p>1</p> <p>Contents - 4 Marine insulation panels 16 Self-adhesive backed fixing pins 16 Retaining clips 2 rolls 50mm wide foil edge sealing tape.</p>	<p>2</p> <p>You will need a Stanley knife, pliers, a measuring tape, a marker pen and safety gloves. Please wear safety gloves and be aware of sharp points.</p>	<p>3</p> <p>Measure the areas you need to trim and mark them out with your marker pen. Trim your panel using a sharp Stanley knife to suit your application.</p>
		
<p>4</p> <p>Offer up your trimmed panel to your bulkhead/application. Once your Aquafon panel fits perfectly apply the fixing pins.</p>	<p>5</p> <p>Firmly apply fixing pins to bulkhead approx. 100mm in from edge of insulation. (Installation engineer may want to apply his own contact adhesive)</p>	<p>5</p> <p><i>*Please follow the same application as above, when applying your Aquafon to curved or contoured surfaces.</i></p>

**BY
YOUR
SIDE™**

Siderise Aquafon – Installation Guidance 2

<p>6 Impale Aquafon over fixing pins and apply retain clip.</p>	<p>7 Bend fixing pin over the top of retaining clip and trim of excess metal from spike.</p>	<p>8 Cover fixing pin and clip with foil tape.</p>
		<p>This is a generic guide and not project specific. You may have interfaces between Siderise Aquafon and bulkhead components/protrusions which require independent detailing, therefore please contact Siderise to discuss your requirements. We reserve the right to amend installation recommendations without notice.</p>
<p>9</p>	<p>10 Apply foil tape to all exposed edges (RCD compliance)</p>	