



## ORACLE 24W P13W HID Installation 2010-'13 Camaro w/ RS Package

The bumper does not need to be removed in order to install this kit but it will make installation easier if removed.  
The lights can be accessed through the wheel well by turning the wheel and then removing (3) T15 Torx Screws from the liner.

Tools Required: T15 Torx Screwdriver 


PART # 6109



1) Remove and disconnect factory P13W Halogen Bulb.

2) Secure ballast to bumper support bracket with tie strap.


3) Plug ballast in to male end of the P13W Adapter

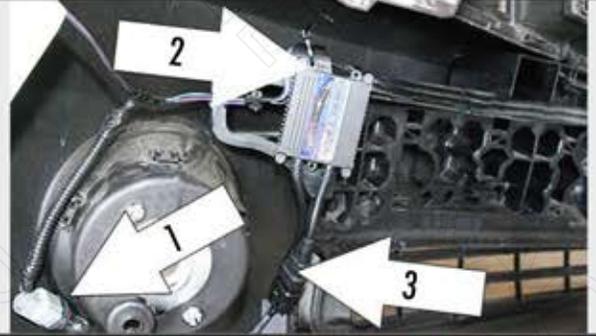

4) Be sure ignition is off and DRL is not in the "on" position.

5) Connect ballast to factory P13 Plug with the P13 Adapter.

6) The Wires from the HID Bulb will connect to the ballast.

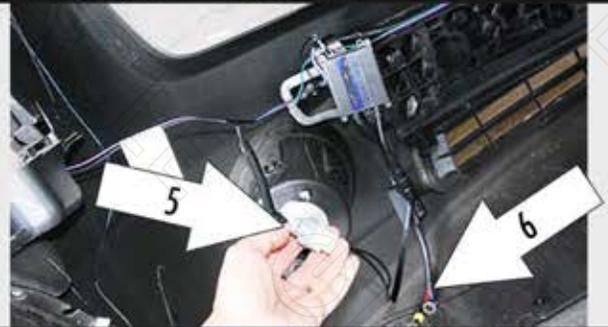

7) Now install the HID Bulb \*DO NOT TOUCH THE GLASS\*

8) Check that the O-Ring Seal is in place on the bulb.

9) The bulb will twist in with a quarter-turn once aligned.



10) Now with the system installed you can test.

\*Remember in order for the DRL light to come on you will need to be in sunlight and in gear (manual transmission).



www.ORACLELIGHTS.com