

ORACLE®



6TH GEN CAMARO VERTICAL FOGLIGHT INSTALL GUIDE

OPENING THE FOGLIGHT

USING A MULTI-TOOL, CAREFULLY CUT AROUND THE FOGLIGHT LENS



Now, separate the lens from the housing



SCAN TO WATCH D.I.Y. INSTALL VIDEO on

vimeo

Vimeo.com/193962939



INSTALLING THE LED STRIP



NOTE WHERE THE LED STRIP WILL BE PLACED




FOR EASIER FITMENT OF THE LED STRIP WIRING, LOOSEN THE THE THREE (3) T-15 SCREWS ON THE CIRCUIT BOARD




WIRES WILL FIT HERE



SET THE LED STRIP INTO PLACE & THEN PRESS UNTIL A SOLID BOND FORMS

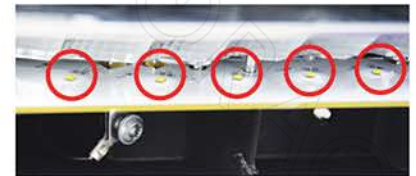

DO NOT BLOCK THE WHITE LEDS ON THE CIRCUIT BOARD

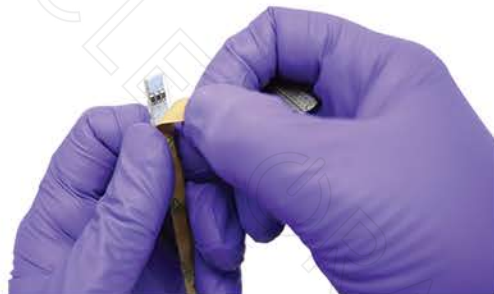

REMOVE THE TOP PAPER LAYER FROM THE BACK OF THE LED STRIP TO EXPOSE THE ADHESIVE

ALMOST DONE!



CUT A HOLE IN THE BACK OF THE HOUSING VENT & THEN ROUTE THE LED WIRING THROUGH THE HOLE



SEAL THE HOLE WITH STRIP CAULK



USE ORACLE HEADLIGHT SEALANT TO FORM A STEADY BEAD AROUND THE ENTIRE FOGLIGHT.

FOLLOW US ON SOCIAL MEDIA FOR MORE TIPS + NEWS!

@ORACLELIGHTS #ORACLELIGHTS



ENJOY YOUR NEW ORACLE RGB FOGLIGHT DRLS!

