


# FT500/595 ABARTH Instructions

## Version 1.

1. Remove the oem spoiler, cutting the glue in the perimeter.

2. Due to the remove for the spoiler, you need to repaint the trunk in the spoiler position.

3. Find the center of the spoiler area like shown below

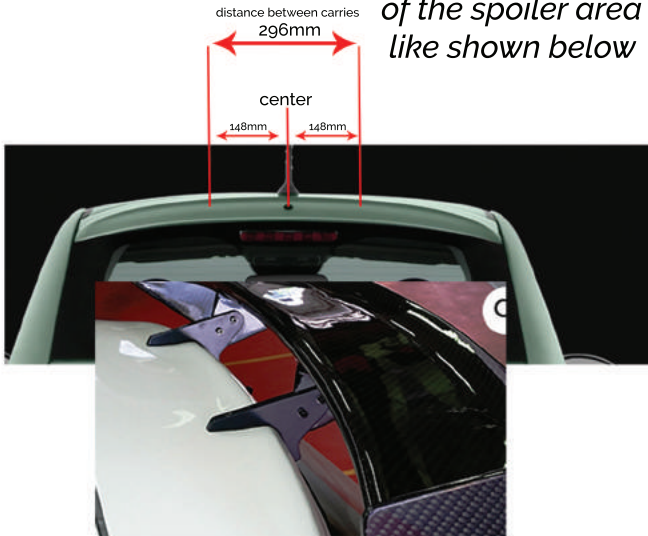


4. Make holes, and now you can fit the part on your car.



## Version 2.

1. Buy FIAT 500 Trunk (no Abarth) : Is ready to mount AC Spoiler

2. Find the center of the spoiler area like shown below

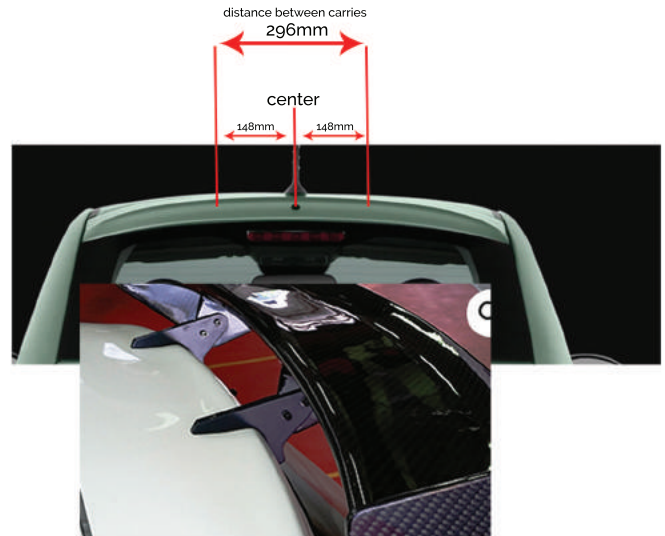

3. Make holes, and now you can fit the part on your car.

