


# INSTRUCTION

ALFA ROMEO GIULIA QV  
Shark Fin Side Skirts

## ARLG-65



1. Clean the area where the part is going to be installed.
2. The part which u see below in red, must be distribute a thin layer with glue 5-6mm (what we prefer is WURTH black bodywork glue).
3. Place it in correct position as seen in picture

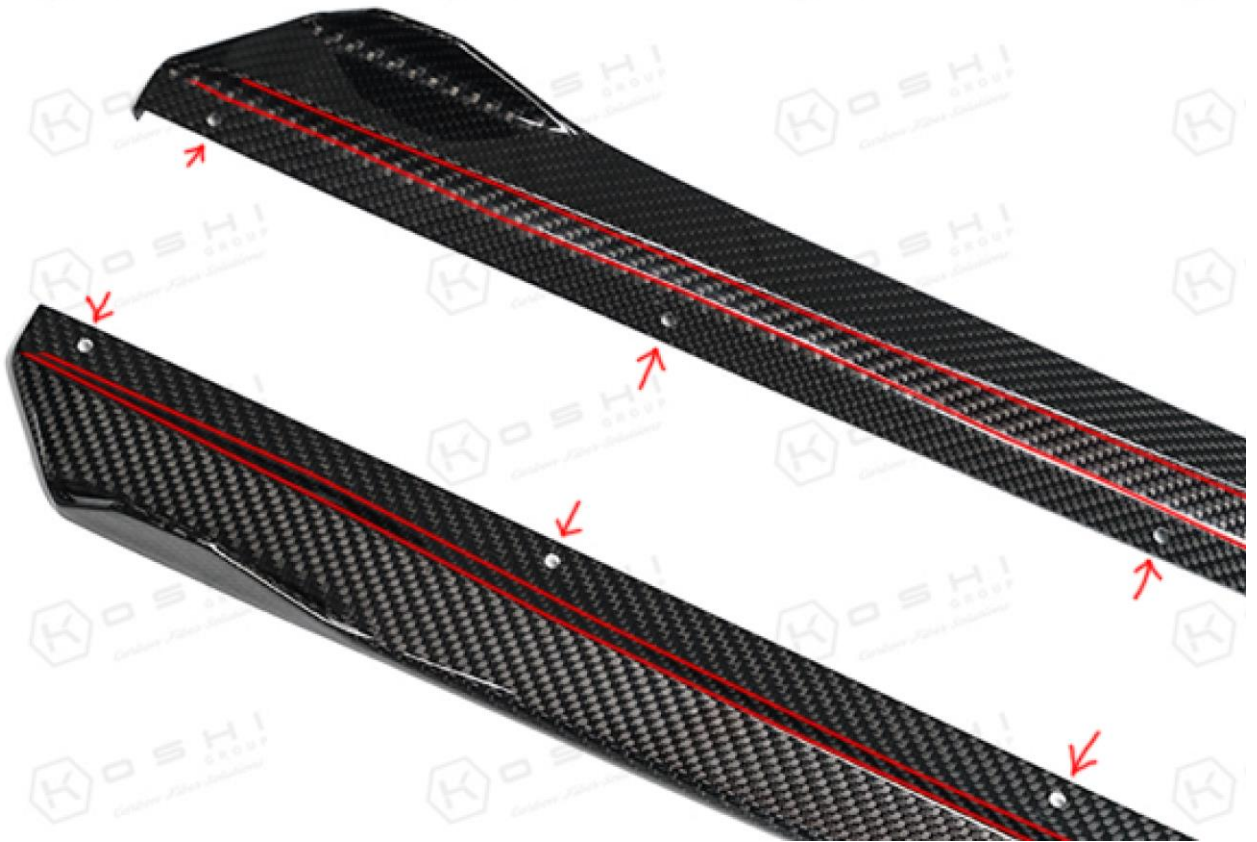

4. You may bolt the part to the underside of car with self drilling bolts, before the glue gets hardened.