


INSTRUCTION

PORSCHE GT3 RS
HOOD EXTRACTOR
REPLACEMENT
GT3RS-03

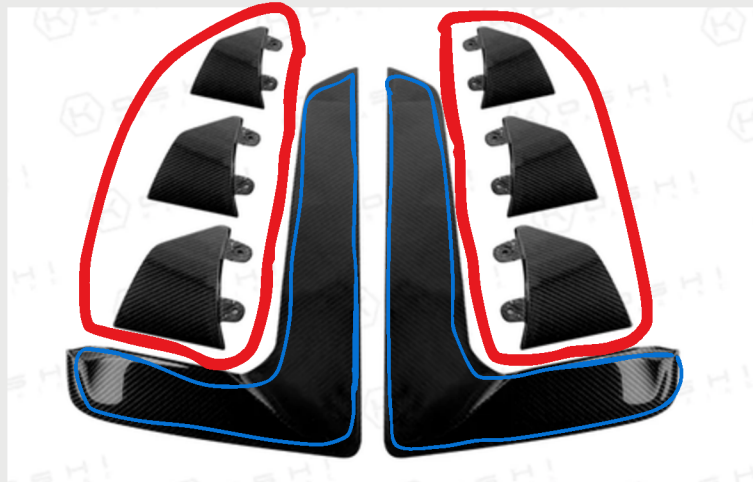

1

This product is designed to be installed over the original component.

2

Remove the original fins/stakes (highlighted in red) from the factory part.

3

Install our carbon fiber replacement part in place of the original section and ensure proper fitment.

4

Reinstall the original fins/stakes onto the new carbon fiber part in their original positions.

5

Before applying adhesive, clean all mounting surfaces thoroughly. For better adhesion, lightly scuff the bonding areas with fine-grit sandpaper.

6

Apply adhesive along the areas highlighted in blue in the installation diagram. We recommend using a high-quality black automotive adhesive/sealant such as 3M or Würth.

7

Position the part correctly and press firmly into place. Hold the part in position or use masking tape until the adhesive has cured.

8

Allow the adhesive to fully cure according to the manufacturer's instructions before driving the vehicle or exposing the part to moisture.