


XP5s Leather Fitted Case Installation

sonim®

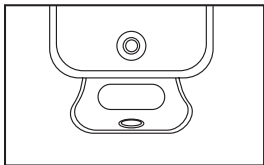


Step 1

Make sure the case is unbuttoned.



Step 2

Insert handset into the case from the inside starting at the bottom left corner.

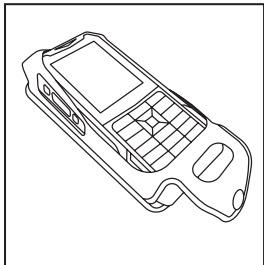

Step 3

Once the handset is inserted, begin to fit it into place. Button the case for a secure fit.