







## **DMQ**

## **Instruction Manual** DMQ trimless Moon series

SKU: Q13310 (White) Q13522 (Black)

GU10 MAX 50W 220-240V / 50-60Hz Cutout: 100mm














- 1. The installation must be done in strict accordance with the instruction and local guidelines
- 2. Please don't install the lighting in easily damage or unsteady ceiling
- 3. Please make sure the main power is switched off before installation or when changing bulb.
- 4. Make sure there is no component loose

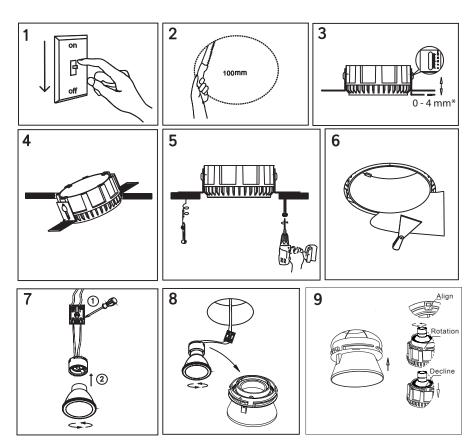

<sup>\*</sup> When plastering the ceiling after installation use 2-4 mm stick out the ceiling. This depends on the plaster thickness. Please discuss with your plasterer. For example, when plaster will be 3mm thick, the trimless frame should stick out 3mm. After plaster it will be 0mm (frame / ceiling will be flat surface.)

If you have questions about installation feel free to contact us, we will assist you!

<sup>\*</sup> If the ceiling is already plastered, stick out 0mm and fill the gap between the ceiling and frame with fast-plaster.