


DMQ


Instruction Manual DMQ trimless Moon series

SKU: Q13310 (White)
Q13522 (Black)
Q13635 (Matt Gold)
Q13801 (Brushed Bronze)
Q13806 (Matt Bronze)

GU10 MAX 50W
220-240V / 50-60Hz
Cutout: 90mm 

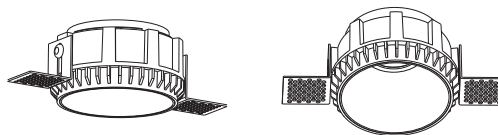

1. The installation must be done in strict accordance with the instruction and local guidelines
2. Please don't install the lighting in easily damage or unsteady ceiling
3. Please make sure the main power is switched during installation
4. Make sure there is no component loose

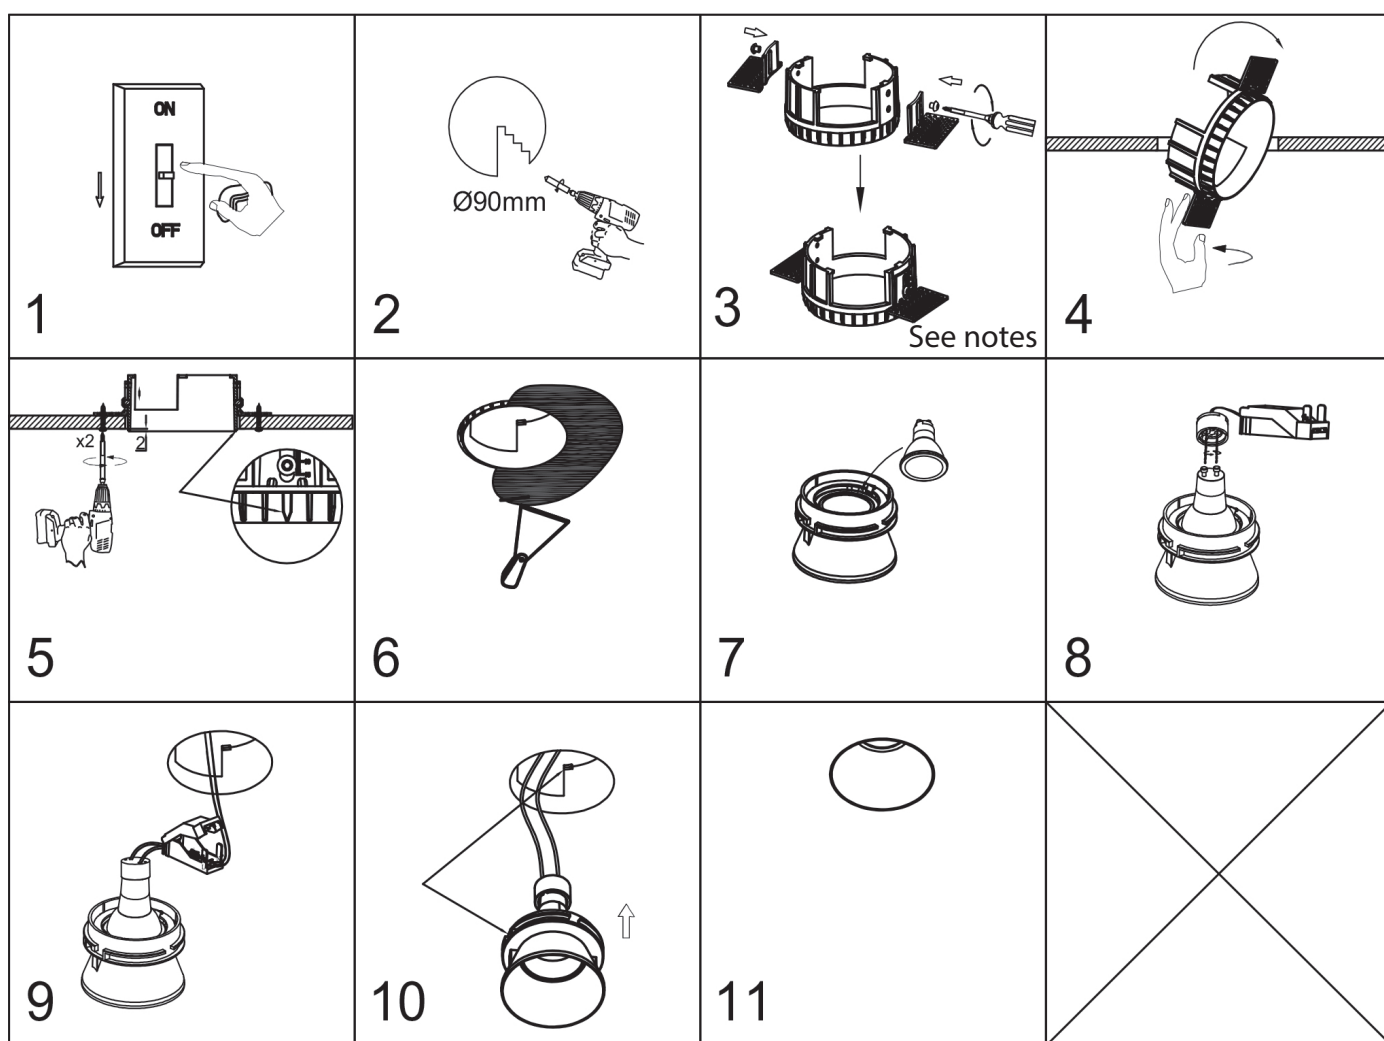

NOTES

- When plastering the ceiling after installation the trimless frame needs to be fitted 2-4 mm out the ceiling or plaster board, depending on the final plaster thickness. For example, when plaster will be 3mm thick, the trimless frame should stick out 3mm out of the ceiling / plaster board, exactly like a plaster stop bead. After plastering it will be 0mm (frame / ceiling will be flat surface.)
- If the ceiling is already plastered, use 0mm and fill the gap between the ceiling and frame with fast-plaster.
- After plastering / painting make sure the inside of the stuc-frame is clean and smooth, any plaster or painting remains must be removed before inserting the inside reflector frame.

EN - If you have questions about installation feel free to contact us, we will assist you!
NL - Bij vragen of onduidelijkheden neem gerust contact met ons op!