


## FOLD-OUT BED

		WHAT'S	IN THE	BOX?	
		А	<b>B</b> (Optional)	<b>C</b> (Optional)	<b>D</b> (Optional)
	70 cm	<b>16x</b> Bedframe	<b>2x</b> Side	<b>4х</b> Тор	
	80 cm	<b>16x</b> Bedframe	<b>2x</b> Side	<b>4х</b> Тор	
	90 cm	<b>16x</b> Bedframe	<b>2x</b> Side	<b>4х</b> Тор	
	140 cm	32x Bedframe	<b>2x</b> Side	<b>8x</b> Top <b>2</b>	<b>X</b> Connecting piece
I	160 cm	32x Bedframe	<b>2x</b> Side	<b>8x</b> Top <b>2</b>	<b>X</b> Connecting piece
	180 cm	32x Bedframe	2x Side	8x Top 2	<b>X</b> Connecting piece

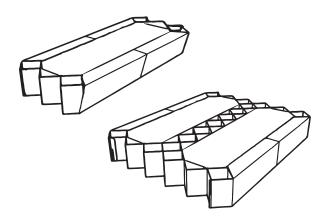

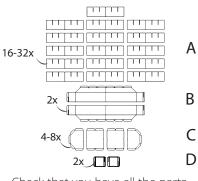


Check that you have all the parts Have. The edge B, top C and the connector D are optional.

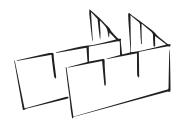




Lay out 2 pieces of bed A as shown, with the incisions facing up.

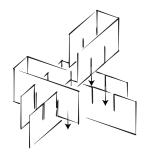


5

Attach the folded parts to the laid out pieces as shown. Part A is now finished.

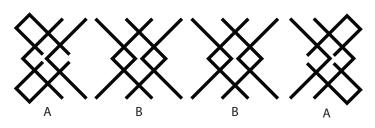


The frame consists of 4 parts. The front and rear parts (A) are the same, and are connected to the middle parts (B). See image for the overview.






Fold 2 pieces mirrored over 1 of the 2 inner incisions. Apply a fold line yourself.






To make part B, lay out 2 bed pieces A as shown, with the incisions facing up.



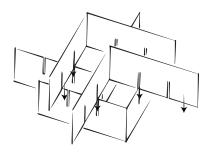


Add 2 pieces over the laid out pieces as shown. Part B is now finished.

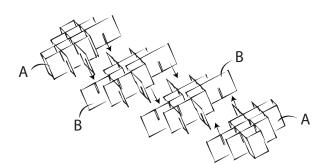


8.


Now attach the 2 parts A and the 2 parts B to each other by sliding the slots together.



The frame should now look something like this from above. If this is incorrect, check that your parts A and B are correct.

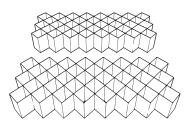



10. Steps 10 to 13 are only for beds wider than 90cm Repeat steps 1 to 9 and place the 2 beds next to each other.

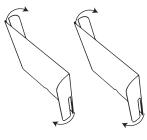




Fold the connectors as above.

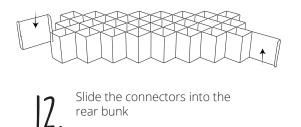


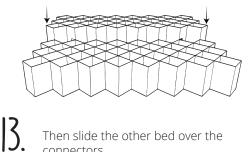

Then slide the other bed over the connectors.



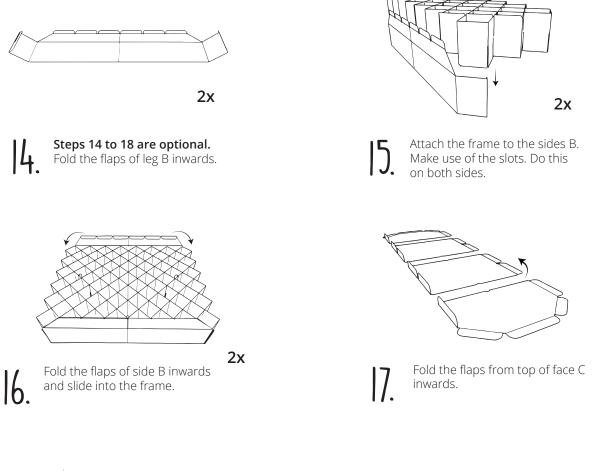

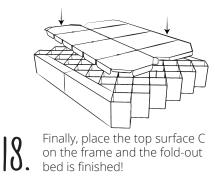

Prefer instructions in a different language? Check www.KarTent.com/instructions

