

Charger/Delite FRONTGEPÄCKTRÄGER (VBK0286)

Mit dem optionalen Frontgepäckträger ist bei Charger, Supercharger, Delite und Superdelite ab Modelljahr 2020 die Mitnahme von zusätzlichem Gepäck möglich.

⚠ Die Anleitung besteht aus zwei Teilen (Montageanleitung und Bedienungsanleitung). Bedienungsanleitung dem Kunden aushändigen.

Lieferumfang

- 1x Frontgepäckträger
- 4x Linsenkopfschraube brüniert (M6x45, TX30, ISO 7380 A2) ②
- 2x Aluminiumspacer 13x6,5x6 ③
- 4x Aluminiumspacer 12x6x3,5 ④
- 4x Unterlegscheibe (d=6,4mm DIN 125 A2) ⑤
- 4x Fabric Haltebolzen ⑥

Montage

1. Vorhandene 4 Haltebolzen ① demontieren (Abb. 1).
2. Breite der oberen und unteren Befestigungspunkte messen (Abb. 2).
3. Frontgepäckträger mit Schrauben ② und passenden Spacern befestigen (Abb. 3, 4 und 5).
Anzugsmoment 6 – 8 Nm.



Abb. 1: Fabric Haltebolzen



Abb. 2: Breite messen

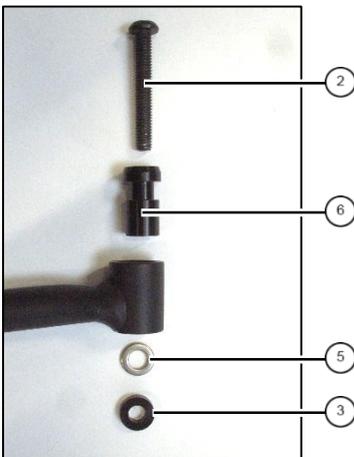


Abb. 3: Breite 71 mm

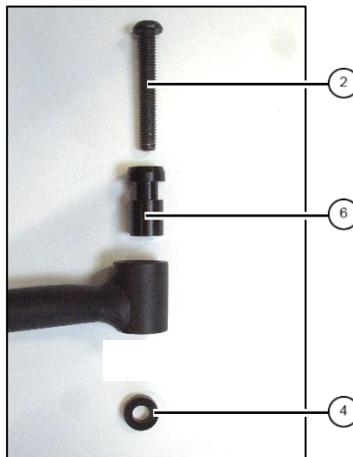


Abb. 4: Breite 78 mm

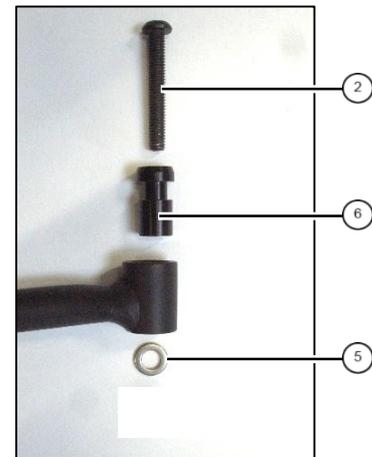


Abb. 5: Breite 82,5 mm

4. Lenkung ganz nach links und rechts bewegen.

⚠ Dabei dürfen keine Züge und Leitungen gestrafft oder geknickt werden!

Gepäckträger benutzen

Stellen Sie vor jeder Fahrt folgende Punkte sicher:

- Das Gepäck muss sicher auf dem Gepäckträger befestigt sein.
- Die maximale Gepäckträgerbelastung von 5 kg und das zulässige Gesamtgewicht des E-Bikes dürfen nicht überschritten werden.
- Am Gepäckträger dürfen keine Änderungen vorgenommen werden.

WARNUNG

Unfallgefahr. Falsch oder unzureichend befestigtes Gepäck kann sich während der Fahrt lösen. Sie können stürzen und sich verletzen.

 Mit Beladung ändert sich das Fahrverhalten des E-Bikes. Der Bremsweg verlängert sich.

- ➔ Machen Sie eine Probefahrt mit Beladung abseits des Straßenverkehrs, um sich auf das veränderte Fahrverhalten und den verlängerten Bremsweg einzustellen.

Stand: 02.10.2019 17:01:00

Charger/Delite FRONT CARRIER (VBK0286)

The optionally front carrier allows transporting additional luggage on the Charger and Delite models since model year 2020.

⚠ This manual consists of two parts (assembly instruction and manual).
Hand the manual over to the customer.

Scope of delivery

- 1x Front carrier
- 4x Round head screw gun metal finish (M6x45, TX30, ISO 7380 A2) ^②
- 2x Aluminum spacer 13x6,5x6 ^③
- 4x Aluminum spacer 12x6x3,5 ^④
- 4x Washer (d=6,4mm DIN 125 A2) ^⑤
- 4x Fabric bolt ^⑥

Assembly

1. Demount 4 existing bolts ^① (fig. 1).
2. Measure width of upper and lower mounting points (fig. 2)
3. Mount front carrier with bolts ^② and suitable spacers (fig. 3, 4 and 5).

Tightening torque 6 – 8 Nm.



fig. 1: Fabric bolts



fig. 2: width measurement

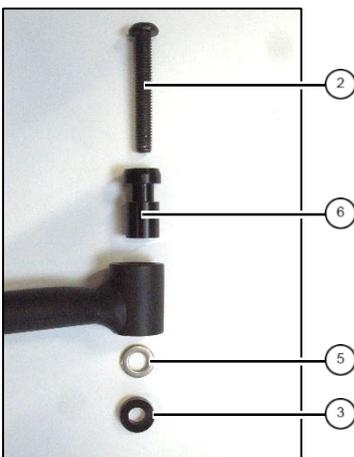


fig. 3: width 71 mm

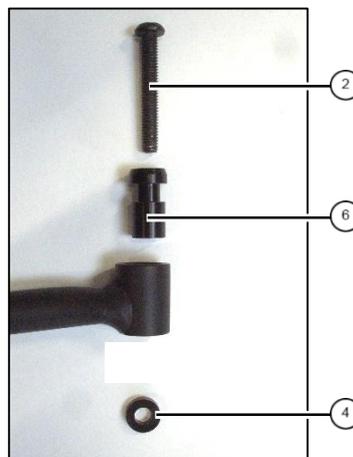


fig. 4: width 78 mm

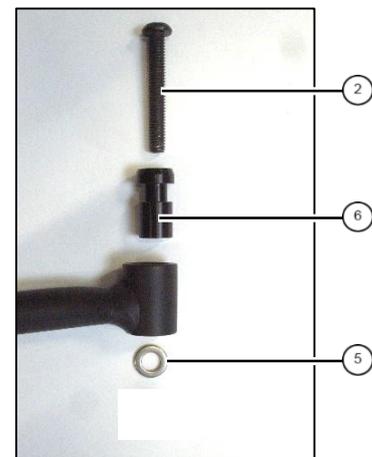


fig. 5: width 82,5 mm

Turn steering to left and right side.

⚠ Cables and brake hoses shall not stretched or kinked!

Datei: VBK0286-C-D-Frontgepäckträger-191002.docx

Carrier use

Before each ride the following items must be checked:

- The luggage must be fixed securely and nothing should get caught by the wheels.
- The maximum loading capacity of the carrier is 5kg. The maximum load of the E-Bike shall not exceeded.
- Any kind of modification at the carrier is prohibited.

 **WARNING**

Luggage can loosen if not fixed securely and may cause heavy accidents!

 When riding with a full load, the handling is affected and it takes longer to stop.

➔ Be sure to make some handling and braking test prior to heading into traffic.