

Montageanleitung Handel

Lieferumfang

1x Fronttasche
4x Unterlegscheibe



Hinweis:

Für eine sichere Handhabung wird empfohlen, die Fronttasche nur zu nutzen, wenn der Frontscheinwerfer unter dem Frontgepäckträger montiert ist.

Montage an Frontgepäckträger bei folgenden Modellen:

Delite, Delite mountain, Superelite, Superelite Mountain, Homage, Charger, Charger 3, Supercharger 2, Multicharger, Nevo GT, Nevo 3

Schritt 1

Die zwei Klett-Laschen ① am Boden der Tasche öffnen und durch die Aussparungen ② an den Seiten des Frontgepäckträgers hindurchschieben (Abb.1).

Schritt 2

Klett-Laschen umklappen und durch Andrücken der Klettflächen wieder an der Taschenseite fixieren (Abb.2).



Montagehinweis:

Zur Diebstahl-Prävention, kann die Tasche bei Bedarf am Boden des Gepäckträgers verschraubt werden.

Schritt 3

Beim Befestigen der Fronttasche auf dem Frontgepäckträger darauf achten, dass die Löcher ③ in den Laschen der Tasche (Abb.3) sich über die Schrauben ④ an der Unterseite des Frontgepäckträgers legen (Abb.4).

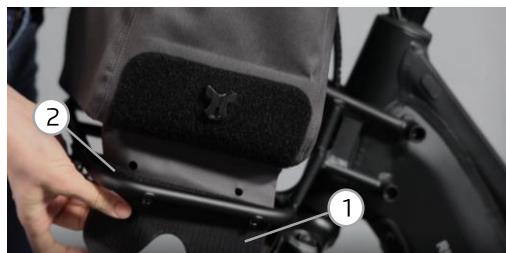


Abb. 1 / fig. 1



Abb. 3 / fig. 3

Assembly Instruction Dealer

Scope of delivery

1x front bag
4x flat washer



Note:

For your safety, please use the front bag only, when the headlight is mounted underneath the Front Rack.

Assamby on Front Rack of following Models:

Delite, Delite mountain, Superelite, Superelite Mountain, Homage, Charger, Charger 3, Supercharger 2, Multicharger, Nevo GT, Nevo 3

Step 1

Open the two velcor flaps ① on the bottom of the bag and slide them trough the openings ② on the sides of the front rack (fig.1).

Step 2

Flip over the velcro flaps and push them to he sides of the bag to temporarily fix them (fig.2)



Tip:

For theft prevention the bag can be screwed to the downside of the front rack.

Step 3

When assambling the bag to the front rack, make sure to position the holes ③ in the flaps of the bag (fig.3) over the screws ④ on the downside of the front rack (fig.4).



Abb. 2 / fig. 2



Abb. 4 / fig. 4

Montageanleitung Handel

Schritt 4

Alle vier Schrauben ⑤ zur Befestigung der Fronttasche aus dem Frontgepäckträger herausschrauben (Abb.5).

Schritt 5

Die Schrauben mit den beigelegten Unterlegscheiben ⑥ ausrüsten, durch die Löcher der Fronttasche stecken und fest mit dem Frontgepäckträger verschrauben (Abb.6).



Hinweis:

Die Unterlegscheiben verhindern, dass die Tasche einfach von dem Frontgepäckträger abgenommen werden kann. Ein Diebstahl kann so erschwert, jedoch nicht ausgeschlossen werden.

Montage an Frontgepäckträger bei folgenden Modellen:

Roadster, Cruiser

Schritt 1

Die zwei Klett-Laschen ⑦ am Boden der Tasche öffnen und durch die Gummibänder ⑧ des Frontgepäckträgers hindurchschieben (Abb.7).

Schritt 2

Klett-Laschen umklappen und durch Andrücken der Klettflächen wieder an der Taschenseite fixieren (Abb.8).



Abb. 5 / fig. 5



Notice:

The washers prevent an easy disassembly of the front bag. A theft is aggravated, but not impossible.

Assembly on Front Rack of following Models:

Roadster, Cruiser

Step 1

Open the two velcro flaps ⑦ on the bottom of the bag and slide them through the elastic cords ⑧ of the front rack (fig.7).

Step 2

Flip over the velcro flaps and push them to the sides of the bag to temporarily fix them (fig.8).



Abb. 6 / fig. 6



Abb. 7 / fig. 7



Abb. 8 / fig. 8

Assembly Instruction Dealer

Step 4

Remove all four screws underneath the front rack, to assemble the front bag (fig.5).

Step 5

Equip the four screws with the provided washers ⑥, insert them through the fabric holes in the front rack and tighten the screws (fig.6).



Notice:

The washers prevent an easy disassembly of the front bag. A theft is aggravated, but not impossible.