


1


DQ
WALL • SUPPORT

DQ-17-1294

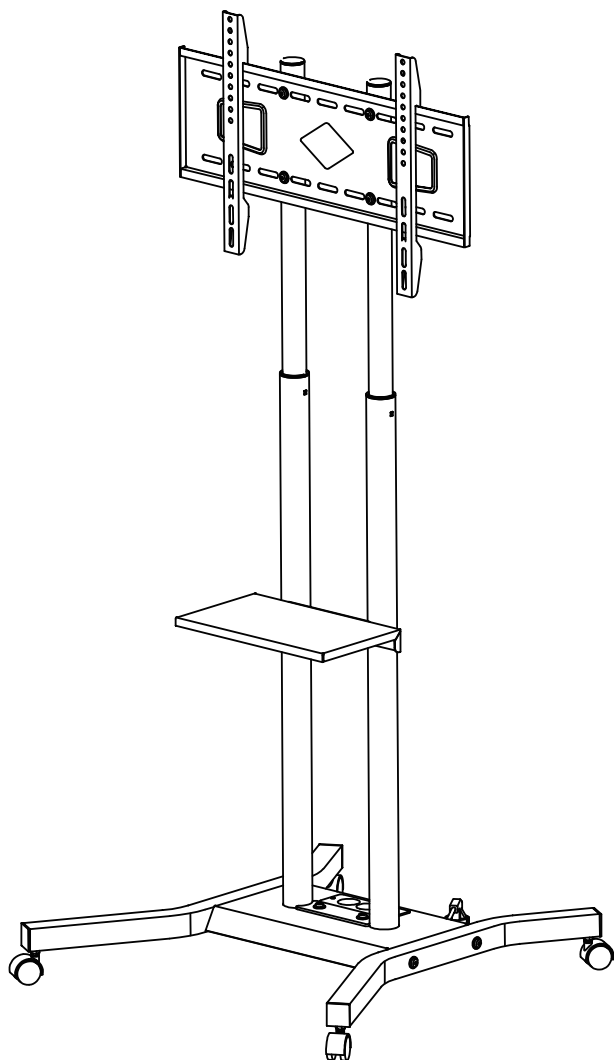




A (x1)



B (x1)



C (x1)



D (x1)



E (x2)



F (x1)



G (x4)

M8*55mm
H (x4)M8*20mm
I (x4)M6*10mm
J (x2)M4*12mm
K (x2) $\Phi 20 \times \Phi 8.5 \times 1.5\text{mm}$
L (x12) $\Phi 16 \times \Phi 6.5 \times 1.5\text{mm}$
M (x2)M8法兰带齿螺母
N (x4)


O (x1)



P (x1)

S5x27x77
Q (x1)

screws list



M8*30*4PCS



M6*25*4PCS

 $\Phi 6 \times \Phi 16 \times 1.5 \times 4\text{PCS}$  $\Phi 8 \times \Phi 16 \times 1.5 \times 4\text{PCS}$ 

M5*40*2PCS



M4*25*4PCS

 $\Phi 15 \times \Phi 8.5 \times 5 \times 4\text{PCS}$  $\Phi 15 \times \Phi 8.5 \times 10 \times 4\text{PCS}$

R*kit (TV Screws)




base
A (x1)



wheels
G (x4)



wrench14mm
P (x1)


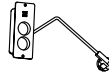


socket
F (x1)




M4*12mm
K (x2)

base (A) Use an open-end wrench (O) to lock the four universal wheels at the bottom. (G) . Then use two screws (K) to secure the socket strip (F) on the front of the base..

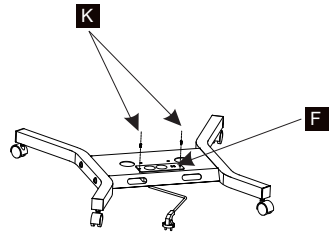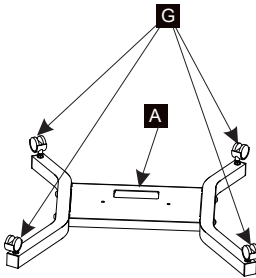

STEP 2



B (x1)



M8*20mm
I (x4)





$\Phi 8 \times \Phi 16 \times 1.5$ 4PCS



S5x27x77
Q (x1)



Insert the vertical pole and telescopic pole (B) into the base (A) and secure them with four screws (I) and four washers (L). After being secured, hold button the telescopic pole can adjust up and down in height.

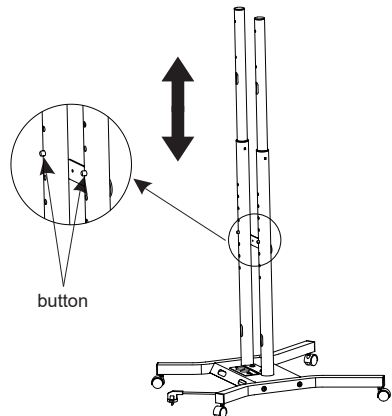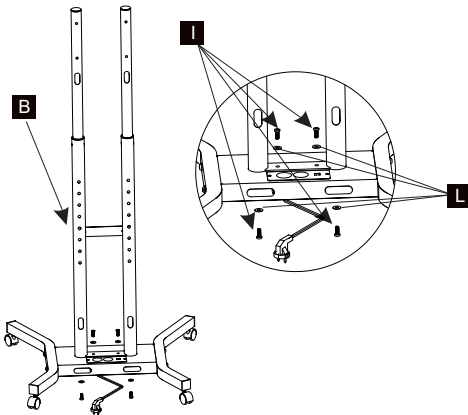


STEP 3





C (x1)

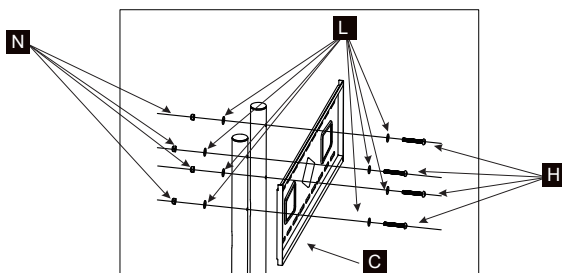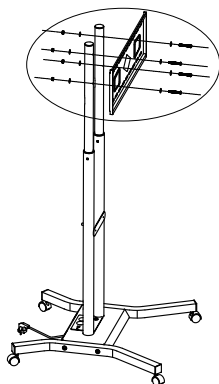M8*55mm
H (x4)M8法兰带齿螺母
N (x4) $\Phi 20^* \Phi 8.5^* 1.5\text{mm}$
L (x8)S5x27x77
Q (x1)

STEP 4



D (x1)

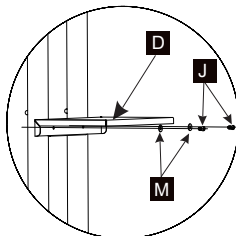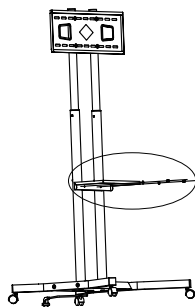M6*10mm
J (x2) $\Phi 16^* \Phi 6.5^* 1.5\text{mm}$
M (x2)S5x27x77
Q (x1)

Secure the intermediate plate (D) to the main pipe with two screws (J) and two washers (M).

STEP 5



E (x2)

R*kit (TV Screws)



M8*30*4PCS



M6*25*4PCS



Φ6*Φ16*1.5*4PCS



Φ8*Φ16*1.5*4PCS



M5*40*2PCS



M4*25*4PCS



Φ15*Φ8.5*5*4PCS



Φ15*Φ8.5*10*4PCS

Screw the two wall-mount brackets (E) onto the TV using the screws in the screw bag (R*kit) that are suitable for the size of the TV. Then hang the wall-mount brackets on the assembled bracket and finally secure them with the two M5*40(R) screws in the screw bag.

