



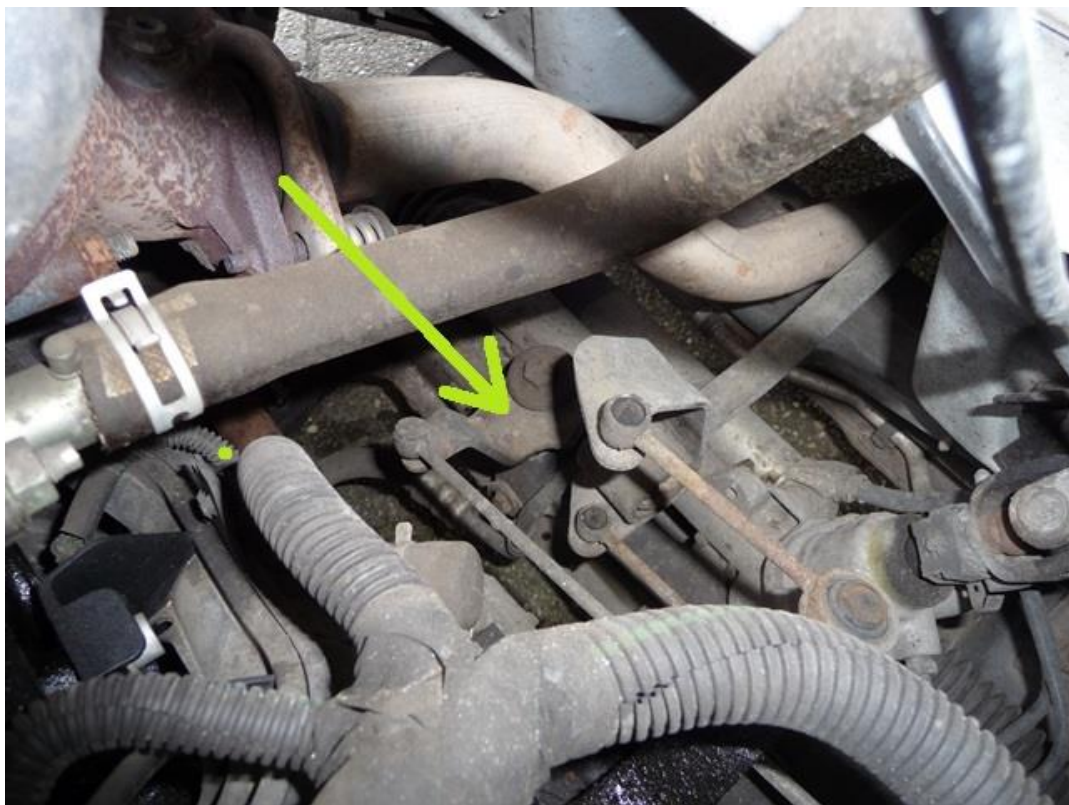

**Fitting instructions for 4H-TECH® N-Shift Short Shifter.**

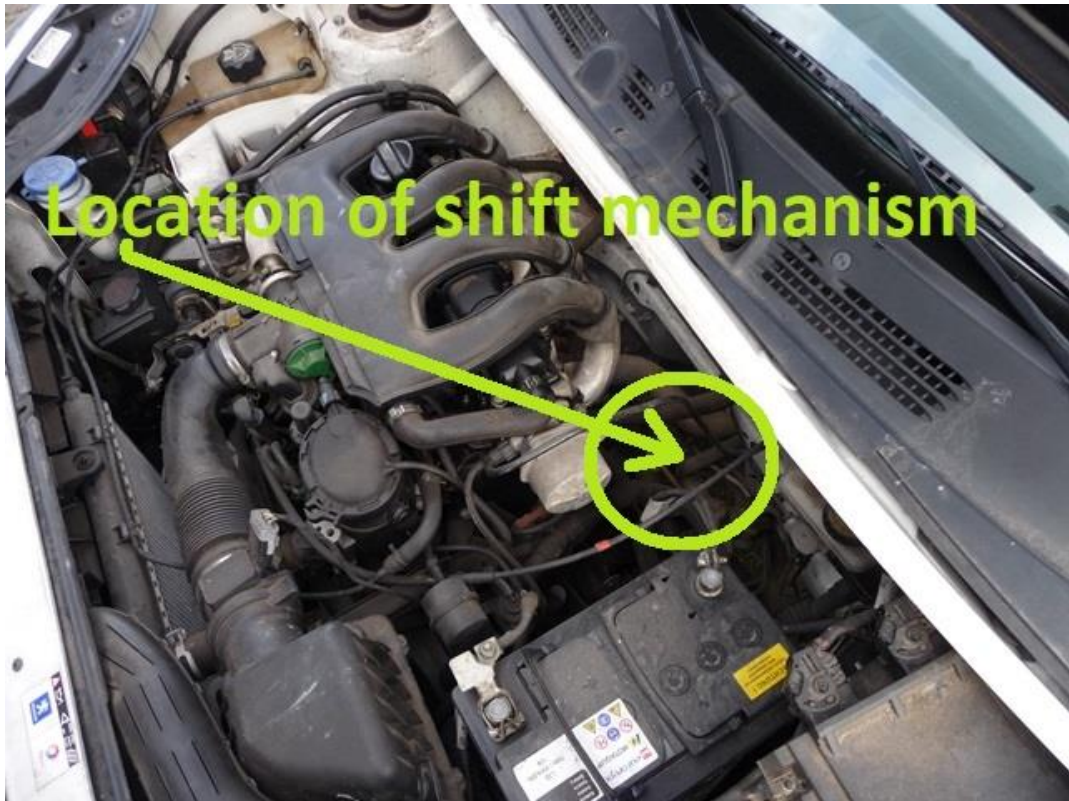

**This guide shows the fitment of the N-Shift on a Peugeot 206 with 1.4i engine. The same work does apply to all other engine and car versions for which the N-Shift can be used.**





**Use a 10mm spanner to unclip the shift bar from the bolt head.**







**Unscrew the bolt which holds the OEM shifter. (use 16mm spanner)  
Remove shifter arm and undo it from all components.**





**Fit all parts on the new 4H-TECH shifter arm.**



**Grease up the new shifter joint, and fit it to the shift mechanism in the engine bay.**



**click the shift bar on new shifter by pressing it on the bolt head, and tighten the bolt with a 16mm spanner.**

Make a test drive and check if all gears can be engaged. Enjoy 35% less gear throw and that lovely ``Klick-klack`` feeling. Now your car shifts like a racecar, but always remember to be safe and don't get overly excited on the public roads out there.

**Protected Design. This Short Shifter is 100% developed, tested and produced by 4H-TECH®, and is protected under international copyright, trademark and other laws.**

**4H-TECH**