



INSTRUCTIONS WALL MURALS & WALLPAPER

NON-WOVEN WALLPAPER

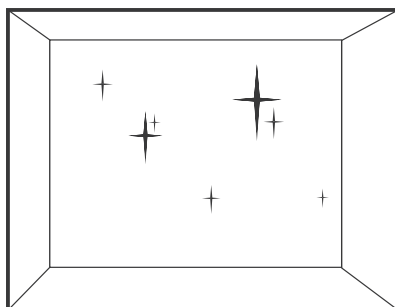


Step 1

Make sure the surface is suitable for this type of wallpaper. Prepare the surface by making sure it is dry, clean, smooth, stable, evenly absorbent, and of uniform colour with no old paint or rust showing through. Also make sure all old nails and screws are removed beforehand.

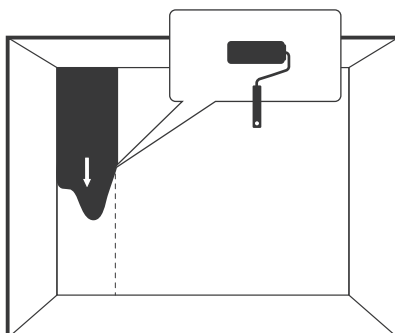


Step 2

We recommend 'Ready & Roll for non-woven wallpaper' by Perfax, or similar wallpaper glue from other brands. Apply the glue directly to the wall, slightly wider than the wallpaper sheet (48.7 cm).

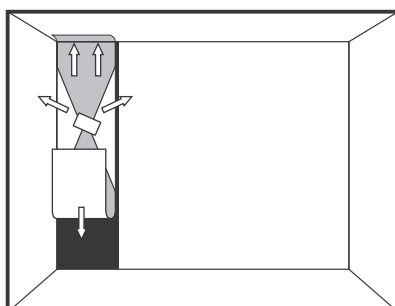

Step 3


Make sure the first sheet is placed vertically plumb by using a spirit level. Place the sheet directly onto the pasted wall, using a wallpaper spatula to make sure there are no air bubbles.

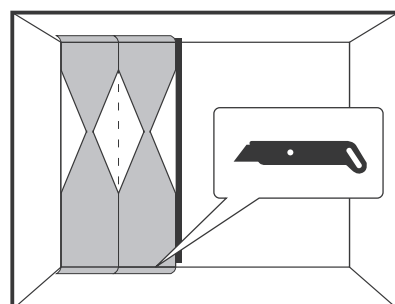

Step 4

The sheet can now be trimmed at the top and bottom.

Place subsequent sheets one by one, using a wallpaper spatula to ensure that joins are tightly butted and there is no overlap. Make sure the pattern or image matches up with the previous sheet.

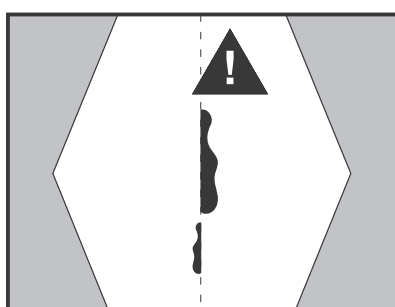

Step 5

Carefully pat away excess glue with a piece of kitchen paper. Be extra careful with dark colours! Because the wallpaper is 'uncoated' (no protective layer) the ink can come off slightly.

It is important to avoid excessive heat or draughts when hanging and drying wallpaper, otherwise the wallpaper dries too quickly and this can lead to gapping at seams.