


INSTALLATIE VOORSCHRIFT


DOUCHEDEUR IN NIS mat -black

1100(1080-1100)x2000mm

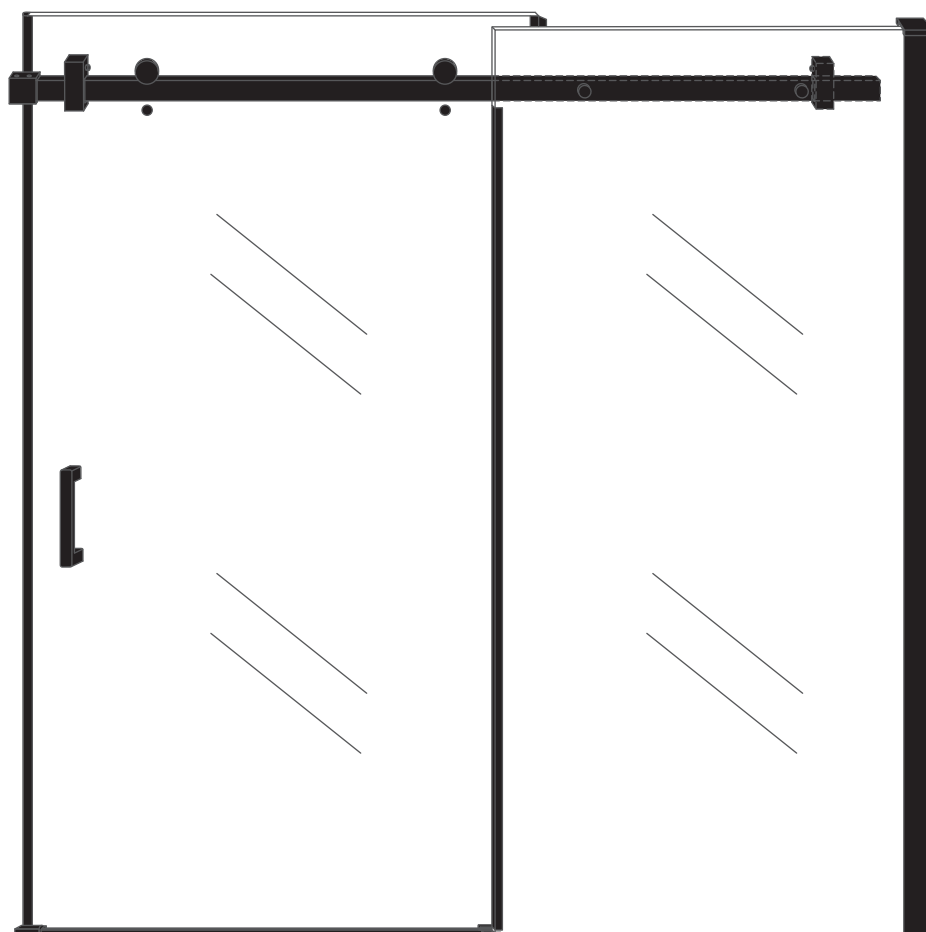




Zonder NANO

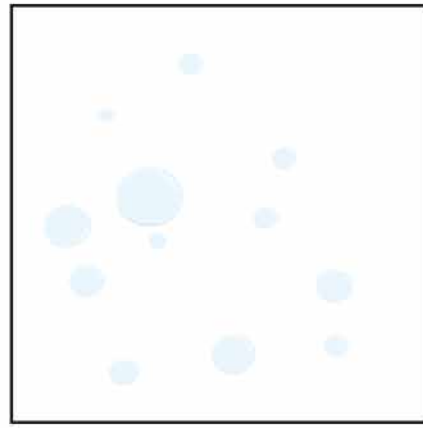


NANO



beide zijden NANO behandeld

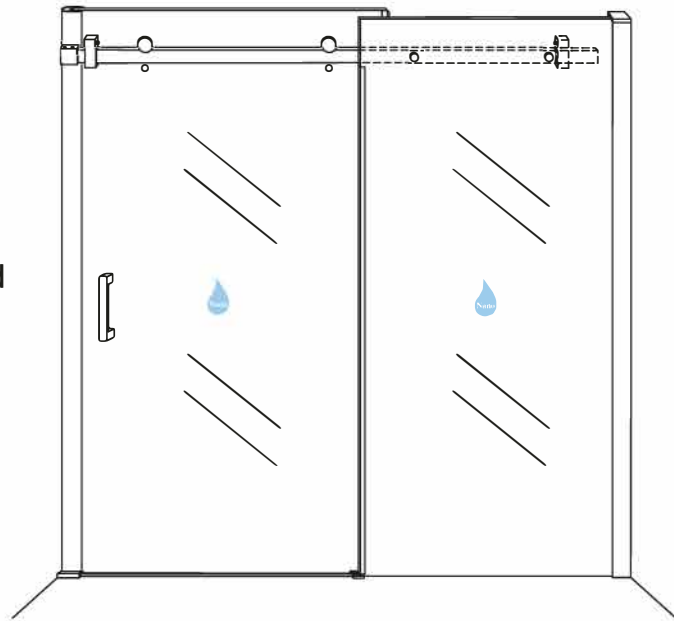



beide zijden NANO behandeld

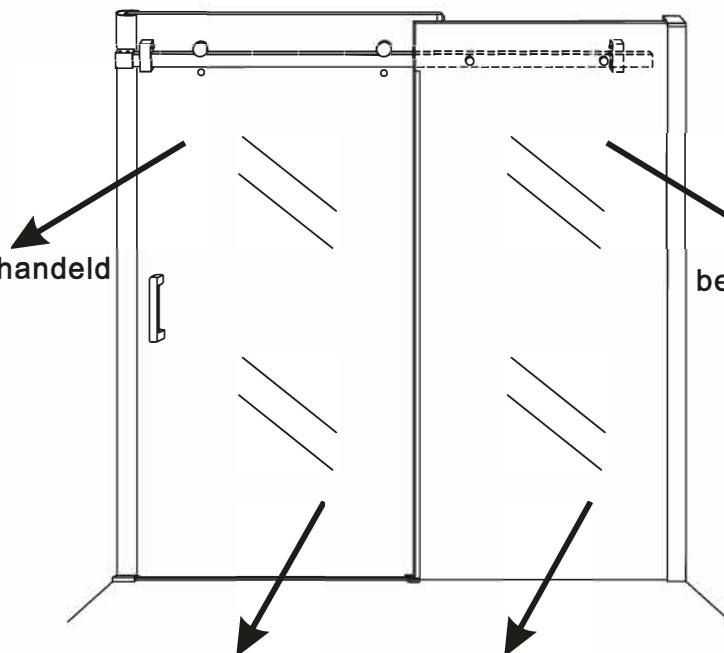


beide zijden NANO behandeld


NANO garantie: 5 jaar bij normaal gebruik

LET OP: gebruik geen grove scherpe voorwerpen, zoals schuursponsjes of staalwol om het glas schoon te maken.

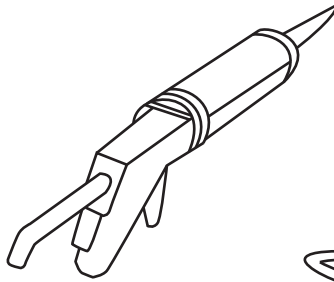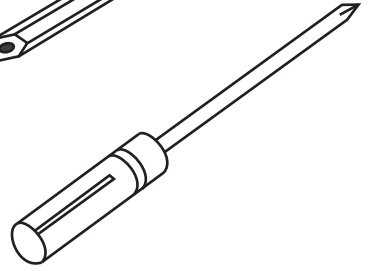

1














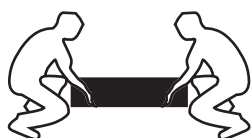



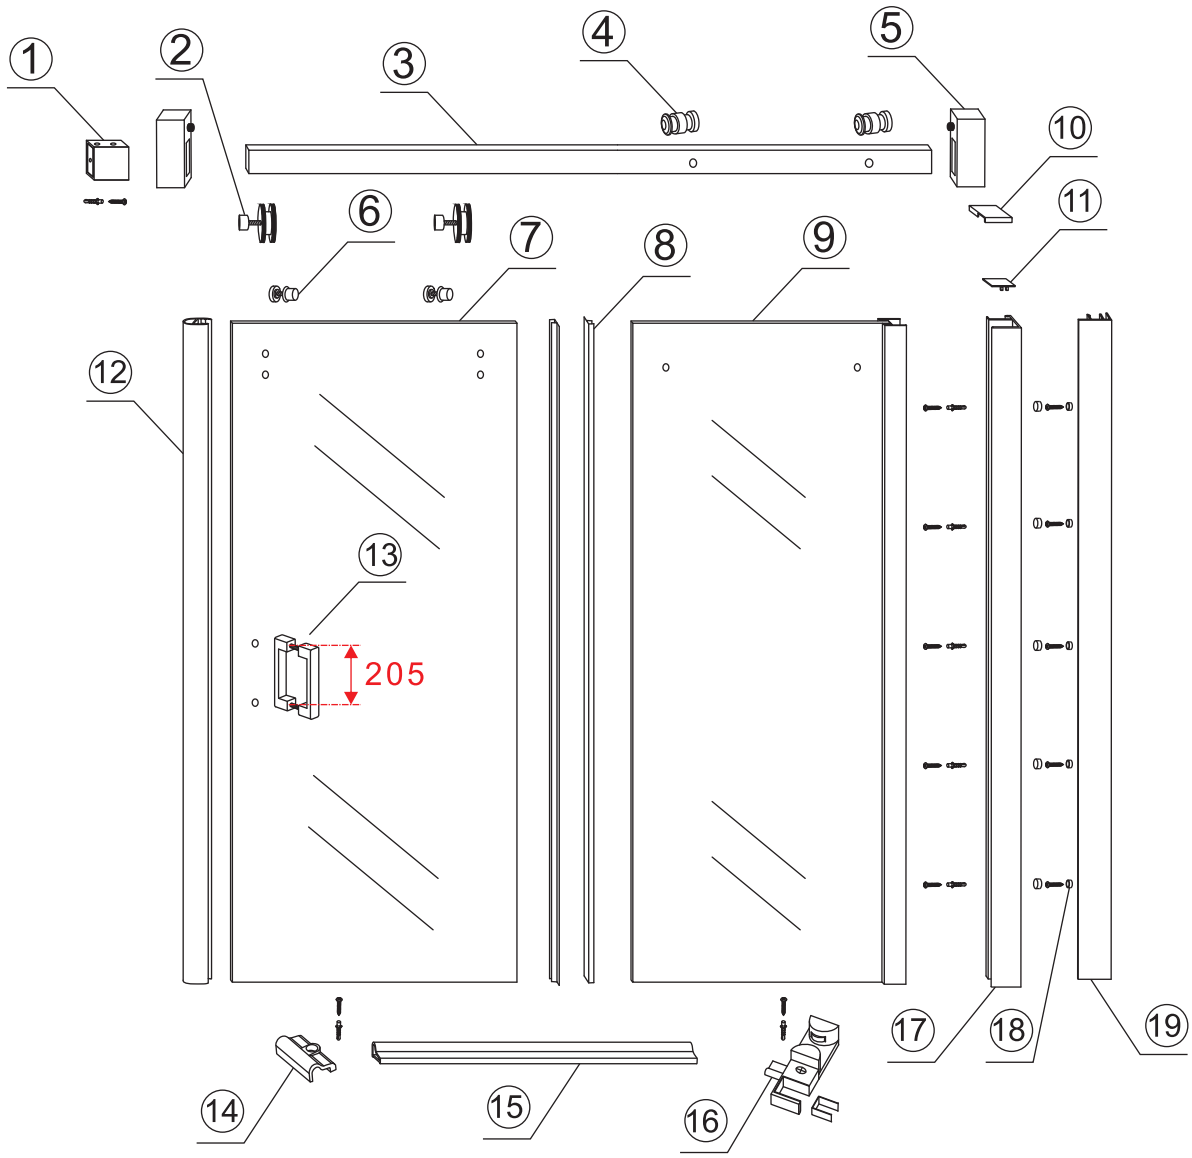


- | | | | | | | |
|------|------|------|------|------|------|------|
| ① X1 | ② X2 | ③ X1 | ④ X2 | ⑤ X2 | ⑥ X2 | ⑦ X1 |
| ⑧ X2 | ⑨ X1 | ⑩ X1 | ⑪ X1 | ⑫ X1 | ⑬ X1 | ⑭ X1 |
| ⑮ X1 | ⑯ X1 | ⑰ X1 | ⑱ X5 | ⑲ X1 | X13 | X8 |






3

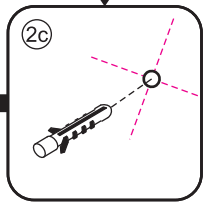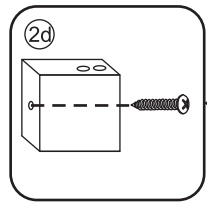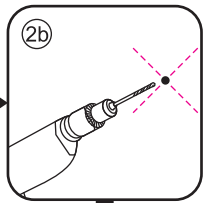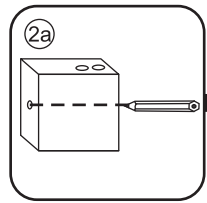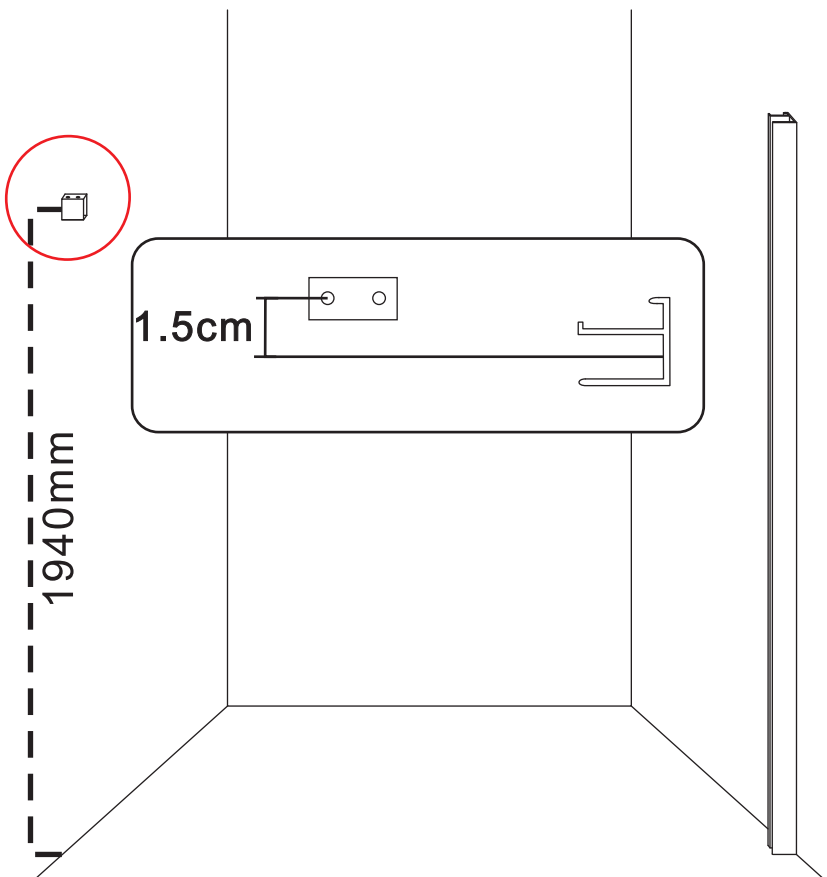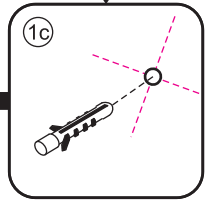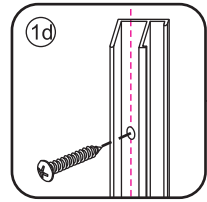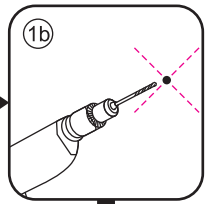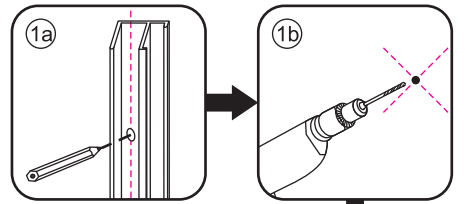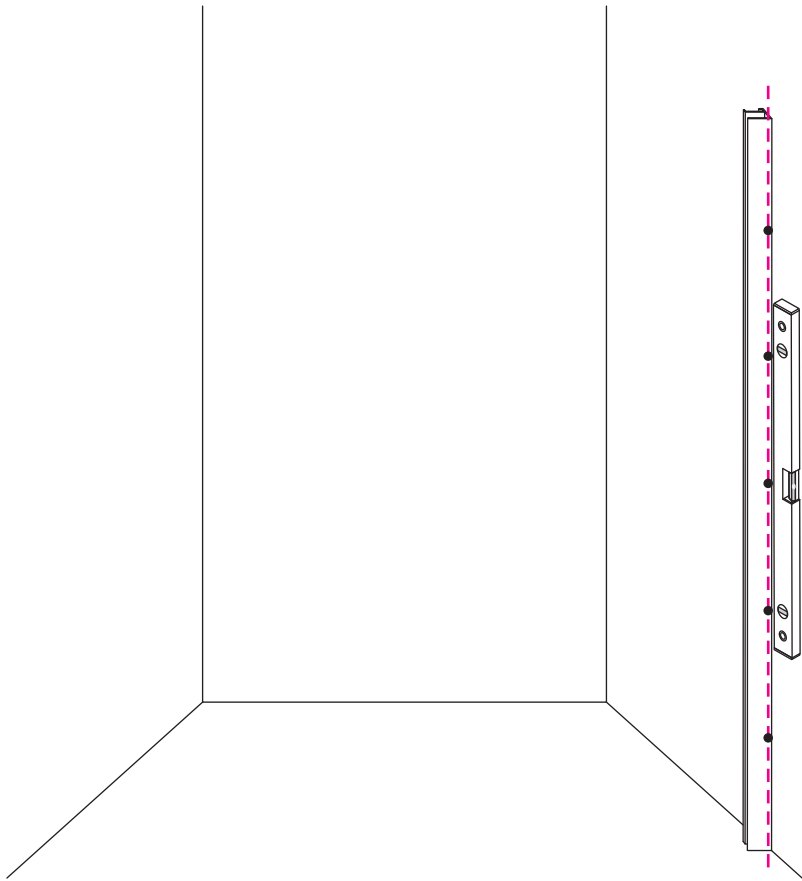


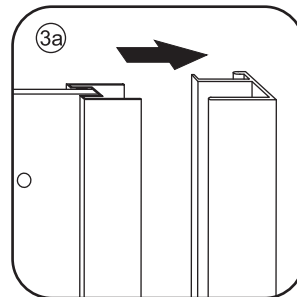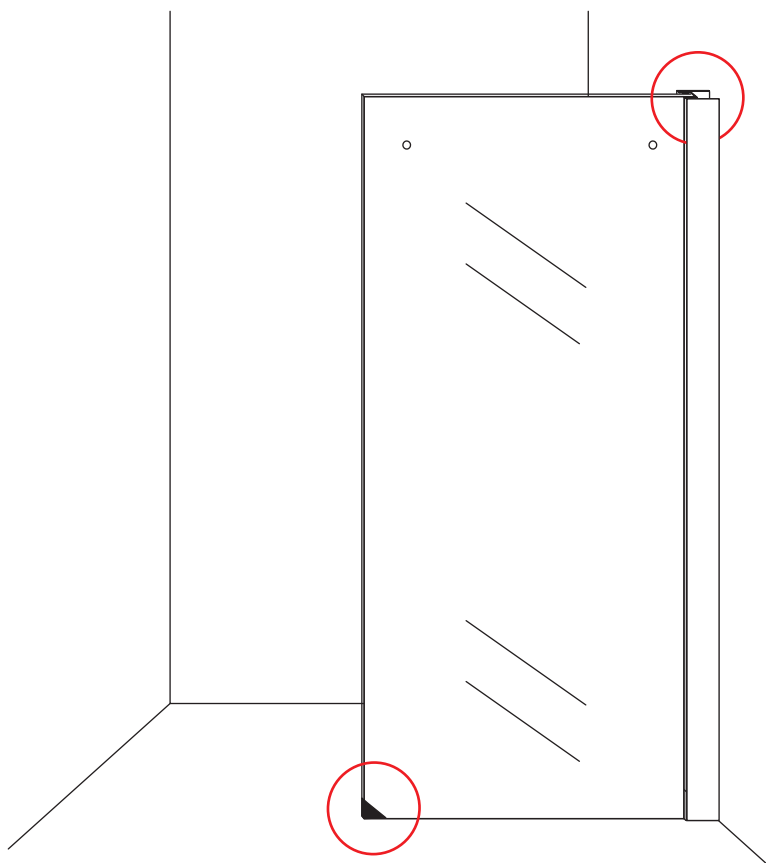

 **Verwijder de zwarte hoekbeschermers pas als de cabine helemaal is geïnstalleerd!**

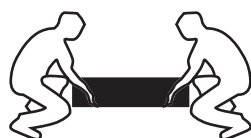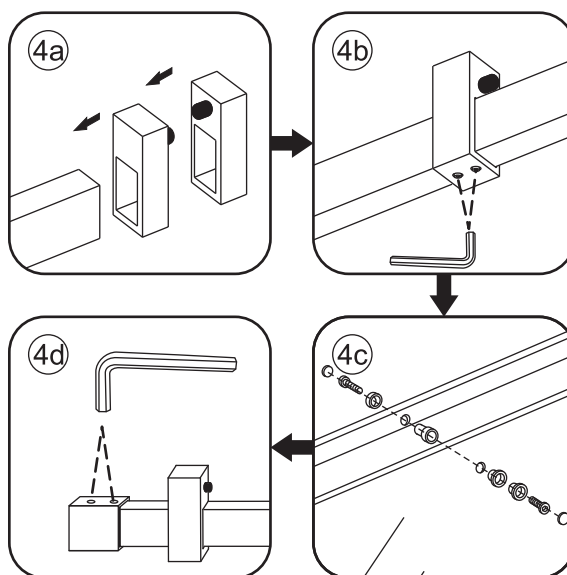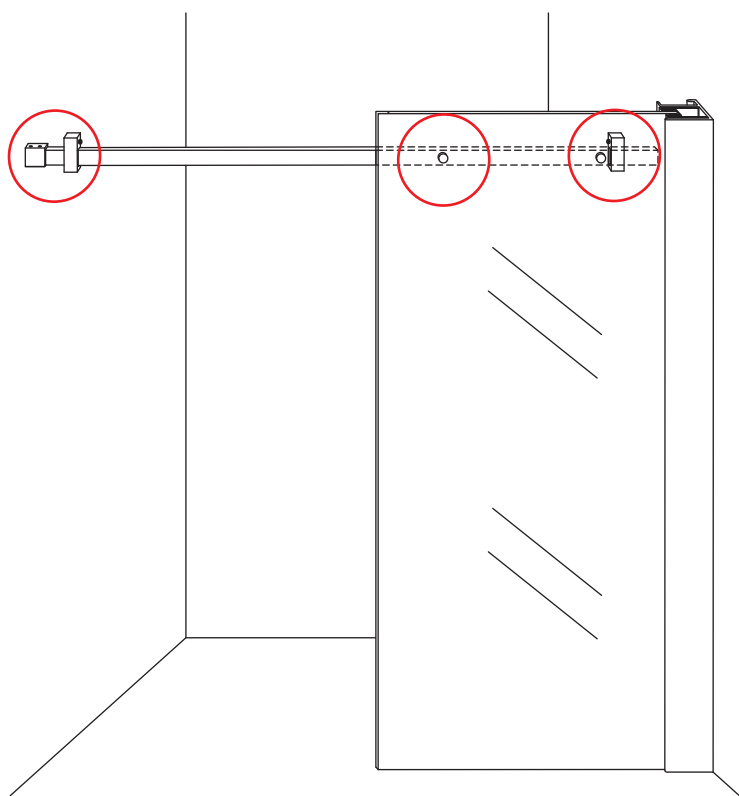

5

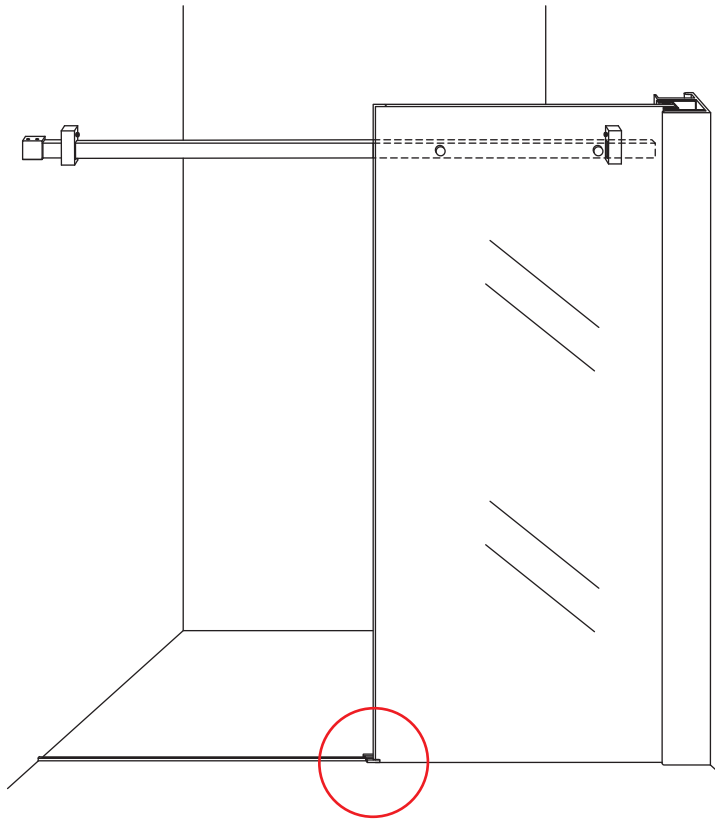

5a: Marking the door frame with a pencil.

5b: Drilling a hole in the door frame.


5c: Drilling a hole in the cabinet side panel.

5d: Inserting a screw into the door frame.

5e: Inserting a screw into the cabinet side panel.

5f: Tightening the screw with a screwdriver.

Φ6mm X1
4x25 X1
Φ6x30 X1

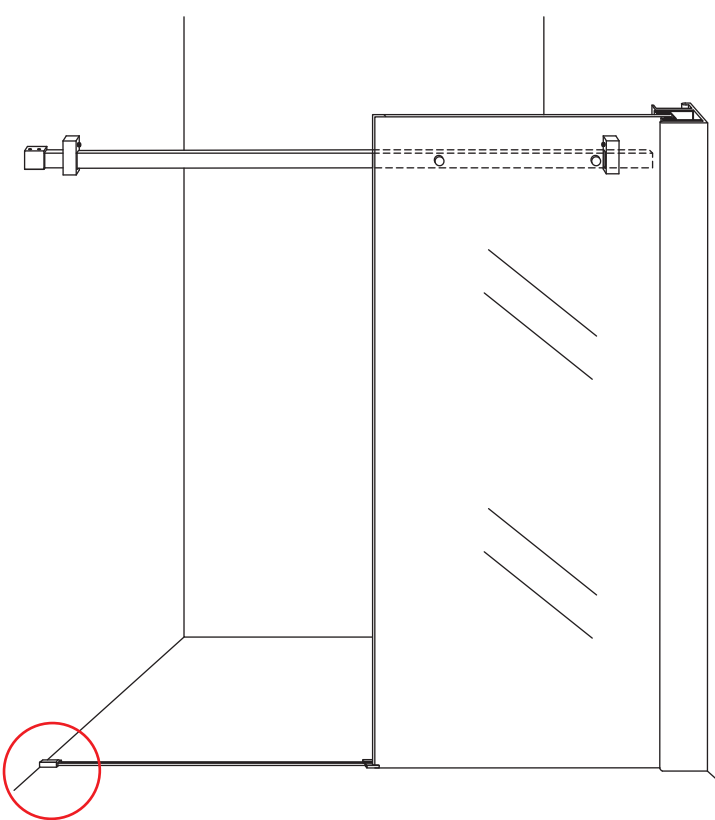

6a: Marking the door frame with a pencil.

6b: Drilling a hole in the door frame.

6c: Drilling a hole in the cabinet side panel.












6d: Inserting a screw into the door frame.




6e: Inserting a screw into the cabinet side panel.

Φ6mm X1
4x25 X1
Φ6x30 X1




Φ6mm X1
4x25 X1
Φ6x30 X1

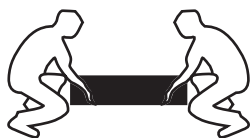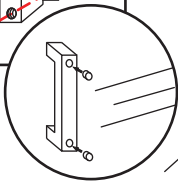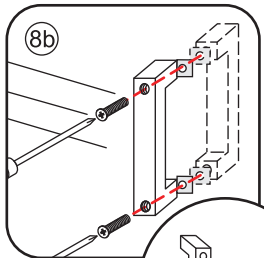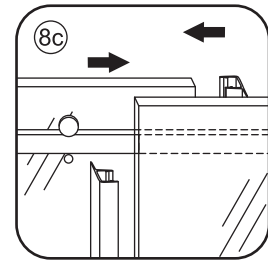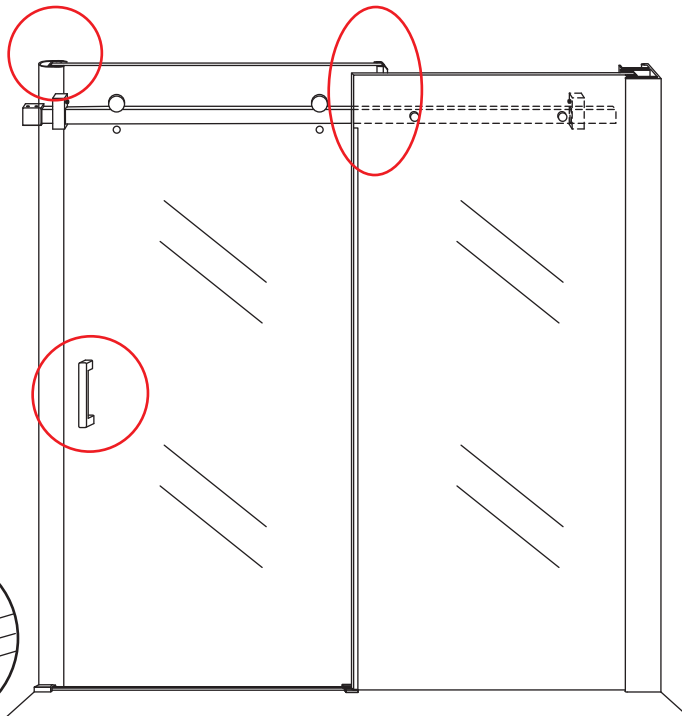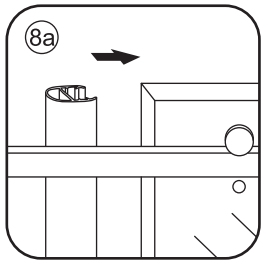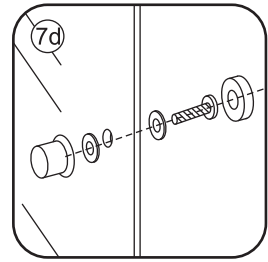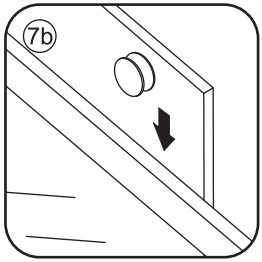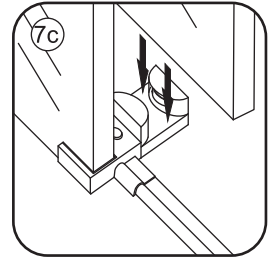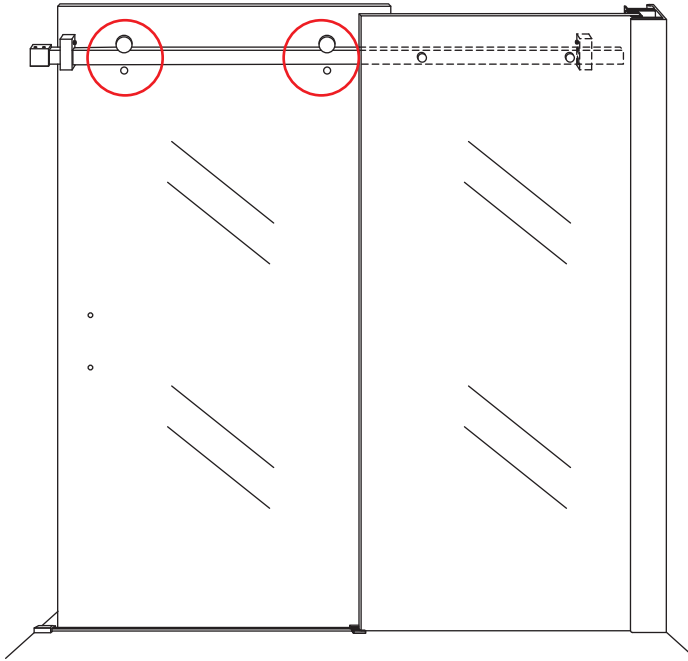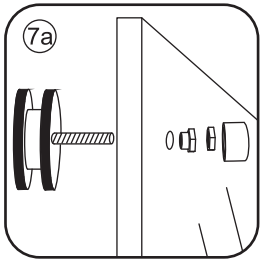

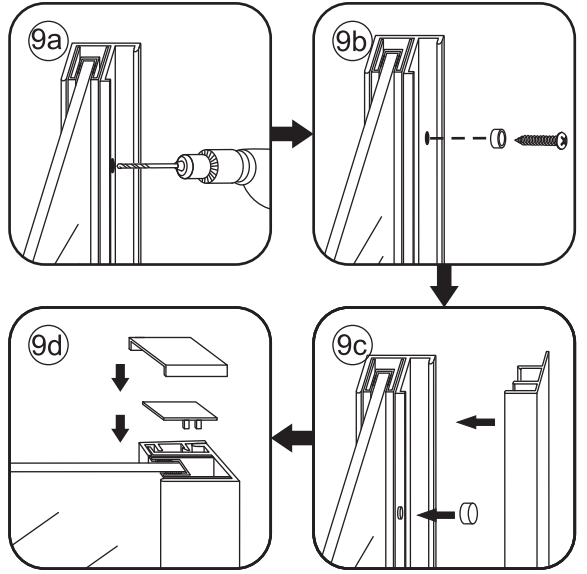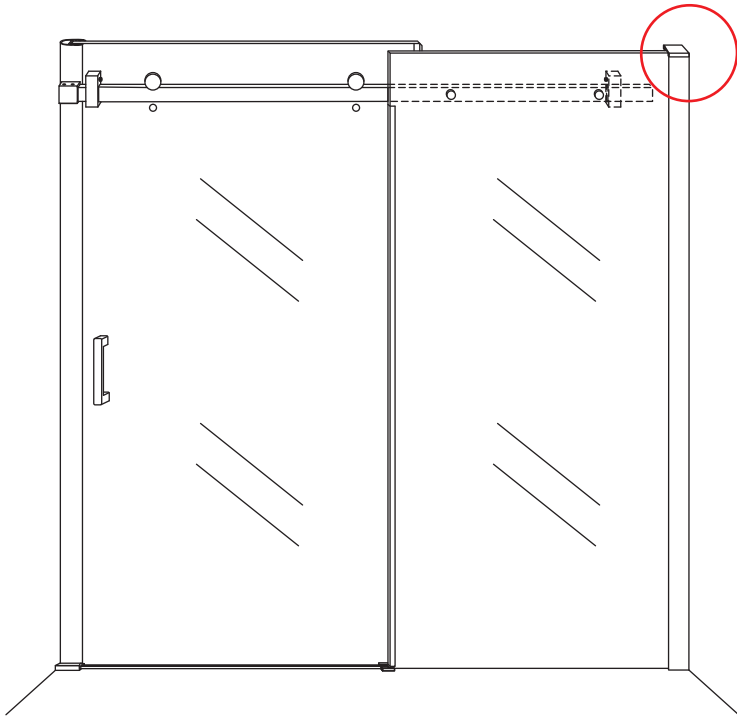


Φ 3mm



X2

4x16

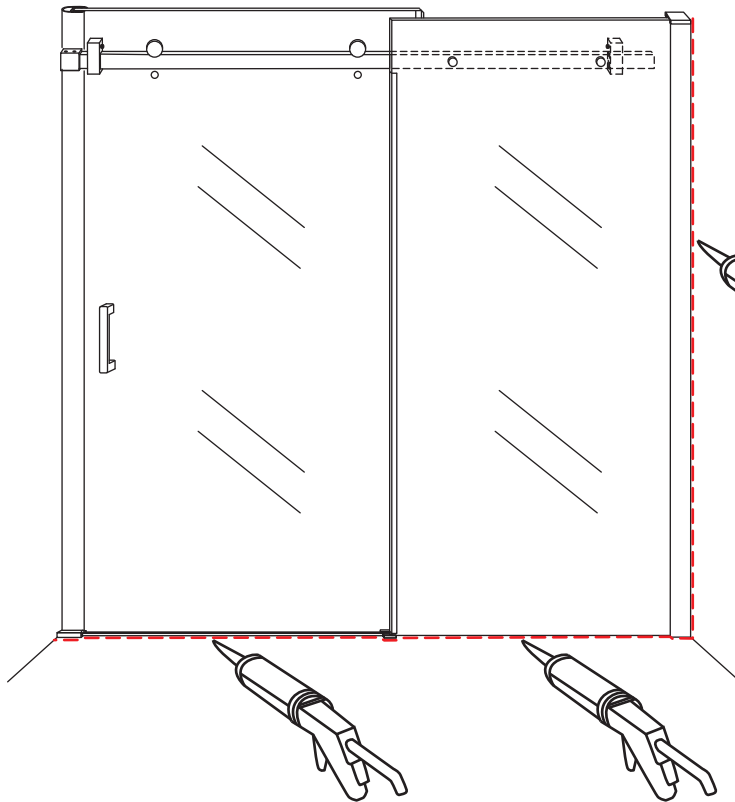

**Voorzie alleen de
buitenzijde van de
cabine van siliconenkit.**



24 uur

