
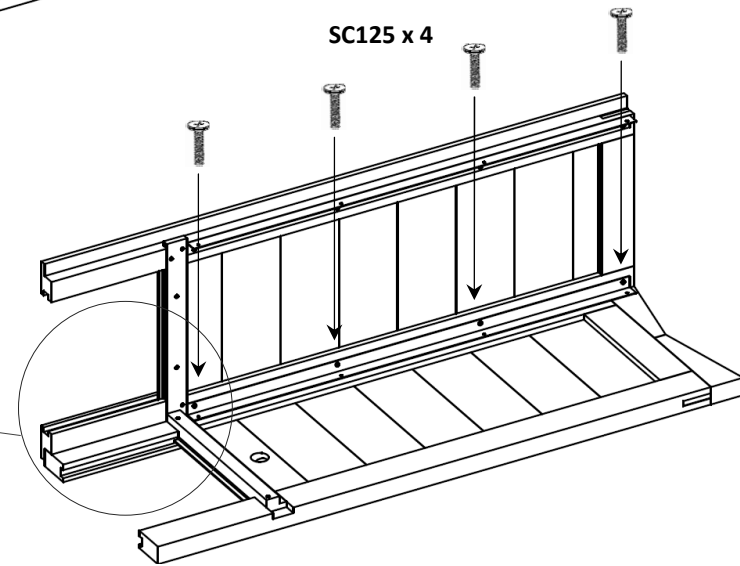
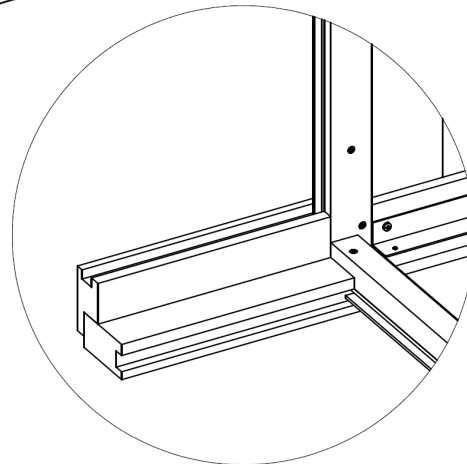
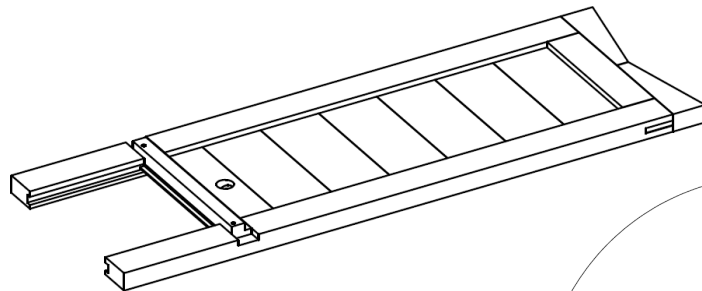
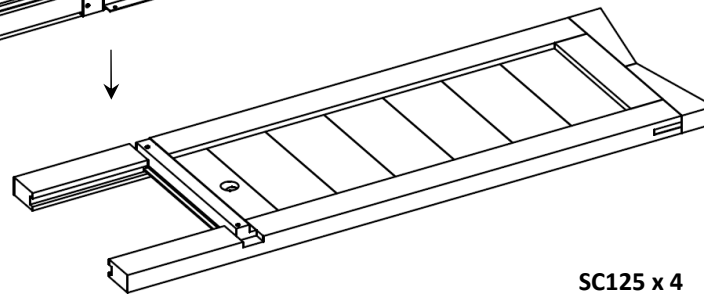






gabriel ash

the water butt assembly instructions



1. Fix side panels

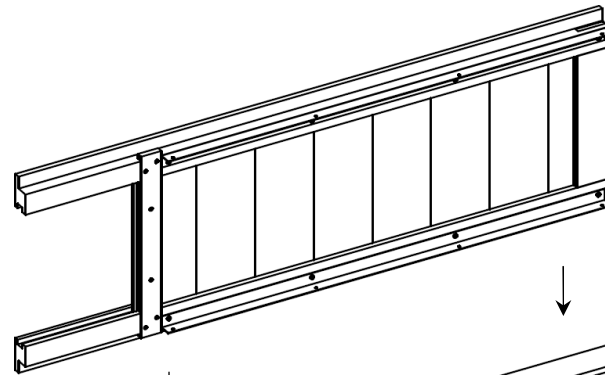


Fix side panels (cont.)

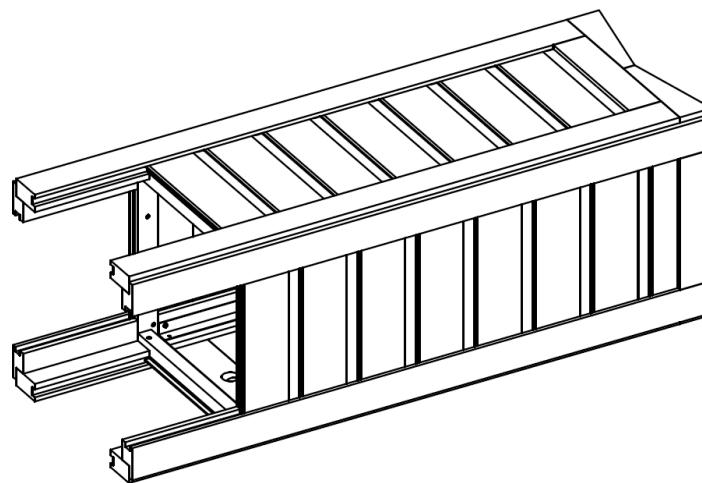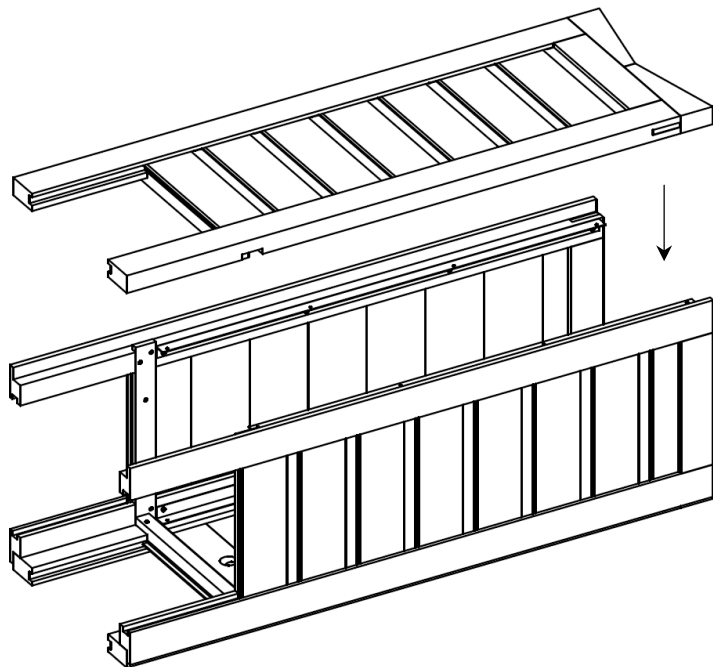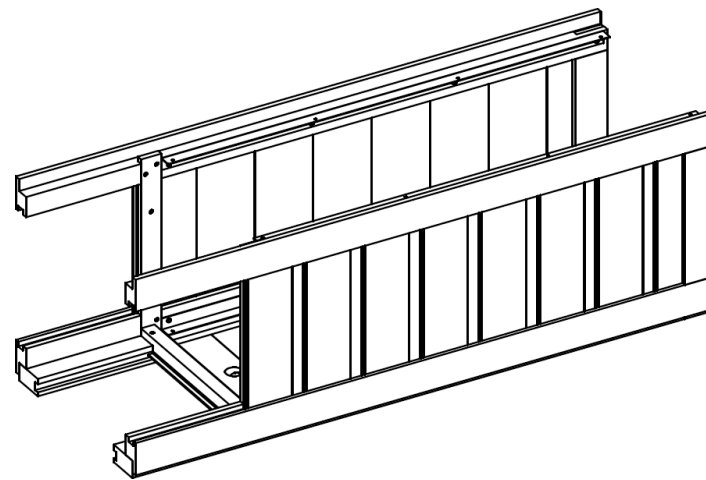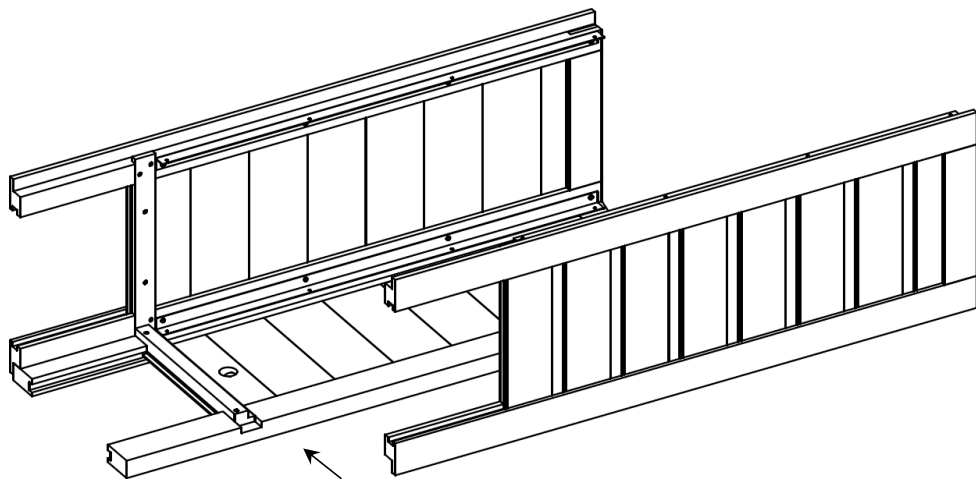


2. Fix Feet

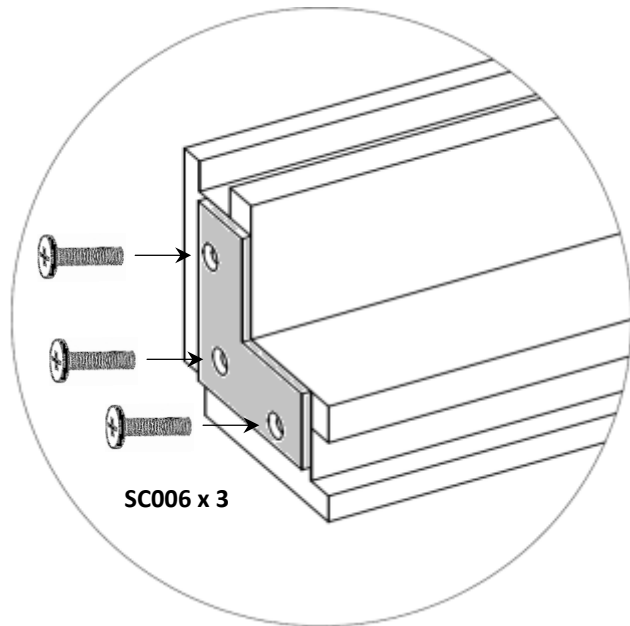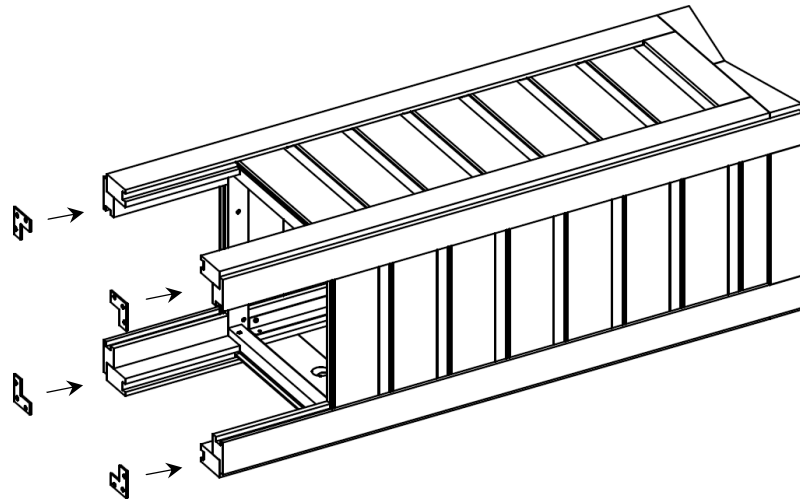


3. Locate Base Boards into Position

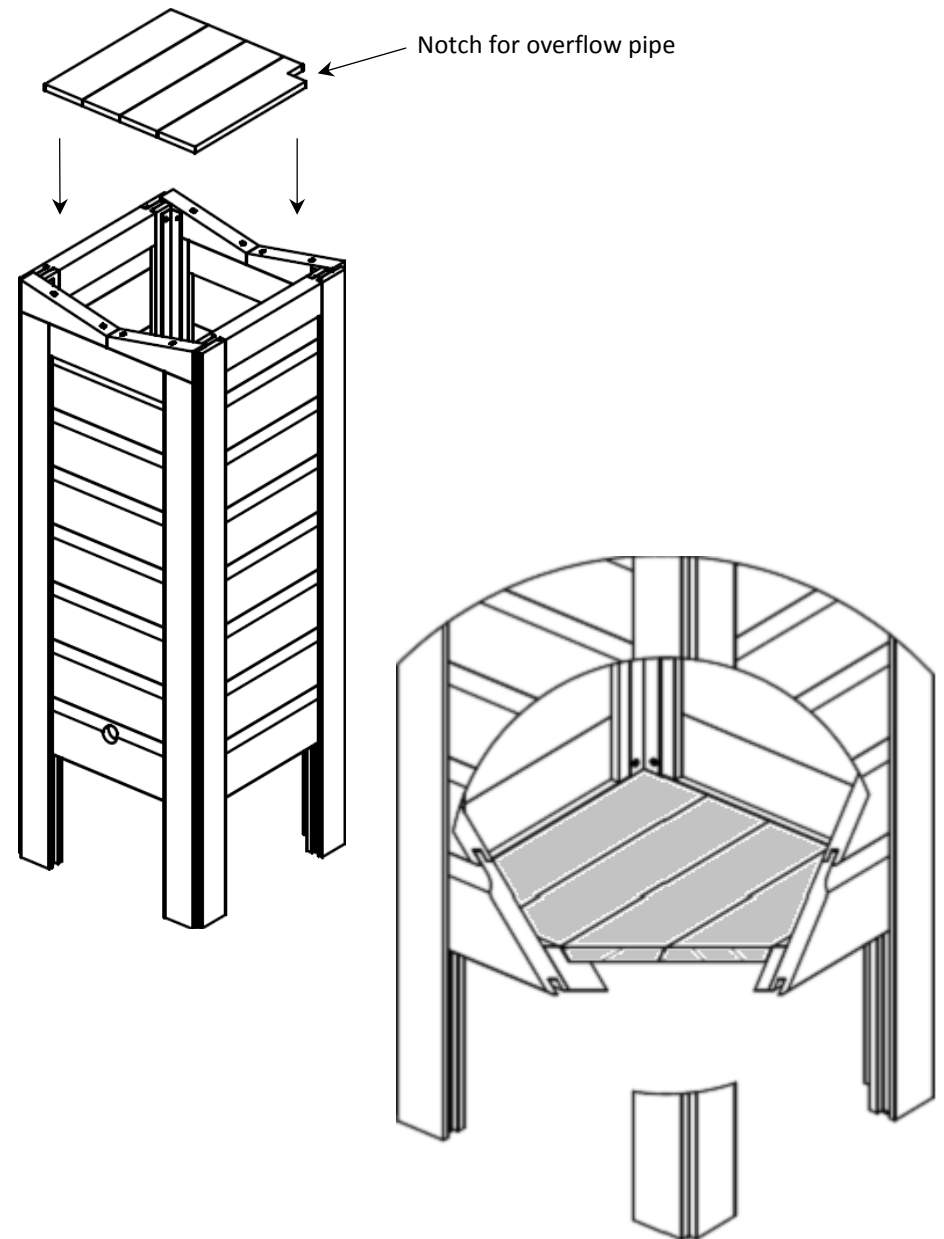


4. Fit Overflow Pipe

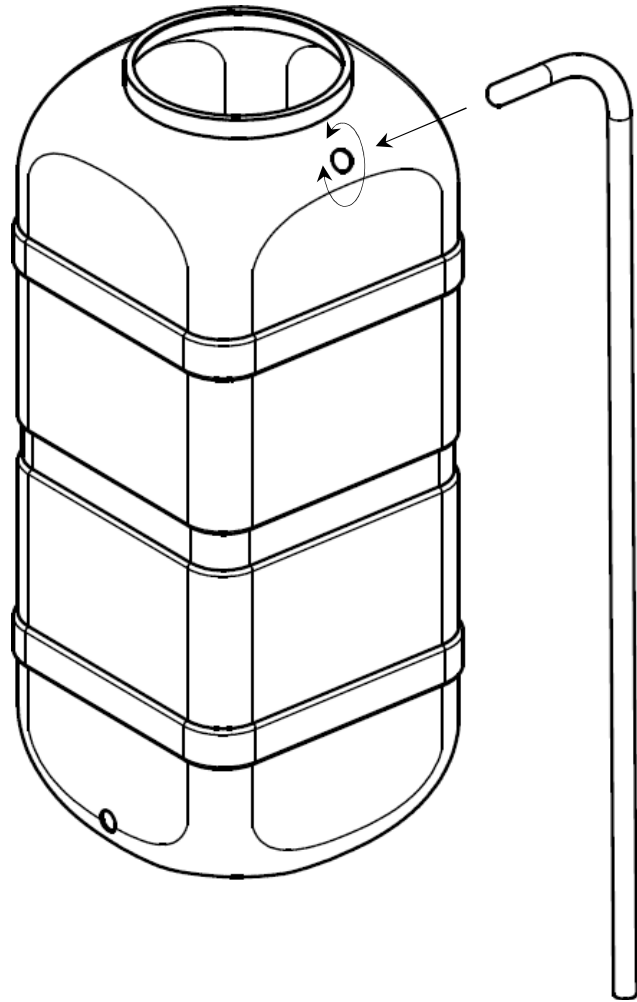

5. Locate Tank

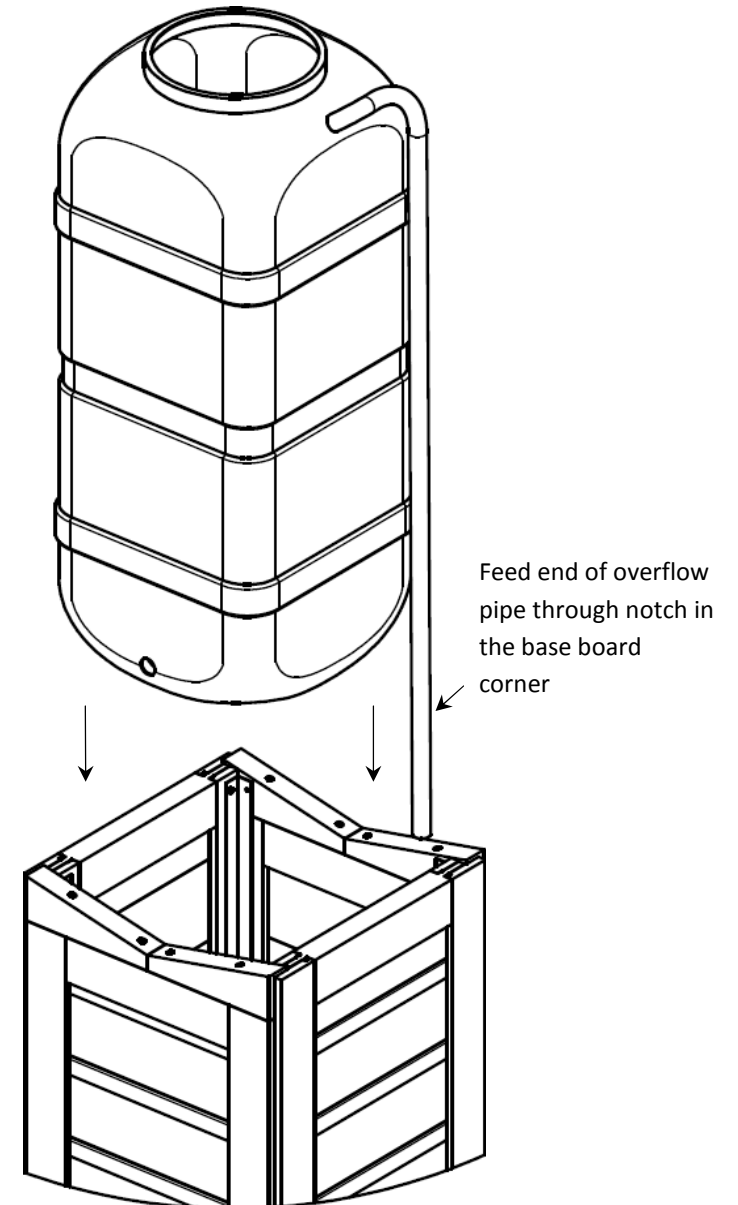

6. Fit Tap and Lid

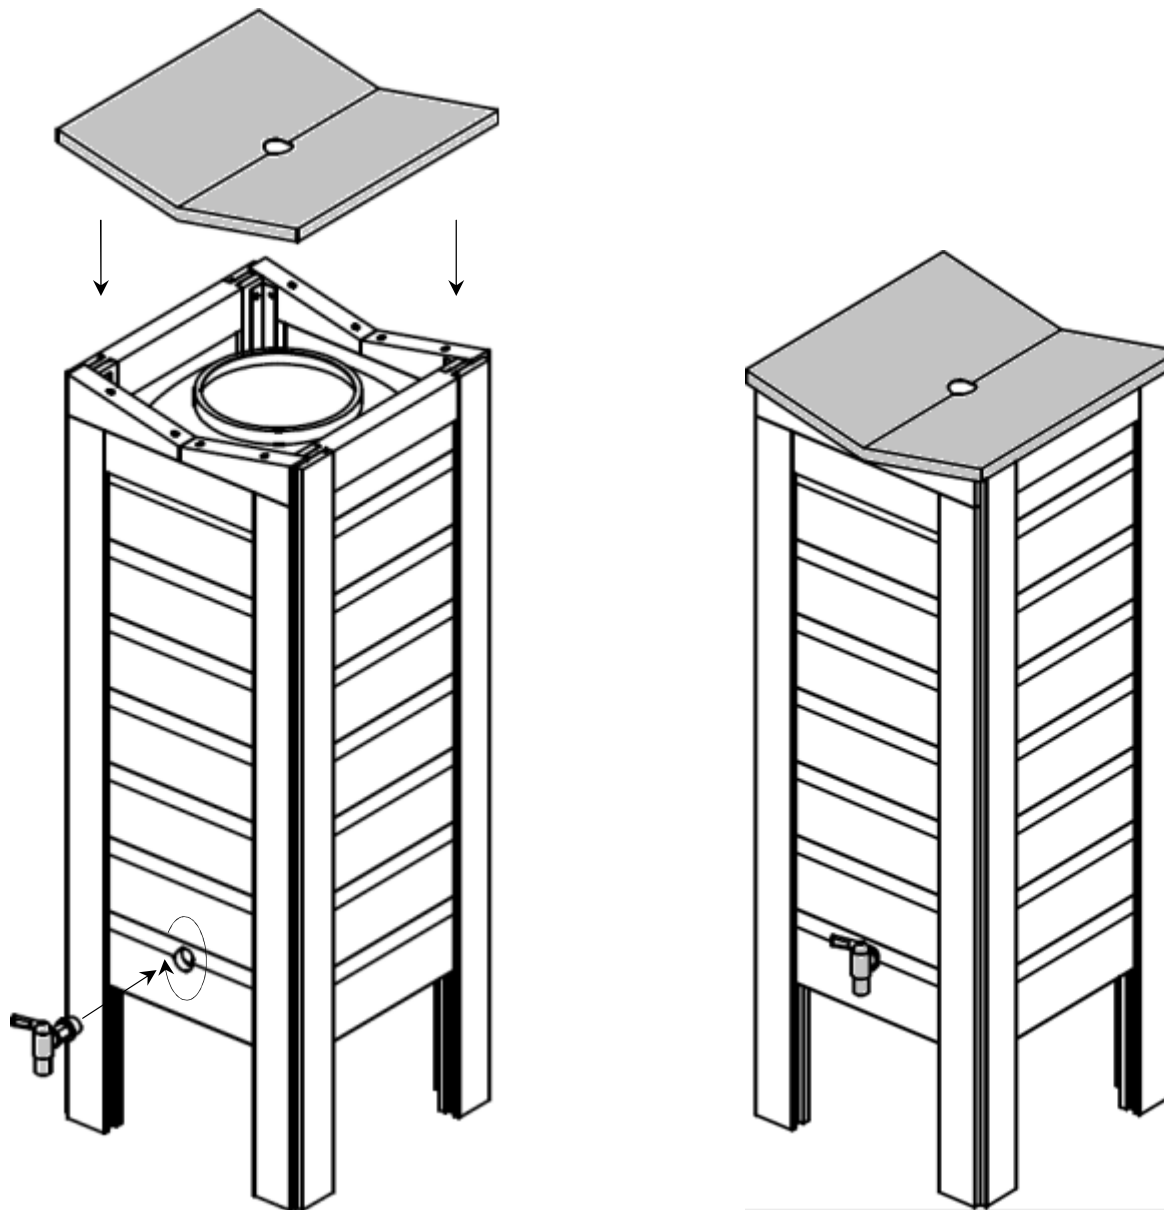

7. Cut Downpipe to Suit

