

# Primo 60 Empire Knock Down

assembly instructions

**SAVIC®**  
pets' favourite



Follow us on  

#petslovesavic

# Check list

Due to the size of the cage, we recommend that a minimum of two people is required for assembling this cage.  
Please take a few minutes to read your instructions fully to ensure perfect flawless assembly of your Primo 60 Open Empire cage.  
Check that you have all the contents as per the list on the following page. If any component parts are missing or damaged do not use your cage.

More information and instruction video on [www.savic.be](http://www.savic.be)



## The Primo 60 Open Empire box contains:

- A

1 plastic bottom part
- B

1 roof panel
- C

4 side profiles
- D

5 wooden perches
- E

4 corner pieces
- F

1 bird bath
- G

4 feeding bowls + lids
- H

1 drinking fountain
- I


2 side panels with door
- J

1 lower back panel without door
- K

1 lower front panel with door
- L

1 upper back panel without door
- M



1 upper front panel with door

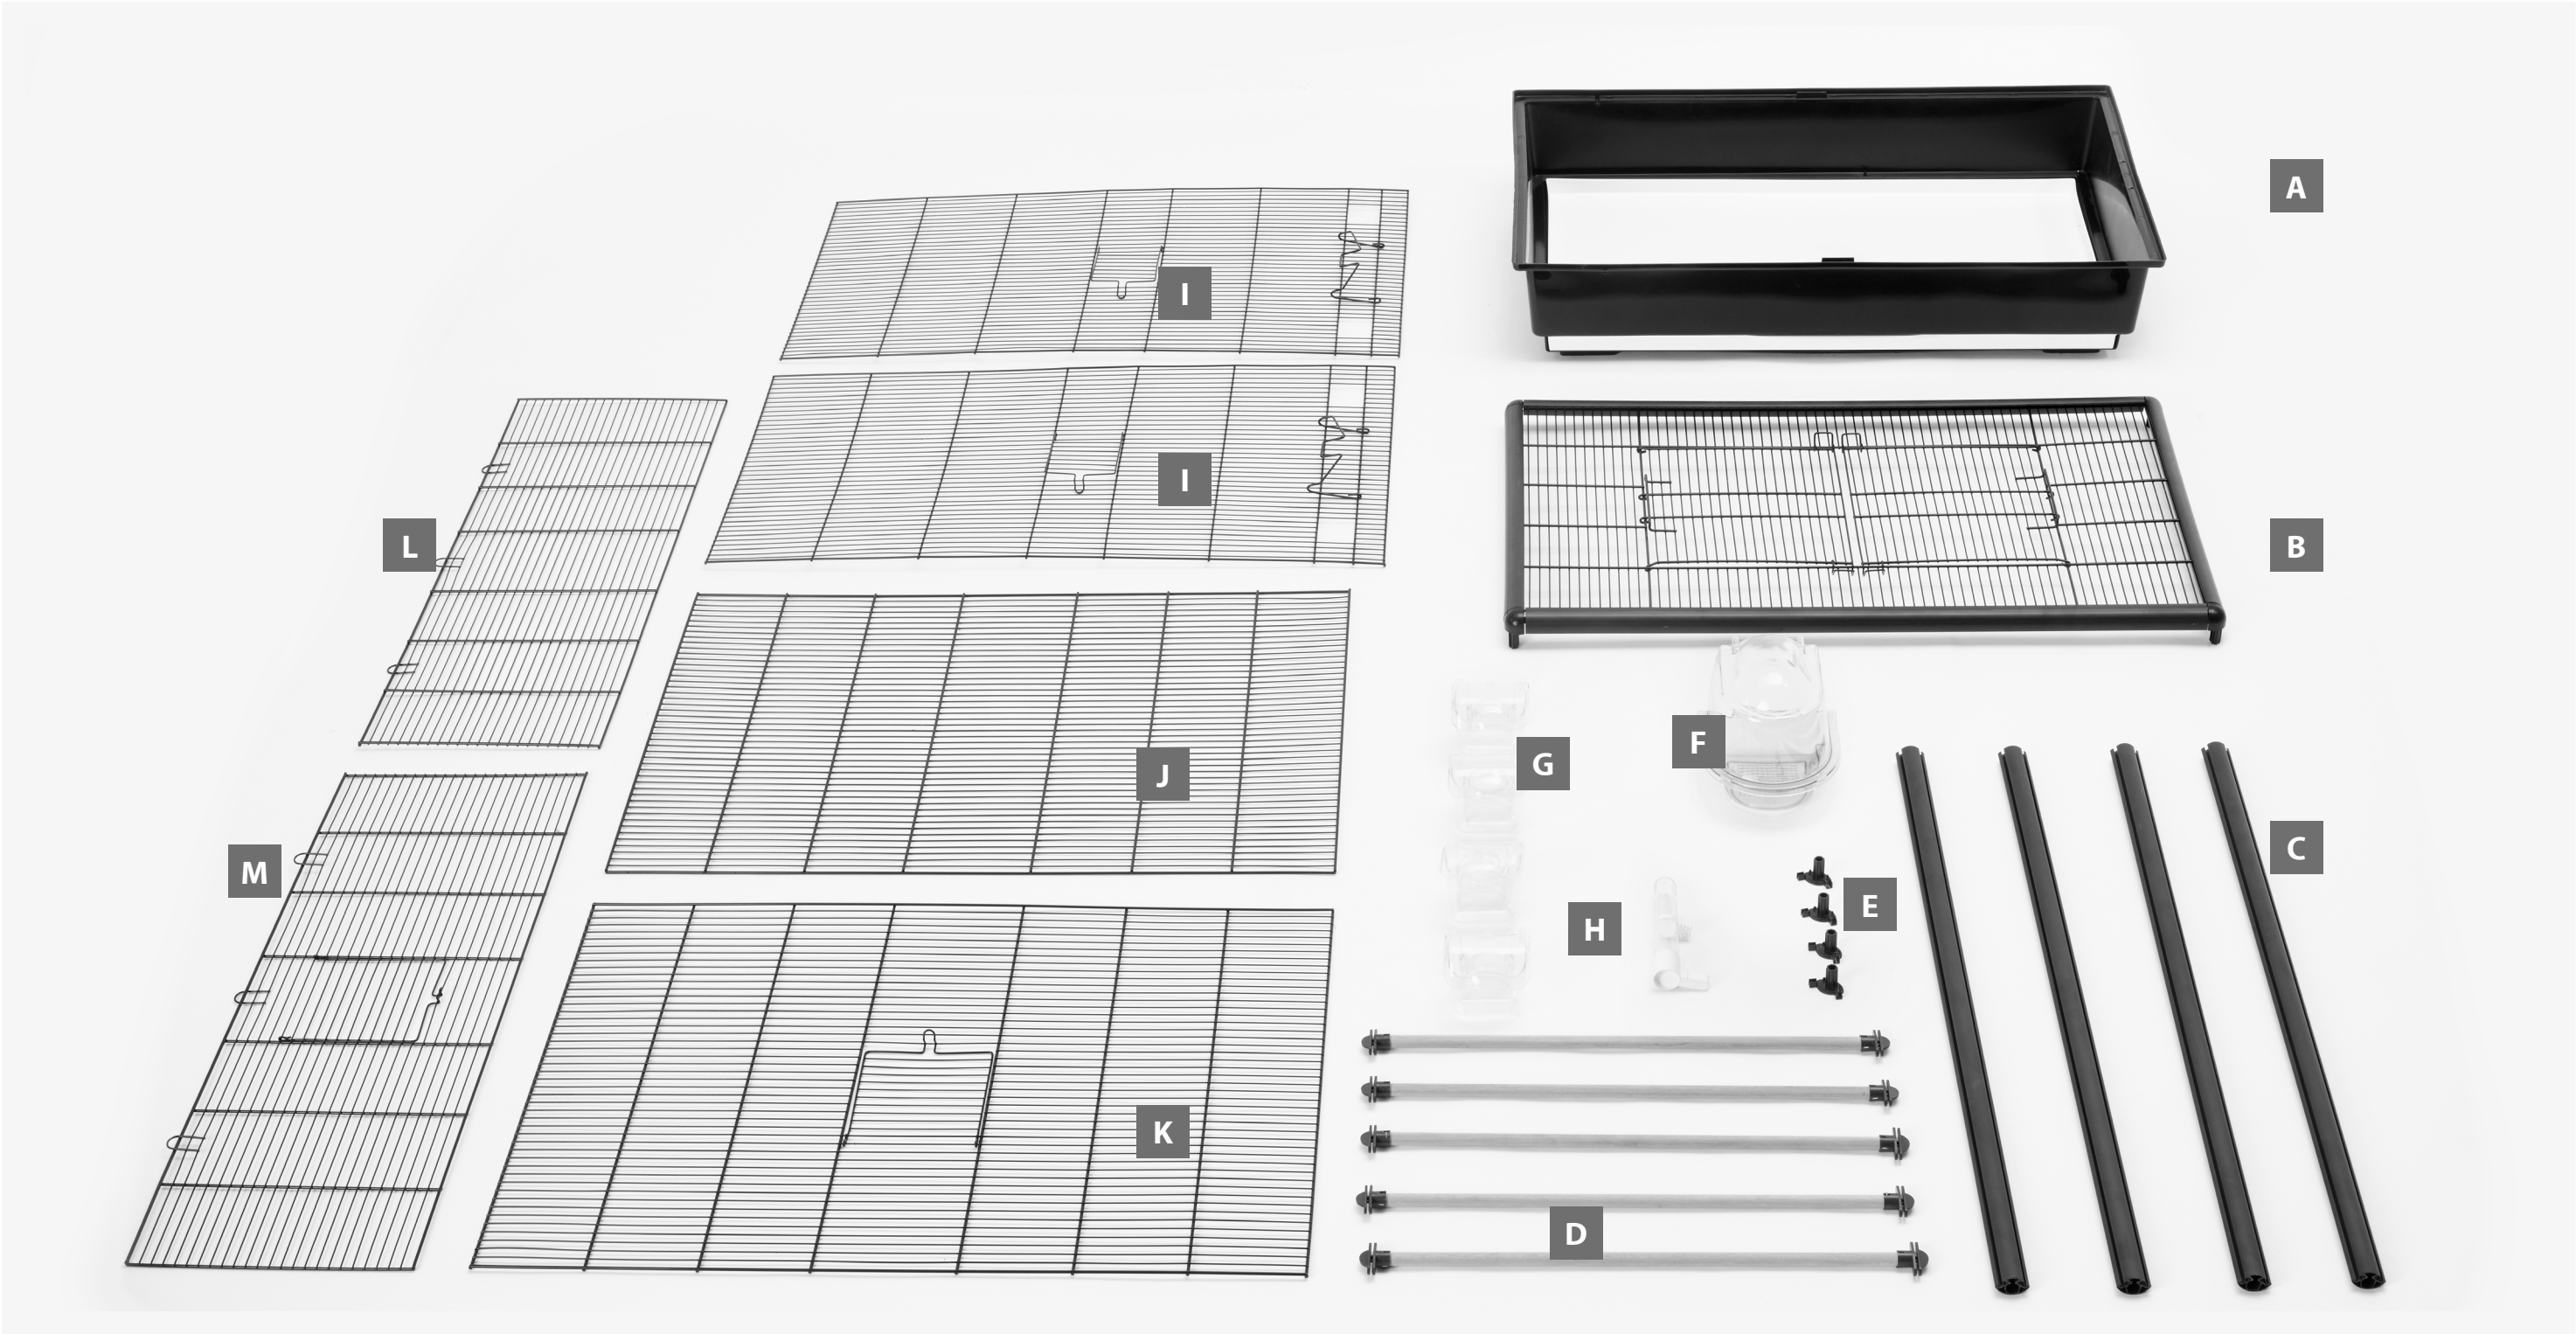







Attach on one side of each of the 4 profiles (c) the 4 corner pieces (e).

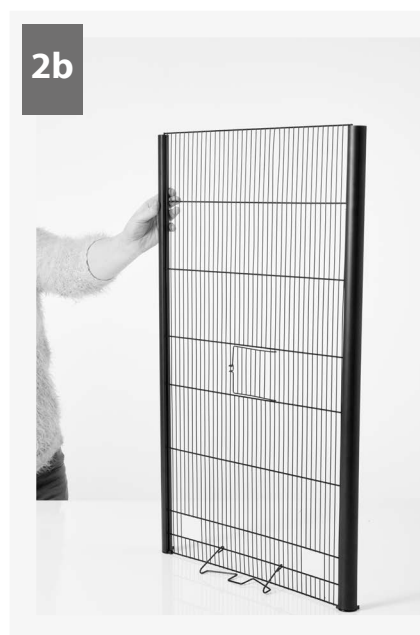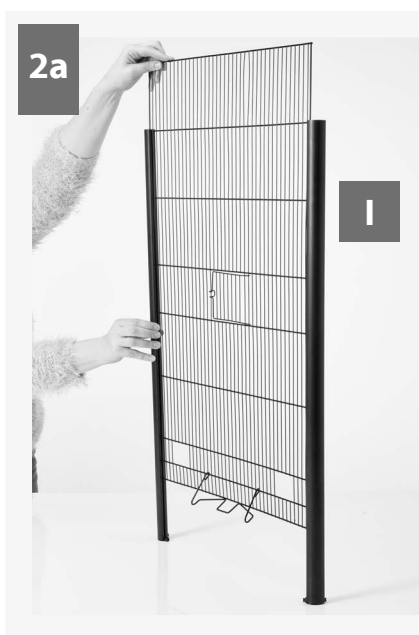


Slide the 2 side panels with door (i) in the vertical profiles (c). Make sure that the closures are facing outwards and the panels are well placed in the corner pieces (e).

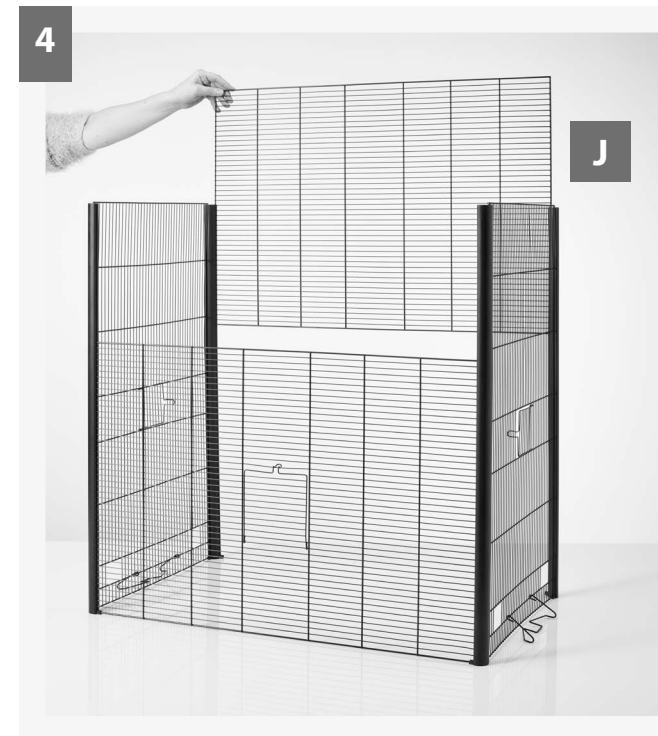

Slide the lower back panel without door (j) in the profiles. Make sure that the vertical wires are facing outwards.

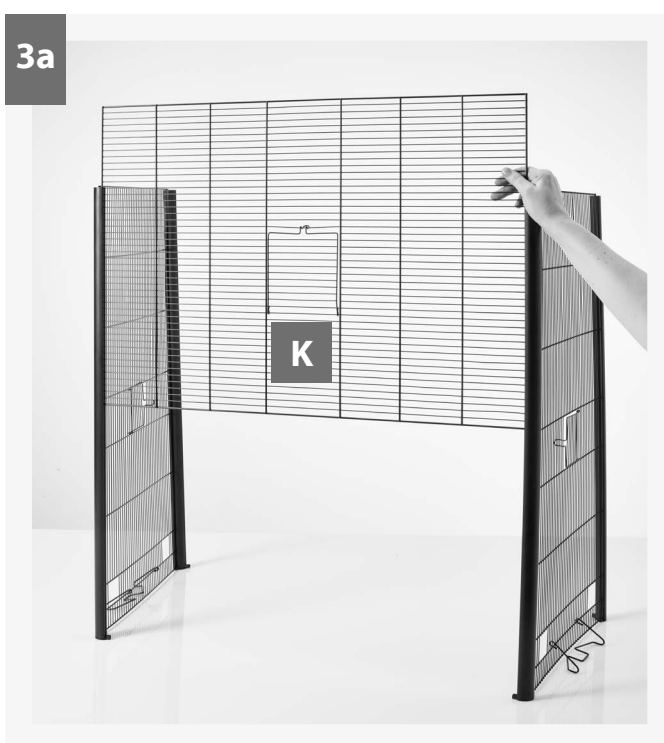


Slide the lower front panel with door (k) into the profiles. Make sure the door is facing upwards and the vertical wires of the panel are facing outwards.


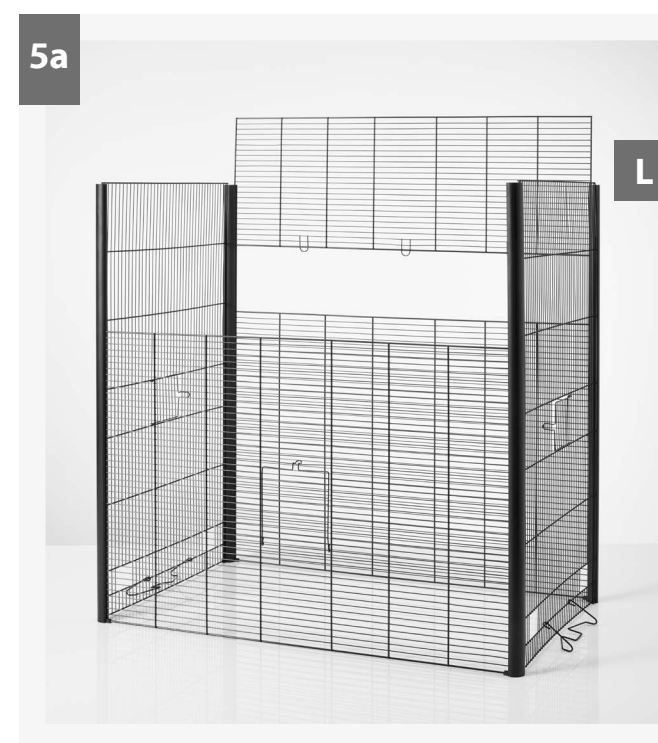


Slide upper back panel without door (l) into the profiles. Make sure the vertical wires are facing outwards and the panels are assembled as shown.




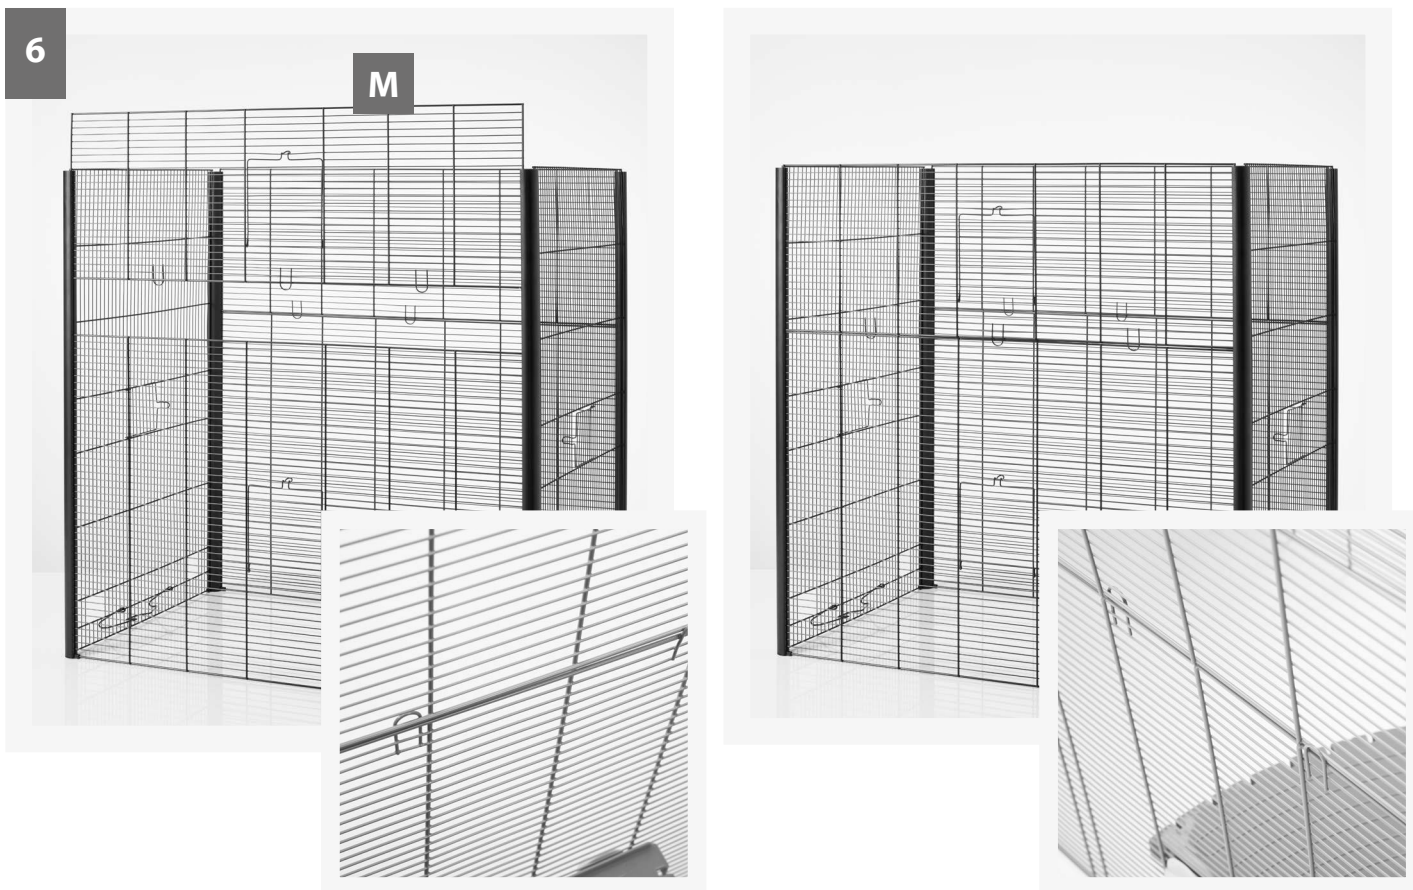


Slide the upper front panel with door (m) into the profiles.  
Make sure the door is facing upwards and the vertical wires of the panel are facing outwards.

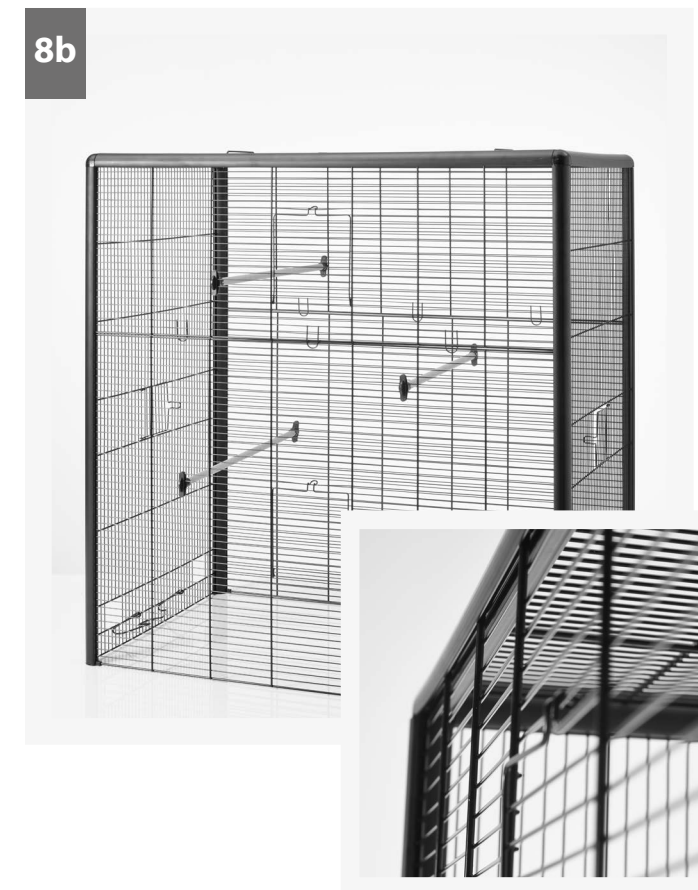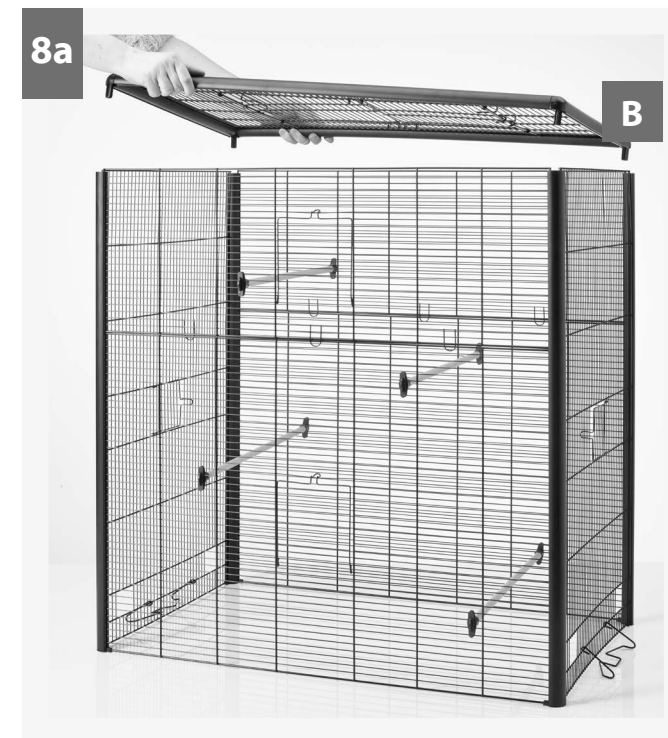

Place the roof panel (b) on top.  
Make sure that the thick horizontal wires of the front, back and side panels are well assembled in the roof panel. (see detail).

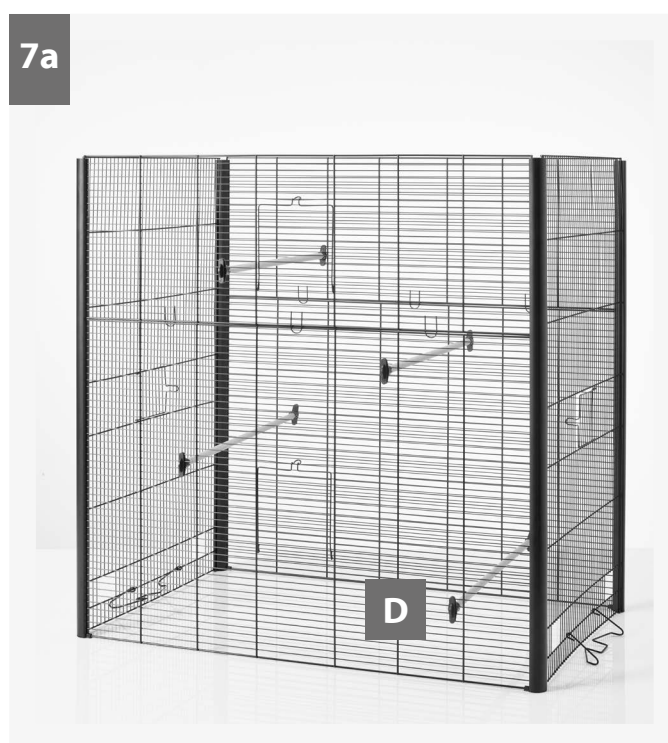

Assemble 4 of the 5 wooden perches (d)

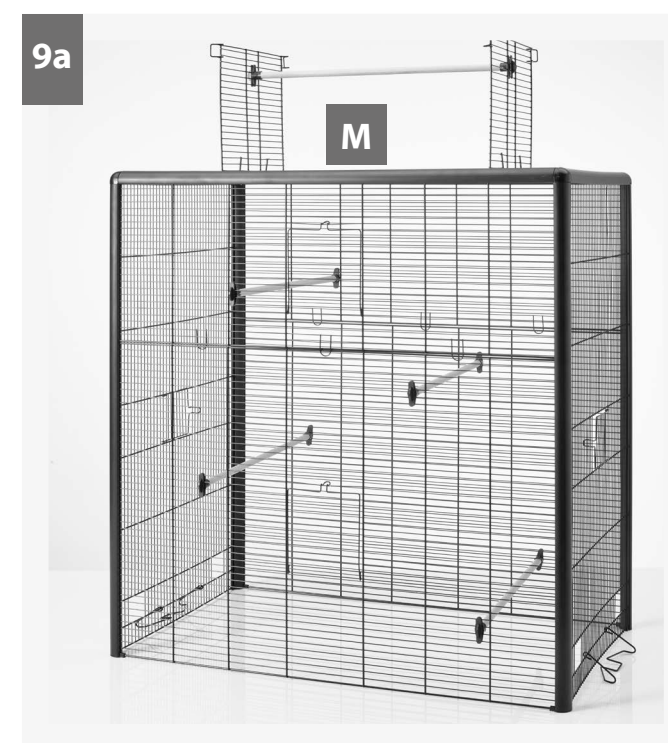

Open the doors of the roof panel and install the 5th wooden perch.  
Put the cage on the tray.





Finally, install the feeding bowls and lid (g+h) on both side panels, the bird bath (f) and drinking fountain (n) and your cage is now ready for use.

**www.savic.be**

Ringlaan 10 • B-8501 Heule • Belgium  
Tel. +32 56 35 33 45 • Fax +32 56 35 77 30  
info@savic.be  
Doc.nr.: 931887