



WMOTO

MOTORCYCLE ENGINEERING

HONDA CB600F
HORNET
1998-2006

MANUAL

HOW IT WORKS

INSTALLATION

Installation is highly recommended by experts or professional bike builders.

This manual only provides guidelines how to install the subframe.

Re-arranging the electrical components and coolant reservoir should be done at your own discretion

WARNING

WiMoto takes no responsibility for damages caused by incorrect use or installation of the product. It is your responsibility to make sure the subframe gets a proper rust protection! We highly recommend powdercoating. We do not take any responsibility and we are not liable for any damage caused through use of products or services purchased here, be it indirect, special, incidental or consequential damages!

1

DE-ASSEMBLE

Remove the seat and rear fairing and all electrical parts.



2

CUT

Cut of the bracket for the voltage regulator.

3 CUT

Cut of knob to fit the provided drilling template.



4 USE TEMPLATE

Place the template on the subframe.

5

USE TEMPLATE

Use template mark where to cut the subframe.



6


USE TEMPLATE

Use the template to mark where the holes need to be drilled.

7

CUT

Disassemble the aluminium frame part or cut off the aluminium bracket, to get easy acces for cutting the frame.

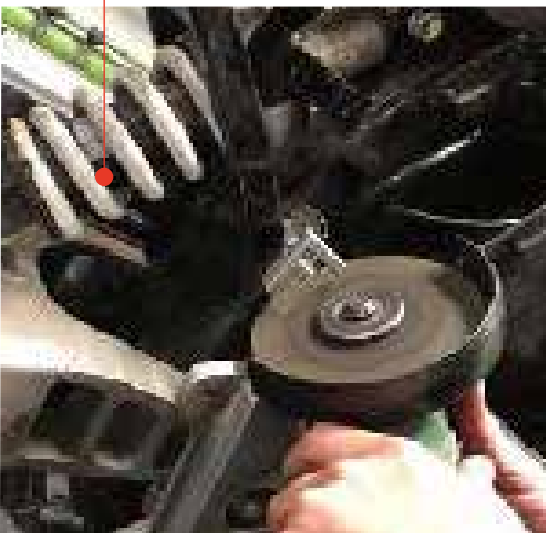

8

CUT

Cut the subframe



CUT SUBFRAME

Cut of the subframe




DRILL

Drill two holes of 10mm.

11 **RUBBISH**

This is scrap metal.

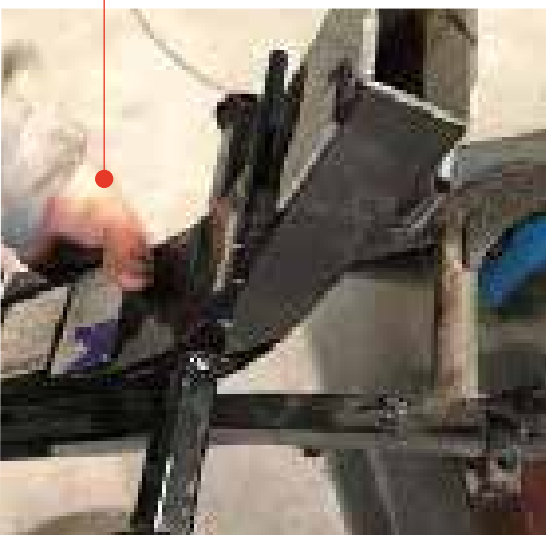

12 **MOUNT SUBFRAME**

Use provided bolts to mount the subframe.

13

MOUNT SUBFRAME

Use provided M10x1.25 bolts to mount the subframe



14

READY

Now re-arrange the wiring and coolant reservoir, and you are ready to go.



WE BRING
YOUR IDEAS
TO LIFE

HORNET

- ✓ Chromolybdeen subframe
- ✓ Drilling template
- ✓ Aluminium undertail
- ✓ Bolts and nuts provided



WIMOTO

Fahrenheitstraat 15
6662 PZ Elst
www.wimoto.eu

Follow us on

