


## How to include the ECO-DIM.07 Z-Wave dimmer in to the Fibaro network

- 1) Make sure the Fibaro Homecenter is installed in the right way.
- 2) Make sure that the EcoDim led dimmer is installed as mentioned in the manual of the dimmer (manual can be found inside the box)
- 3) Switch on the dimmer by pressing the knob. (Lights must be on)
- 4) In case the Fibaro app is not installed, please download and install it via the Google Play Store or the Apple App Store.
- 5) Complete the steps to create a Fibaro account. If there is an existing account you can skip to step 6.
- 6) Start the Fibaro app and click on the "settings" button below.

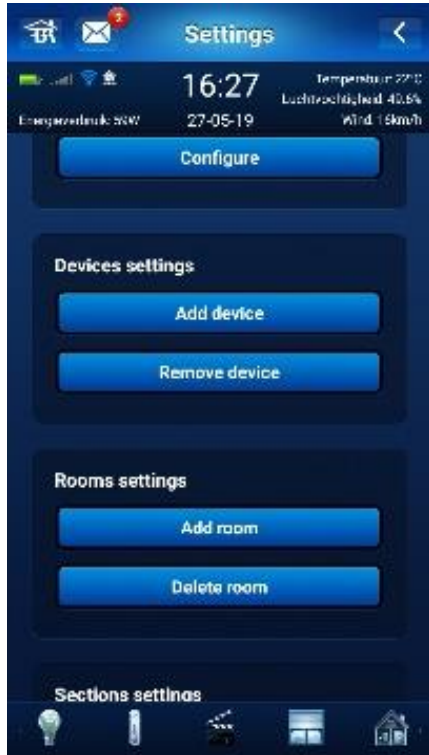

7) Select "Add device".



8) Select "Add device"



9) Make sure the pairing mode of the ECO-DIM.07 is activated. If this is not activated you can activate it by pressing the reset button twice. The led indicator will start blinking blue.




10) The app will indicate: "Inclusion process complete. This device had been correctly added". Select: "Next".



11) It is now possible to rename the dimmer. For example we named the dimmer “SMART dimmer”. After renaming the dimmer, please select: “Next”.



12) Now select the room you want to add the device to. When you don't have created a room yet please select: “Add room” en create a room. Select: “Next” after you created the room. For example we add the dimmer to the room: “ECODIM TEST”.

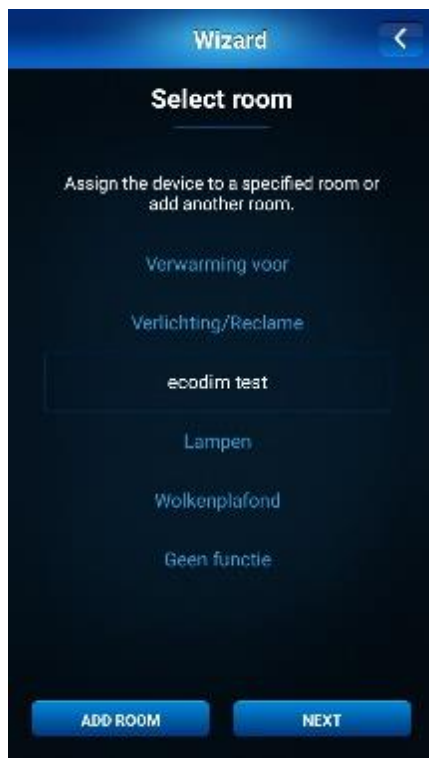

13) The device is added successfully! The ECO-DIM.07 Z-Wave dimmer is added to the room. Select: "Finish" to complete the inclusion proces. The ECO-DIM.07 Z-Wave device is ready for use.

