

HIDE

GENERAL OVERVIEW

31-May-2017

1.0 LED

LED 7/10W | 350-500mA | 18Vf | COB 3-step | excl. power supply

CE IP20 0.3m 36° 45°/45° 10°

white texture	117161W_
silver / grey	117161S_
black texture	117161B_

LIGHT COLOUR

2700K | 420-590lm | >90CRI 3

3000K | 470-640lm | >90CRI 5

1800-2850K | 370-510lm | >95CRI 9

ALWAYS USE

recessed housing + plaster kit
for power supplies see our catalogue

1.0 PAR16

PAR16 max. 35W | GU10 | 100-240VAC | 50-60Hz

CE IP20 0.9m 45°/45° 13°

white texture	117120W0
silver / grey	117120S0
black texture	117120B0


ALWAYS USE

recessed housing + plaster kit


OPTIONAL
for PAR16 lamps see our catalogue

ALWAYS USE: RECESSED HOUSING + PLASTER KIT


1 LAMP
90012009 / 90012017

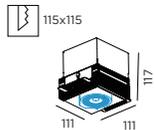


3 LAMPS
90012011 / 90012019

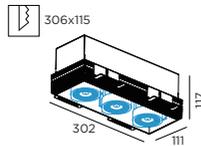

2 LAMPS
90012010 / 90012018

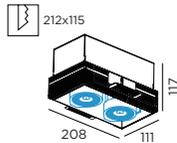


4 LAMPS
90012012 / 90012020

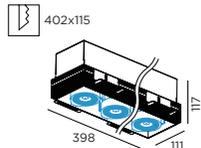

1.0 LED

1.0 PAR16

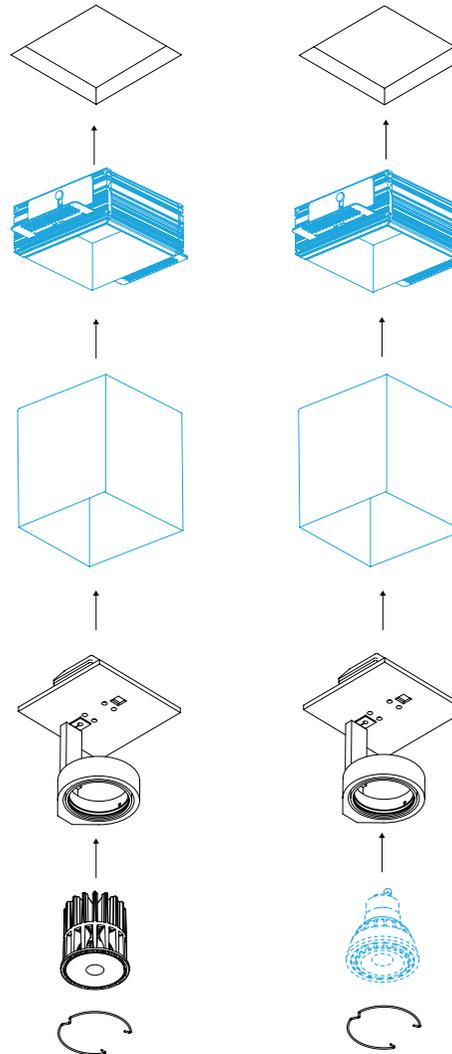

DIMENSIONS

1.0 LED



1.0 PAR16




HIDE

DETAILED MOUNTING INSTRUCTION


31-May-2017

DETAILED MOUNTING INSTRUCTION: For example we use the HIDE LED 3 LAMPS.

Plasterkit and recessed housing are already assembled.
First you will need to disassemble the plasterkit from the recessed housing with the dismounting springs.

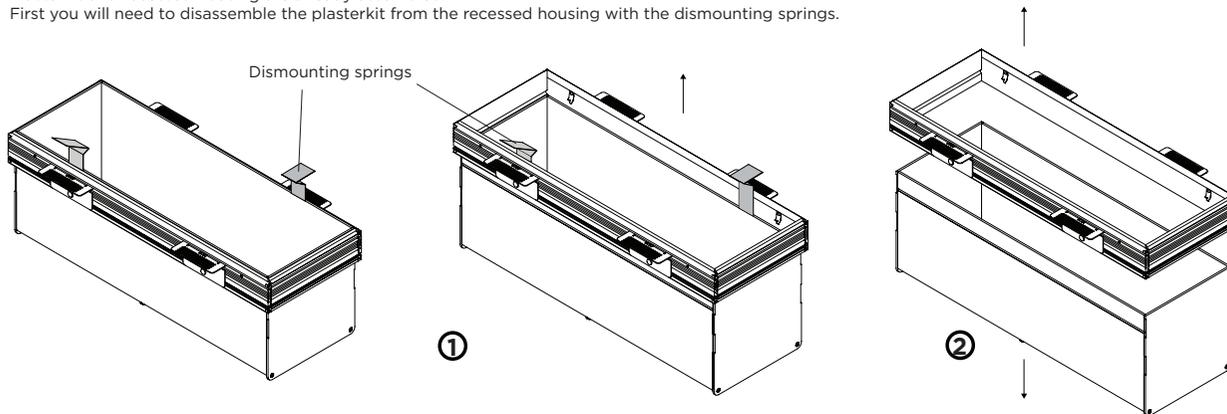


Make a hole in the ceiling according to the prescribed dimensions.

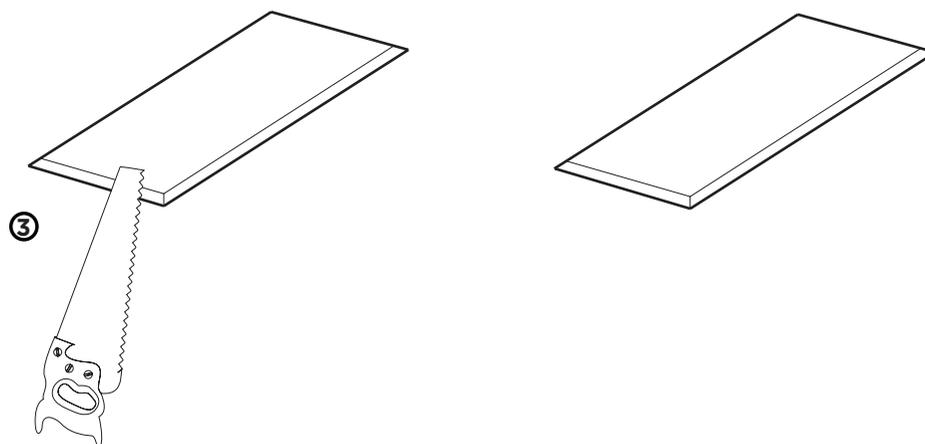


DETAILED MOUNTING INSTRUCTION

- ① Insert the dismounting spring into the gap between the plaster kit and the recessed housing.
- ② Remove the plaster kit from the recessed housing with the dismounting springs.

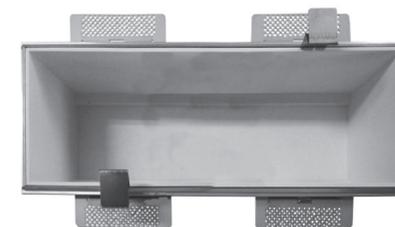


- ③ Make a hole in the ceiling according to the prescribed dimensions (always use recessed housing + plaster kit).


1 LAMP
90012009 / 90012017

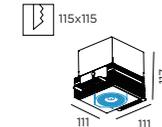


3 LAMPS
90012011 / 90012019

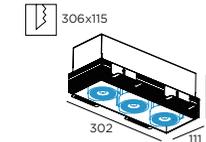

2 LAMPS
90012010 / 90012018

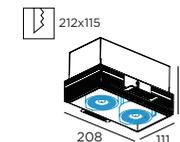

4 LAMPS
90012012 / 90012020


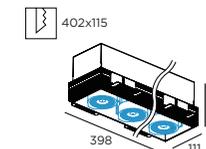


HIDE



DETAILED MOUNTING INSTRUCTION

31-May-2017

DETAILED MOUNTING INSTRUCTION. For example we use the HIDE LED 3 LAMPS.

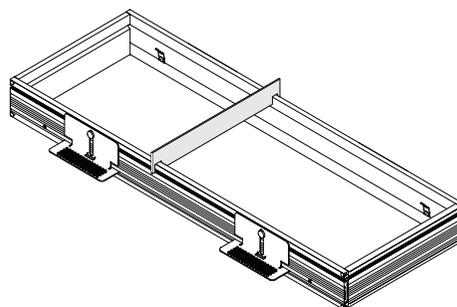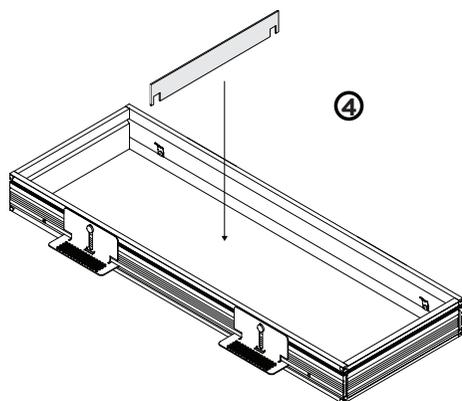

Now you can insert the plaster kit into the hole in the ceiling.

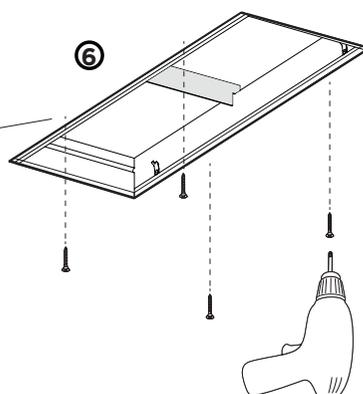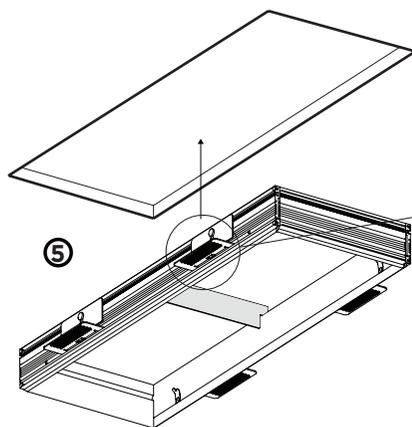


- ④ Put the mounting tool on the plaster kit, in case of the plaster kit deformation after fix the plaster kit on the ceiling.

Mounting tool




- ⑤ Place the plaster kit into the hole in the ceiling. Do not remove the mounting tool.

Insert the plaster kit housing into the ceiling with the mounting tool to prevent deformation. Remove the mounting tool before plastering.

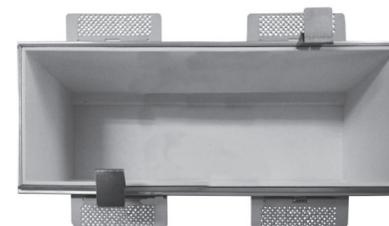

- ⑥ Fix the recessed housing to the ceiling by screwing through the ceiling into the metal perforated parts.

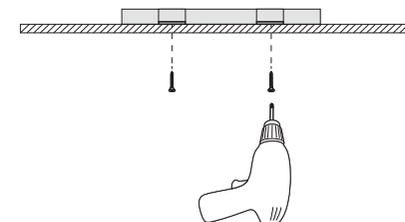


HIDE

DETAILED MOUNTING INSTRUCTION


31-May-2017

DETAILED MOUNTING INSTRUCTION: For example we use the HIDE LED 3 LAMPS.


Before inserting the recessed housing into the ceiling, the fixtures needs to be installed first into this recessed housing.

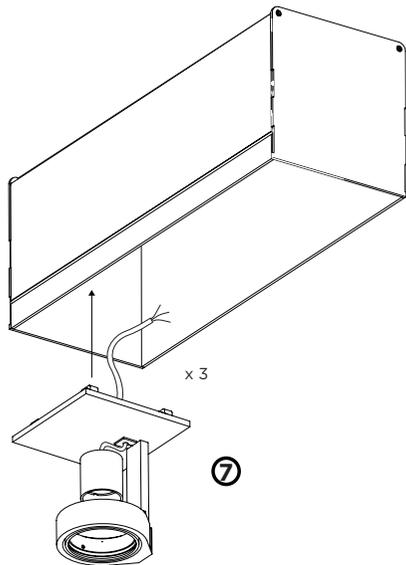


Insert each fixture into the recessed housing.
Afterwards make the connection between each fixture.

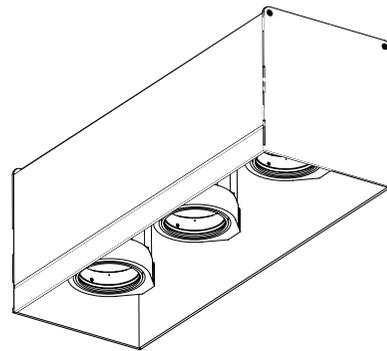

Insert the PAR16 lamps (If you have the LED version, this step is not necessary).

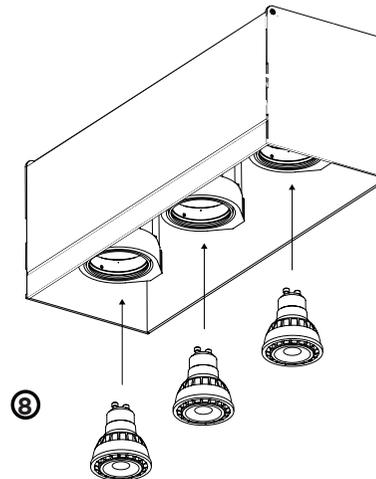


- ⑦ Insert the 3 x PAR16 modules or LED-modules into the recessed housing and fix with the ball catch system (until you hear a click).
- ⑧ Insert the PAR16 lamps in each module and fix with spring.

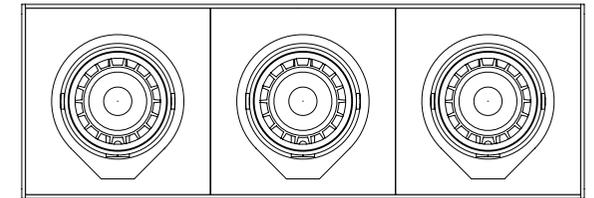


POWER CONNECTION

SERIAL CONNECTION - for LED

Always use POWER SUPPLY according to the specifications of the LED-module



PARALLEL CONNECTION - for PAR16





HIDE

DETAILED MOUNTING INSTRUCTION



31-May-2017

DETAILED MOUNTING INSTRUCTION. For example we use the HIDE LED 3 LAMPS.

Remove the mounting tool when plaster kit is fixed on the ceiling.

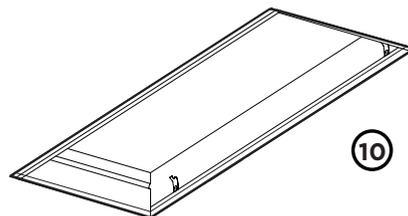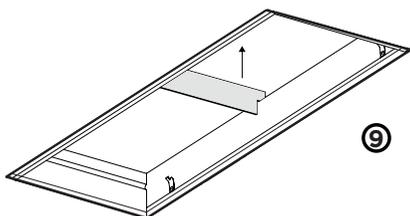


Now you can insert the recessed housing (with the connected fixtures) into the ceiling on the plaster kit but first connect the power supply to the fixtures.

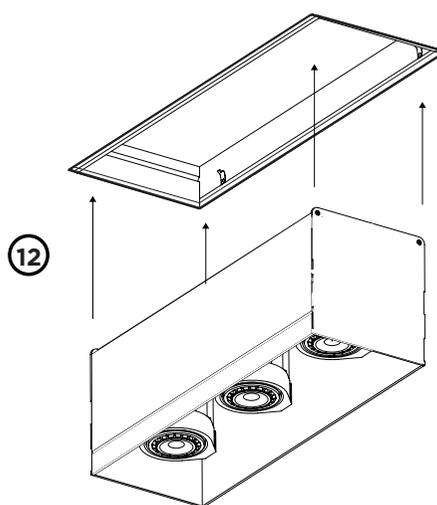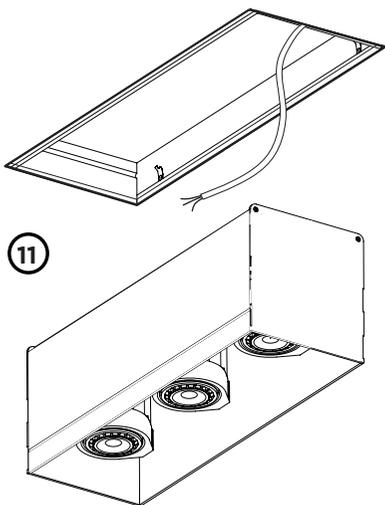

- ⑨ Remove the mounting tool when the plaster kit is fixed on the ceiling,
- ⑩ Apply plaster around the plaster kit.
- ⑪ Connect the power supply to the fixtures.
- ⑫ Keep both sides at the same level when mounting the recessed housing on the plaster kit.

RESULT

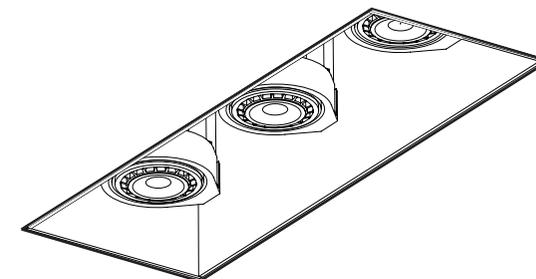

WEVER & DUCRÉ
LIGHTING

www.weverducre.com

Wever & Ducre bvba Kwadestraat 153 bus 2.1 8800 Roeselare

**INSTALLATION
INSTRUCTIONS**

PAGE 5/5