



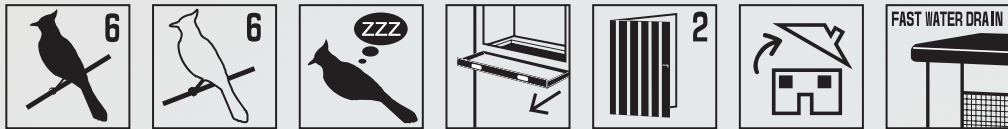

CHIRPY COURT

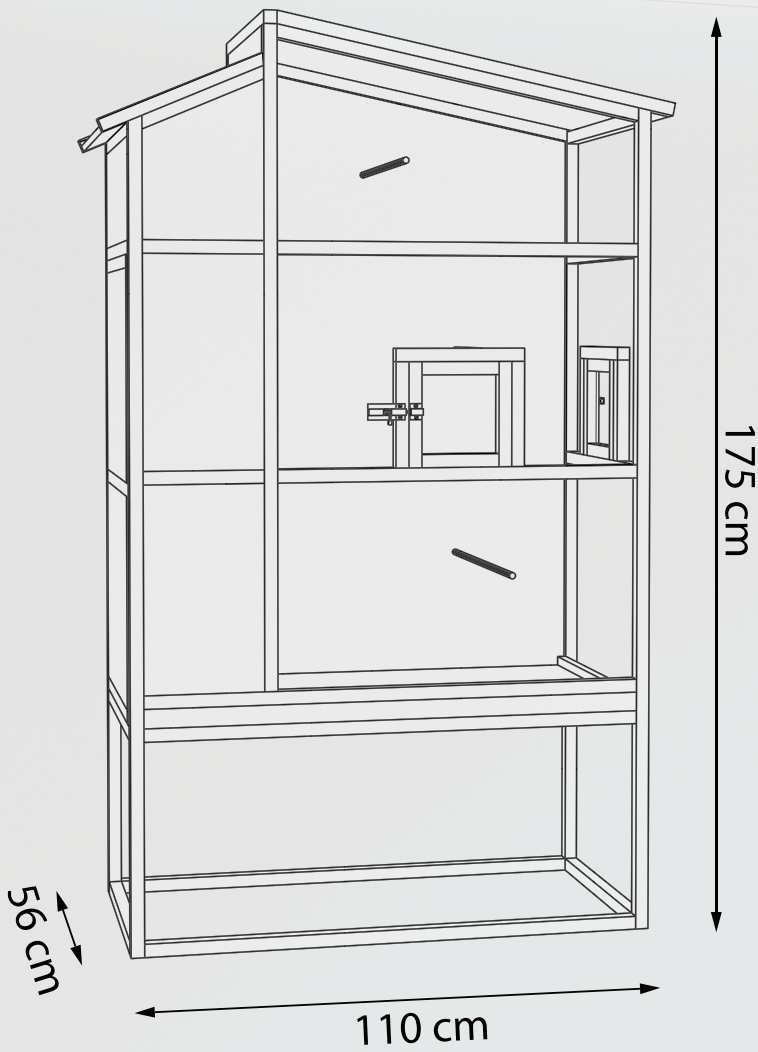


THESE PARTS:


FASTENERS


(A) 4+1 pcs - $\varnothing 3.5 \times 60$ mm 

(C) 8+1 pcs - $\varnothing 3.5 \times 35$ mm 
















(E) 2 pcs - M5 x 40mm 

(B) 20+1 pcs - $\varnothing 3.5 \times 45$ mm 

(D) 4+1 pcs - $\varnothing 3.5 \times 20$ mm 

(F) 1 pcs - 55 x 45 mm 

WOOD PIECES

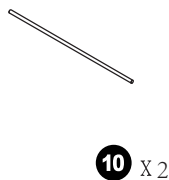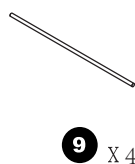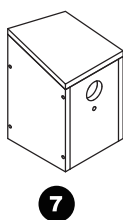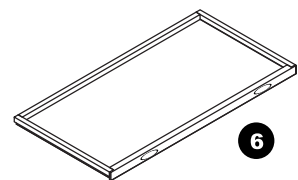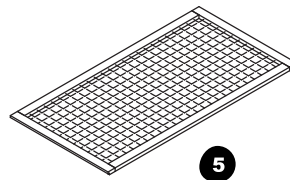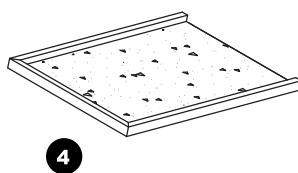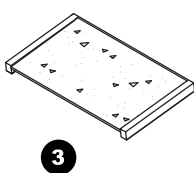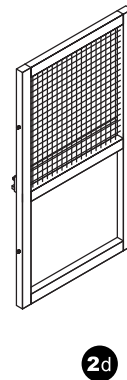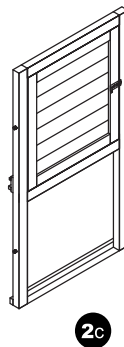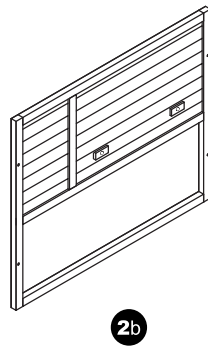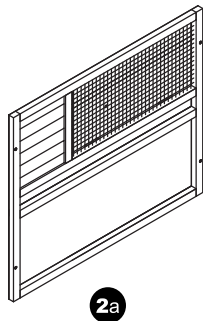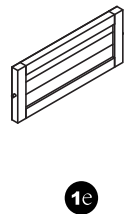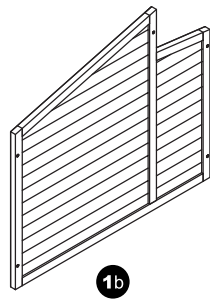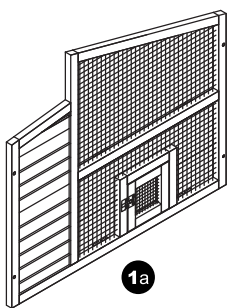


Assembly Instructions


*Use Screwdriver for Assembly

1


1a

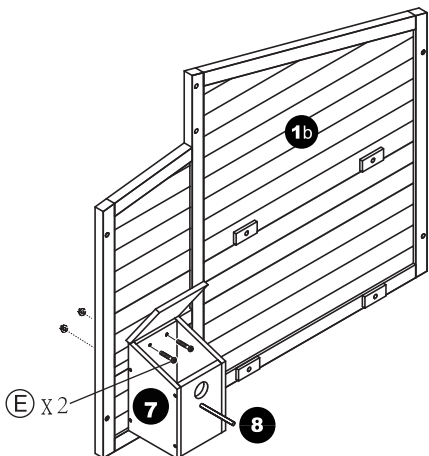


2

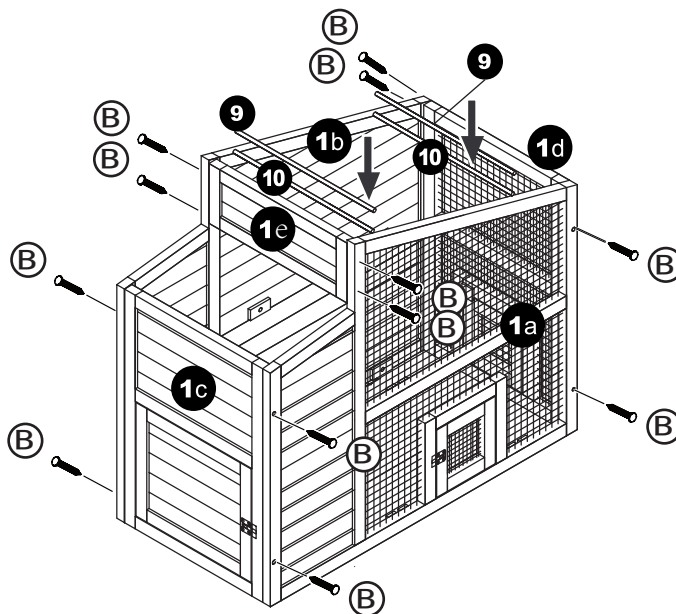


3

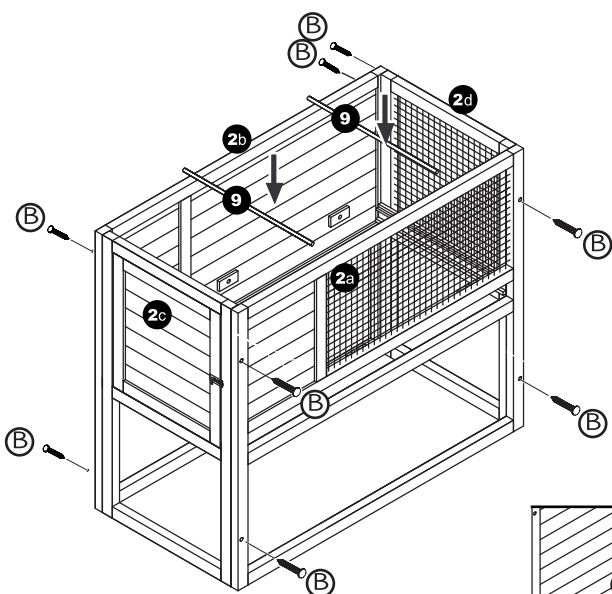

4

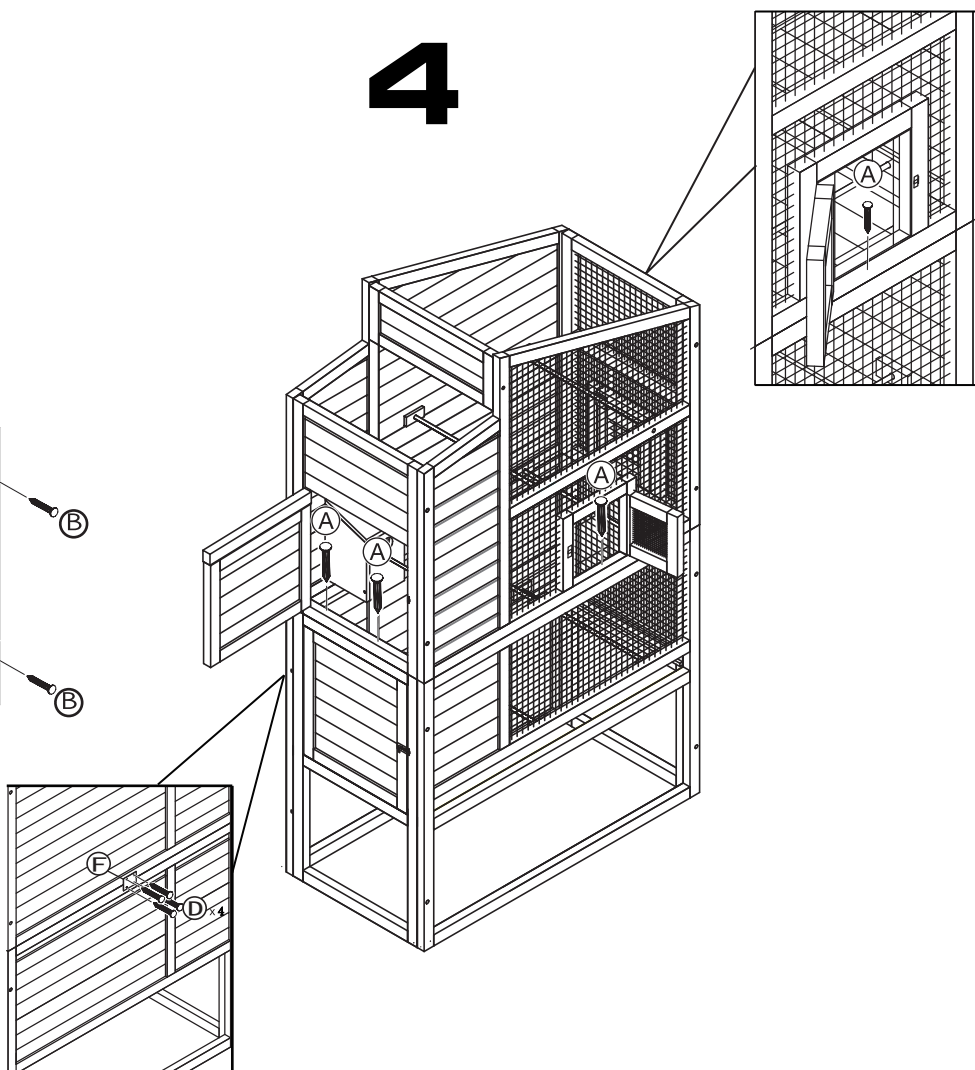

5

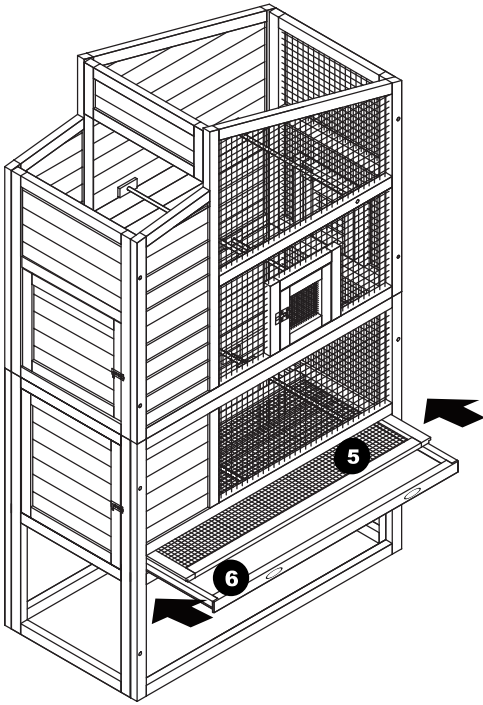

6

