

iQ parts
IQ-PARTS-SHOP.COM



**SPECS &
INFORMATION**



Pistol Grip Retrofit Kit


Pistol Grip with Pincer

Lightweight, comfortable and easy to use

Available as retrofit kit or pre-assembled with new pincers

For Oetiker Pneumatic Pincers HO 2000/3000/4000 ME

Pistol Grip for Pneumatic Pincers Oetiker ME

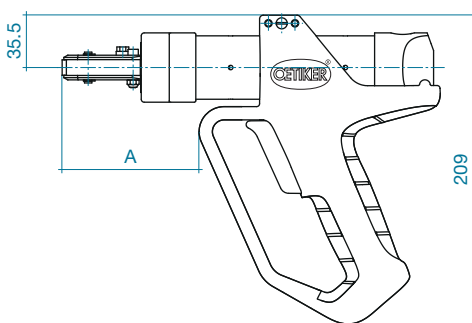

Selection of complete pincer systems

The complete pincer system consists of pincer head and pincer.
 1) First select the pincer head in accordance with the requirement.
 2) Then select the pincer type in the corresponding columns below. The item number for the complete pincer and complete pincer with pistol grip include the selected pincer head.

Pincer heads

Jaw width (mm)	5.5	7.5	7.5	10.2	10.2
Open gap (mm)	8.6	11.6	13.2	13.2	16.2
For ear width* (mm)	≤ 7	8	10	10	13
Item No.	13900158	13900154	13900150	13900138	13900142

Type of pincer						ME without pincer head	Approx. Wt. (kg)
HO 2000 ME							
Pincer complete	13900173	13900174	13900176	13900182	–	13900226	0.75
Pincer complete with pistol grip	13900930	13900931	13900932	13900934	–	13901301	0.94
HO 3000 ME							
Pincer complete	–	13900175	13900177	13900183	13900185	13900227	0.87
Pincer complete with pistol grip	–	13900935	13900936	13900938	13900939	13901302	1.06
HO 4000 ME							
Pincer complete	–	–	–	13900184	13900186	13900228	0.94
Pincer complete with pistol grip	–	–	–	13900940	13900941	13901303	1.13
							Individual order number
Pistol Grip Retrofit Kit	–	–	–	–	–	13901300	0.19
Dimension A (mm)							
HO 2000 ME	55	54	54	54	–		
HO 3000 ME	–	93	93	93	98		
HO 4000 ME	–	–	–	132	137		



Installation tool with high process reliability

Efficient, uniform assembly

High-quality, complete pincer system for uniform clamp closures

Full range of pincer heads, for compatibility to all standard clamps

Adaptation of special head designs possible

Pneumatic Pincers Oetiker ME

This high-quality, complete pincer system ensures the uniform installation of Oetiker clamps. The selection of the correct pincer body and head is dependent on the type of Oetiker clamp, the required closing force, and the air supply pressure that is available.

To obtain the optimum closing force, please refer to the technical information for the product being installed, and take into account the availability of special pincer heads.

Selection example

For a closing force of ca. 3000 N using an HO 3000 ME, the available inlet pressure must be at least 6 bar. The closing force must be set to the data given. To change the closing force, the inlet pressure must be adjusted. A closing force tester, for example Test Equipment CAL 01, is used to determine and set the correct closing force.

Delivery scope pneumatic pincer Oetiker ME

Oetiker ME with pincer head

Compressed air connection set (incl. filter/water separator)

Operating instruction

Selection of complete pincer systems

The complete pincer system consists of pincer head and pincer.

- 1) First select the pincer head in accordance with the requirement.
- 2) Then select the pincer type in the corresponding columns below. The item numbers for the complete pincer include the pincer and the desired pincer head.

Pincer heads

Jaw width (mm)	5.5	7.5	7.5	10.2	10.2	10.5	10.5	14.5
Open gap (mm)	8.6	11.6	13.2	13.2	16.2	13.7	16.6	16.6
For ear width* (mm)	</= 7	8	10	10	13	10	13	13
Item No.	13900158	13900154	13900150	13900138	13900142	13900113	13900114	13900543

Type of pincer


Type of pincer									ME without pincer head
HO 2000 ME									
Pincer complete	13900173	13900174	13900176	13900182	-	-	-	-	13900226
Replacement-jaw kit	13900166	13900167	13900168	13900163	-	-	-	-	
HO 3000 ME									
Pincer complete	-	13900175	13900177	13900183	13900185	-	-	-	13900227
Replacement-jaw kit	-	13900167	13900168	13900163	13900170	-	-	-	
HO 4000 ME									
Pincer complete	-	-	-	13900184	13900186	-	-	-	13900228
Replacement-jaw kit	-	-	-	13900163	13900170	-	-	-	
HO 5000 ME									
Pincer complete	-	-	-	-	-	13900161	13900162	-	13900229
Replacement-jaw kit	-	-	-	-	-	13900164	13900165	-	
HO 7000 ME									
Pincer complete	-	-	-	-	-	13900171	13900172	13900546	13900230
Replacement-jaw kit	-	-	-	-	-	13900164	13900165	13900545	

* measured inside

Item numbers in **bold type** are included in the recommended basic equipment. Replacement jaw kit = left and right pincer jaws complete with all necessary parts. The jaw width must be at least 0.5 mm wider than the band used for the clamps to be installed. The opening gap should be wide enough for the largest ear.

Technical data

HO 2000 ME/HO 3000 ME/HO 4000 ME

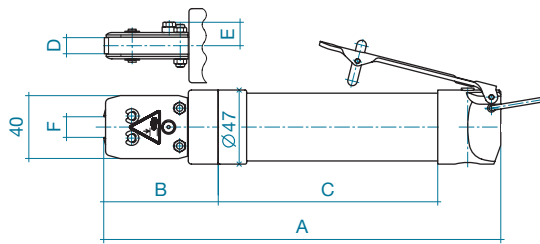

Pincer heads

Jaw width D (mm)	5.5	7.5	7.5	10.2	10.2
For ear width* (mm)	</= 7	8	10	10	13
Item No.	13900158	13900154	13900150	13900138	13900142

Type of pincer

HO 2000 ME	A (mm)	214.0	213.0	213.0	213.0	-
	B (mm)	74.0	73.0	73.0	73.0	-
	C (mm)	101.0	101.0	101.0	101.0	-
	D (mm)	5.5	7.5	7.5	10.2	-
	E (mm)	12.3	13.3	13.3	14.9	-
	F (mm)	8.6	11.6	13.2	13.2	-
HO 3000 ME	A (mm)	-	252.0	252.0	252.0	257.0
	B (mm)	-	73.0	73.0	73.0	78.0
	C (mm)	-	140.0	140.0	140.0	140.0
	D (mm)	-	7.5	7.5	10.2	10.2
	E (mm)	-	13.3	13.3	14.9	14.9
	F (mm)	-	11.6	13.2	13.2	16.2
HO 4000 ME	A (mm)	-	-	291.0	291.0	296.0
	B (mm)	-	-	73.0	73.0	78.0
	C (mm)	-	-	179.0	179.0	179.0
	D (mm)	-	-	7.5	10.2	10.2
	E (mm)	-	-	13.3	14.9	14.9
	F (mm)	-	-	13.2	13.2	16.2



info@iq-parts.nl
Harsweg 34A
2461 EZ Ter Aar
T +31 252 624 126
The Netherlands