



## Driving Light Mount

BMW R 1250 GS 2019-  
LAH.07.10401



### Thank you for choosing DENALI

We know you would rather be riding your bike than wrenching on it, so we go the extra mile to make sure our instructions are clear and as easy to understand as possible. If you have any questions, comments, or suggestions don't hesitate to give our gear experts a call at 401.360.2550 or visit WWW.DENALIELECTRONICS.COM

### Please Read Before Installing

DENALI products should always be installed by a qualified motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. DENALI takes no responsibility for damages caused by improper installation. **Caution:** When installing electronics it is extremely important to pay close attention to how wires are routed, especially when mounting products to the front fender, front forks, or fairing of your motorcycle. Always be sure to turn the handlebars fully left, fully right, and fully compress the suspension to ensure the wires will not bind and have enough slack for your motorcycle to operate properly.


### Installation Tips

We strongly recommend using medium strength liquid thread locker on all screws, nuts, and bolts. It is also important to ensure that all hardware is tightened to the proper torque specifications as listed in your owner's manual. For included accessory hardware please refer to the default torque specifications provided below. Inspect all hardware after the first 30 miles to ensure proper torque specifications are maintained.


Bolt Size	in-lbs	ft-lbs	Nm
M3	10.0 in-lbs	-	1.0 Nm
M4	23.0 in-lbs	-	2.5 Nm
M5	44.5 in-lbs	3.5 ft-lbs	5.0 Nm
M6	78.0 in-lbs	6.5 ft-lbs	9.0 Nm
M8	-	13.5 ft-lbs	18.0 Nm
M10	-	30.0 ft-lbs	41.0 Nm
M12	-	52.0 ft-lbs	71.0 Nm

### Hardware Sizing Guide

Not sure what size bolt you have? Use this ruler to measure screws, bolts, spacers, etc. Remember, the length of a screw or bolt is measured from the start of the "mounting surface" to the end of the screw, so only include the screw head when measuring countersunk screws.

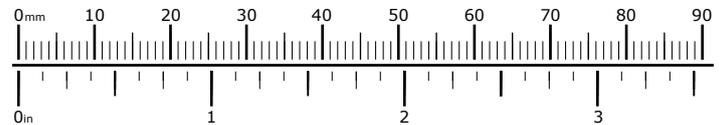

## What's In The Box?

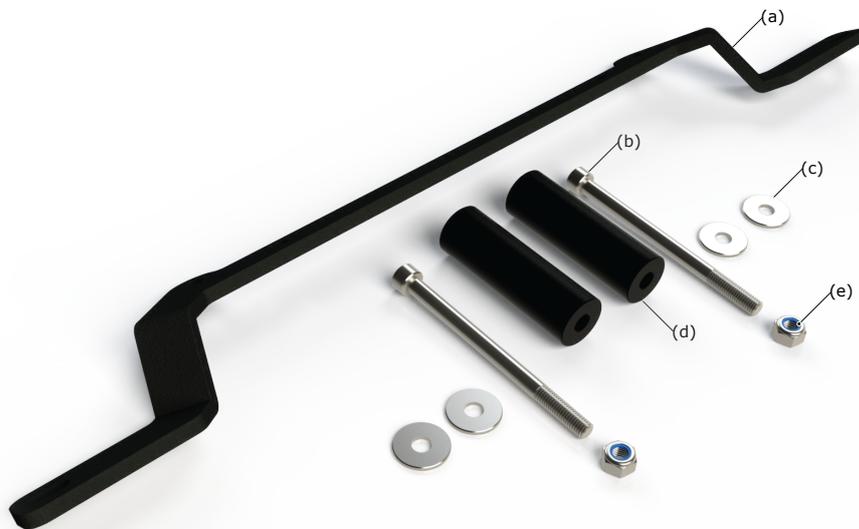


### Kit Contents

- (a) Light Mounting Bracket.....Qty 1
- (b) M8x110 DIN 912.....Qty 2
- (c) M8 Washer DIN 9021.....Qty 4
- (d) Spacer, ID: 9mm OD: 25mm L: 80mm.....Qty 2
- (e) M8 Nut DIN 985.....Qty 2

**Tools Required:** 6mm Allen Key, 13mm Wrench


# 1. Installing The Light Mount

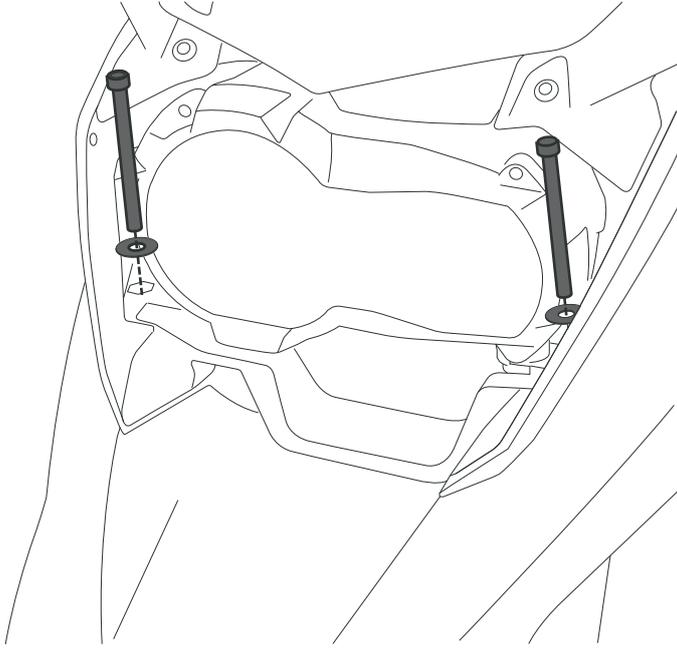

## 1.1 - Insert The Mounting Bolts

**Step One:** Place one M8x110 Screw (b) and M8 Washer (c) into each hexagon shaped opening found on either side of the headlight.

**Note:** You only need to loosen the bolts holding the body panels in place. This will give you enough flex to slide the bolts into place.

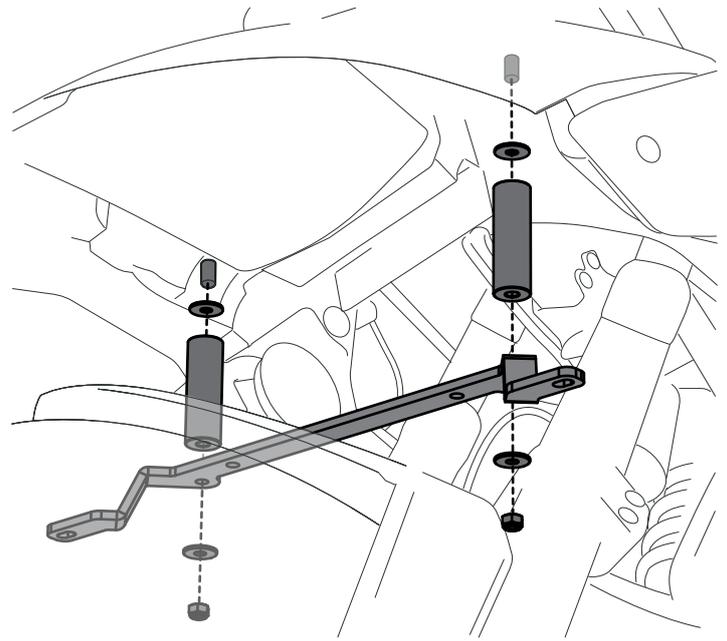

## 1.2 - Installing The Mounting Bracket

**Step One:** Place a Spacer (d) over each M8 Screw (b) protruding from the underside of the front fender.

**Step Two:** Use the M8 Washers (c) and M8 Nuts (e) to attach the Mounting Bracket (a) to the motorcycle. The light mounting tabs should face towards the front of the bike.