

ERROR MANAGEMENT


www.elinchrom.ch/support

Error number	Description	Solution
-1	Capacitors over voltage	Restart -> Service
-2	System overheat	Wait until cooling down
-3	System tries to discharge capacitors but something is broken/damaged	Restart -> Service
-4	Charge Timeout	
-9	No input voltage on SMPS! Critical error on the system because connection board is not working	
-15	Charge MOS thermistor open	
-18	Discharge MOS thermistor open	
-19	Capacitor thermistor open	OFF 10 min. Restart -> Service
-24	Capacitor voltage symmetry error	
-26	Booster voltage error	
-28	Tube hanged	
-60	System peripheral bus error	
-62	System memory error	Restart -> Service
-99	Uncategorized error	
-101	Show to customer a warning for low battery level	Warning

ELB1200 BATTERY PACK INFO

- Safety Mode / Reset
 - To deactivate the Battery for travelling, press the RESET button for about 6 seconds, until the 4 green LED's switch off.
 - To activate the battery, press the battery button 2 seconds, the 4 green LED's will flash 4 times to indicate that the battery is activated now.

- USB socket output (5V, 1A)



- Battery level button
- Press short to see the charge level of the battery.
 - Press about 3 seconds to activate the USB charge socket for mobile devices. If nothing is connected, the usb socket will deactivate after 30 seconds.



Press down to lock



Press up to unlock



Grab and pull to open and separate the battery from unit

DOWNLOAD THE ELB 1200 USER GUIDE

Please get the complete user guide at this link:
<http://bc.gs/elb1200>



DOWNLOAD CONFORMITY

Please find the declaration for EC conformity and USA & Canada conformity on the Elinchrom website.
<http://bc.gs/ec>



Quick Start Guide

ELB 1200




Please check all security documents before use!

Elinchrom LTD - ELB 1200 - Made in Switzerland
 Av. de Longemalle 11, P. O. Box -458, CH-1020 Renens, Switzerland,
 Tel. : +41 21 637 26 77 Fax: +41 21 637 26 81 E-mail: elinchrom@elinchrom.ch
www.elinchrom.com


Elinchrom LTD - ELB 1200 - Made in Switzerland - 07.2017 (73051)

CONTROL PANEL

1. Menu selected
2. Menu header
3. Menu option settings, menu navigation
4. Exit menu navigation
5. Scroll function to change setting / press function to enter the menu option
6. Backward

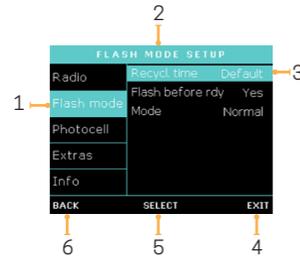


Radio	Mode	Normal		Speed			
	Group	1-4					
	Frequency	1-20					
Flash mode	Recycling time	Eco	Default	Fast			
	Flash before ready	No		Yes			
	Mode	Normal	Sequence	Delay	Strobo		
	Sequence / Strobo / Delay Settings						
Photocell	Mode	On	Off	preflash			
	Preflash count	Auto, 1-20					
	Time frame	0.5 - 5.0 sec					
	Block time	0.5 - 5.0 ms					
Extra	Auto std-by	Off	1-60min				
	Auto off	Off	1-60min				
	Ready tone	Off	Min	Low	Default	High	Max
	Ready volume	Off	Min	Low	Default	High	Max
	Error volume	Off	Min	Low	Default	High	Max
	Key tone	Off	Min	Low	Default	High	Max
Infos	Firmware rev., Serial number, Life time, Power-on count, Flash count						

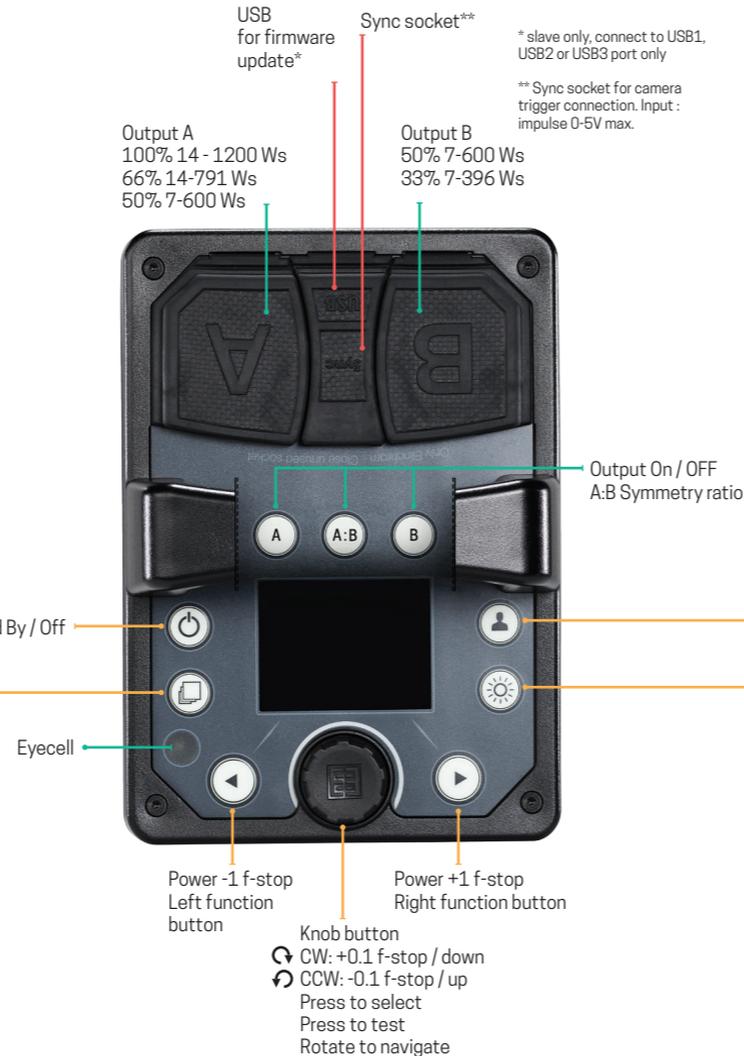


USER SETTINGS BUTTON

The advanced dashboard view is available through the user settings button. This display changes dynamically between 1 head and 2 head views.

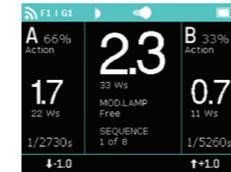


Advanced dashboard view

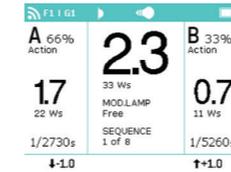


Press long on the user button to switch to night view

MODELLING LAMP BUTTON

- Press On/OFF
Press 2s to enter to the modelling lamp dashboard.
- Press <- to enter the menu.
For individual LED power settings on outlet A or B, press the A or B buttons for a short time.

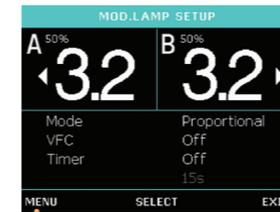

To access the Menu, press the "left function" button shortly and select options with the knob button.

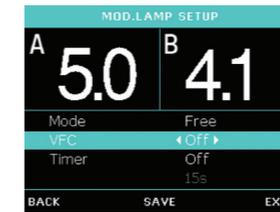


Visual Flash Confirmation. Modelling lamp shut down after flashing whilst the unit recharges.

DISPLAY PANEL – DASHBOARD

The dashboard changes automatically between the one and two head view depending on the number of heads switched on. The colours of the upper bar correspond to the group number : blue for the group 1, yellow for the group 2, red for the group 3 and green for the group 4.



1. EL-Skyport Synchronisation (normal or speed sync mode).
2. EL-Skyport frequency channel and group number.
3. Photocell status.
4. Modelling lamp status.
5. Battery charge status.
6. Power outlet B / power ratio / head type.
7. Power setting of the B outlet in f-stop equivalents.
8. Flash Duration value of the B outlet.
9. Increase selected outlet by 1 f-stop.
10. Decrease selected outlet by 1 f-stop.
11. Flash Duration value of the A outlet.
12. Power setting of the A outlet in f-stop equivalents.
13. Power outlet A / power ratio / head type.

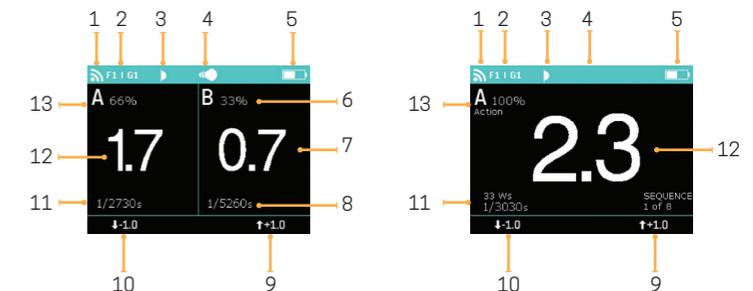

simple dashboard
2 heads view

simple dashboard
1 head view