
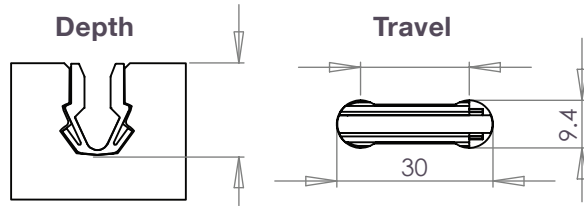


V-1230


Releasable Instructions

1. Milling

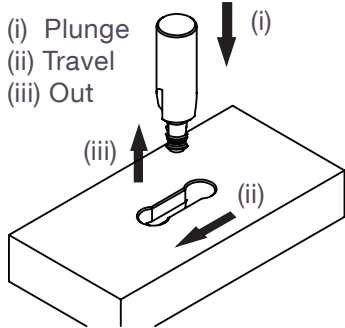

Recommended Spacing




- (a): 35mm to 80mm
- (b): 100mm to 250mm

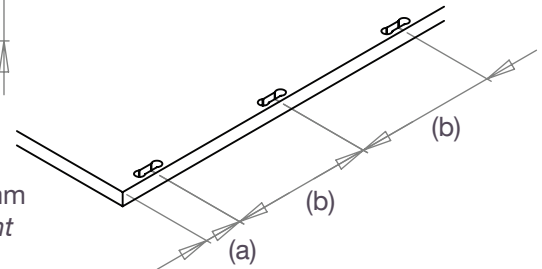


Recommended Settings

Depth: 12.5mm, +/- 0.5mm
Travel Centre to Centre: 20.5mm (min) - 20.7mm
Rotation Speed: CNC speeds vary with different materials. Maximum cutter rotation: 18,000


2. Housing

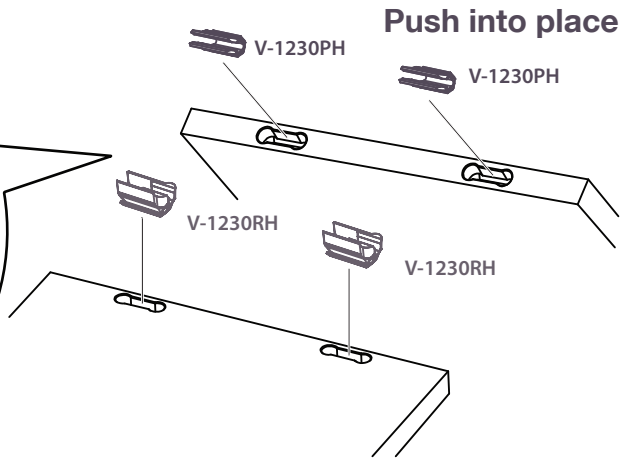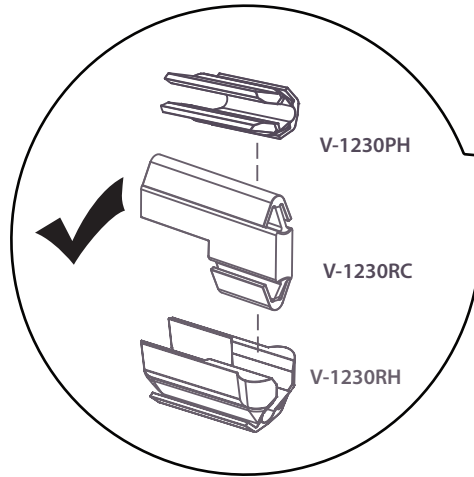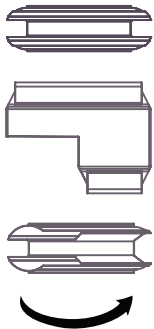


3. Assembly - Simply slide to connect

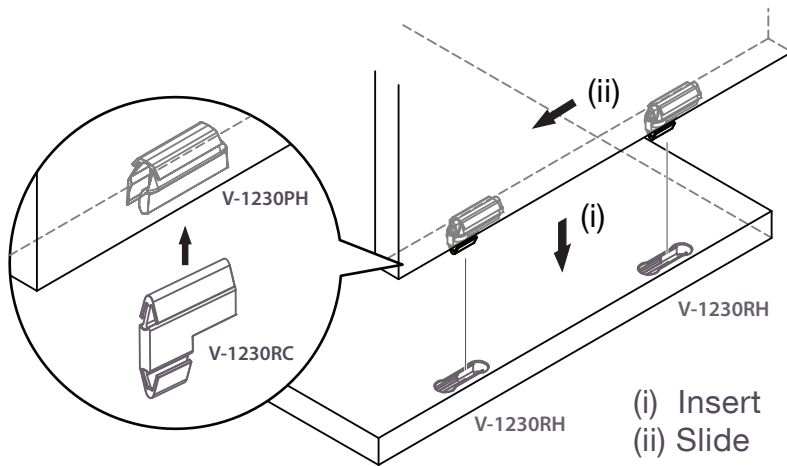


4. Release

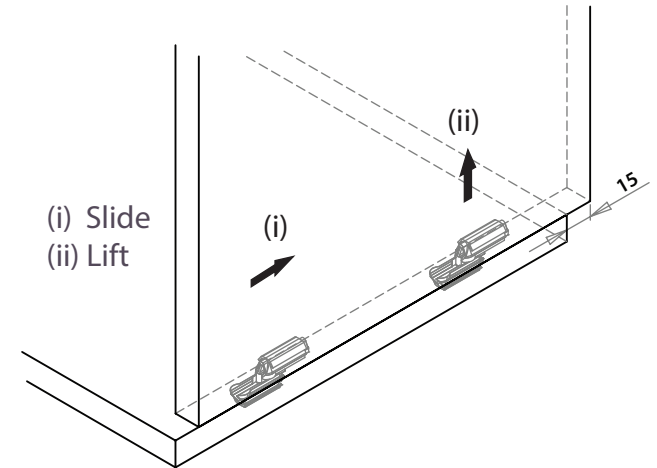


How it works

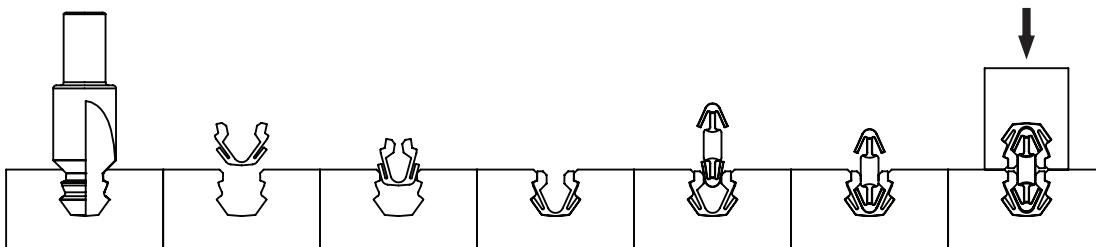



Simply slide to connect

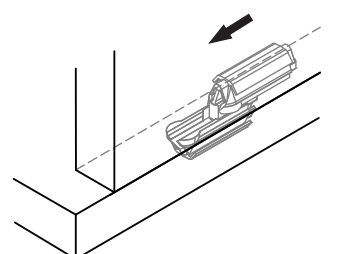

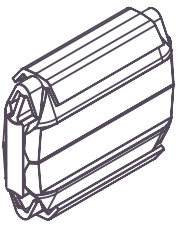


V-1230 Permanent Instructions

1. Milling

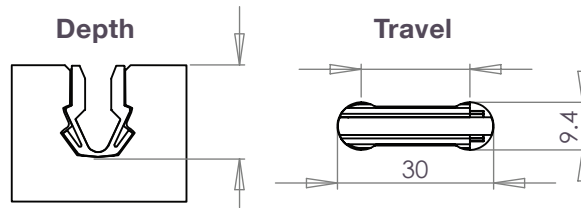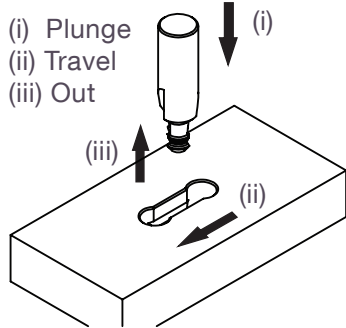

Recommended Spacing



- (a): 35mm to 80mm
- (b): 150mm to 350mm

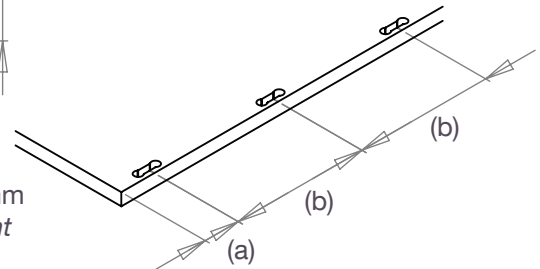


Recommended Settings

Depth: 12.5mm, +/- 0.5mm
Travel Centre to Centre: 20.5mm (min) - 20.7mm
Rotation Speed: CNC speeds vary with different materials. Maximum cutter rotation: 18,000

2. Housing

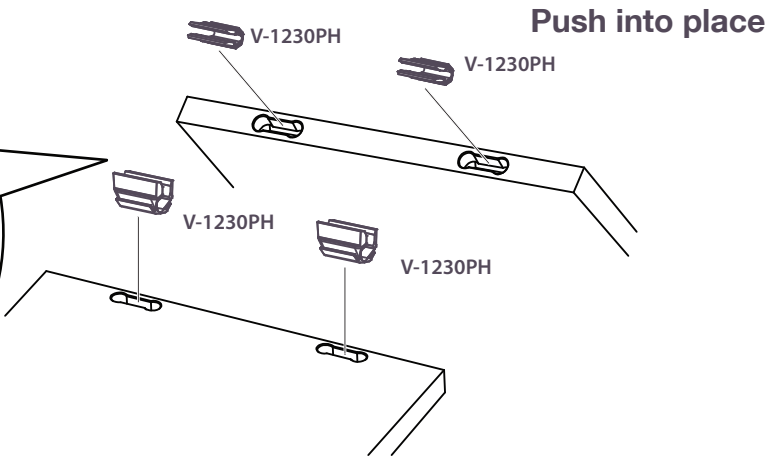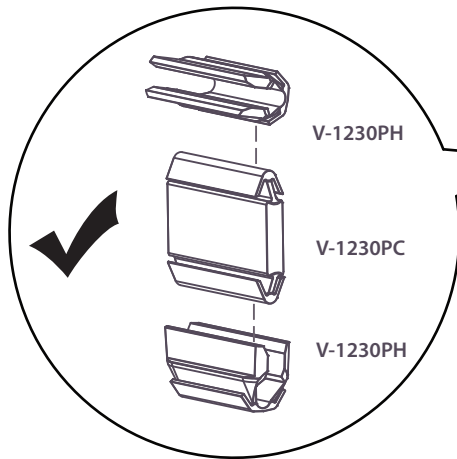

3. Assembly - Simply push into place to connect

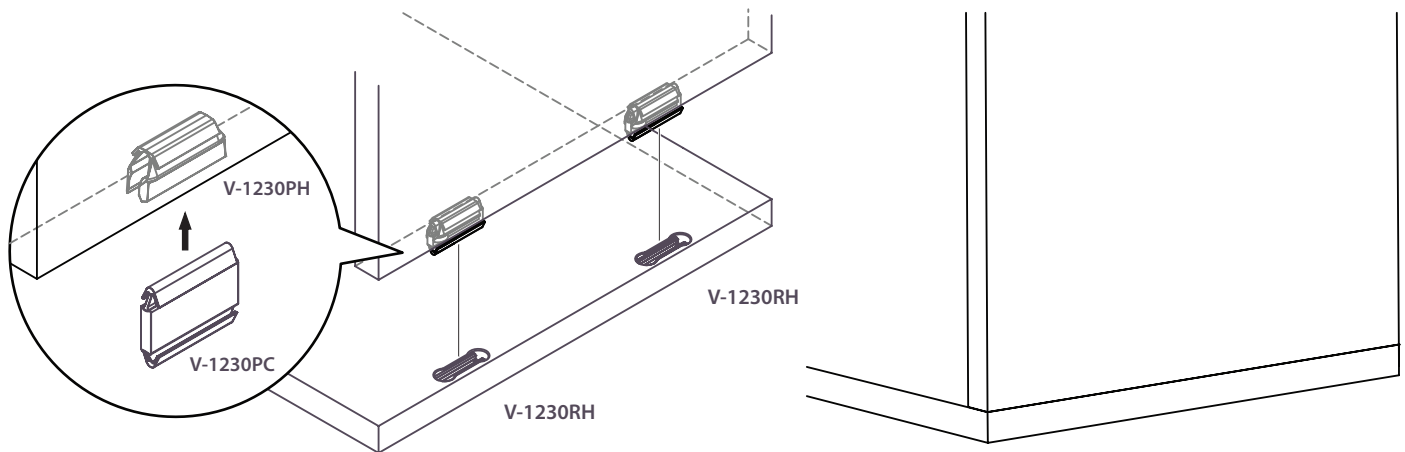

How it works

