



Product Assembly Guide

Clamping Gate Roll Cages

Step 1:

Start with the base in front of you.



Step 2:

Next, add on the sides of the roll cage. These are fixed in place by lifting the centre clamp to allow the sides to fit into the holes of the base. Press the clamp down to secure.




Step 3:

Add the back of the roll cage. Make sure the lower notches are in place and then use the clamp handles at the top to secure.



Step 4:

If you have a 4 sided unit, the front gates are added in the same way as the back. As this is a split gate, be careful the top half doesn't fall when clamping the lower half in place.

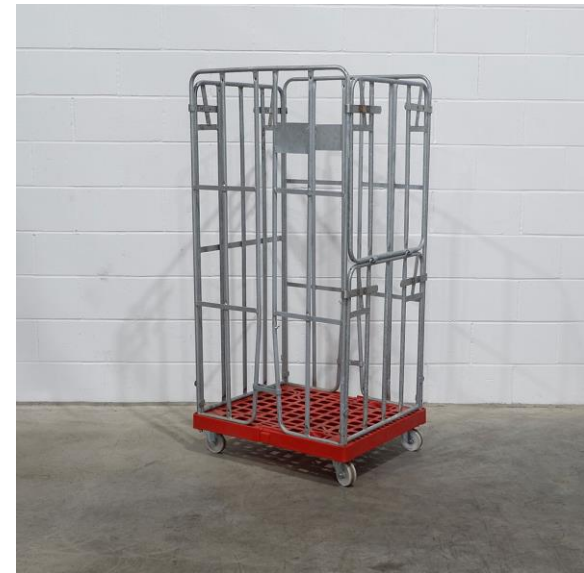

When adding the back and front sides, make sure the guide notches are in place to help secure the gates.



Lift the clamp handles to allow you to get the 2 sides in to place. Push down to fix the sides in place securely.



The front and back gates are secured with these handles. Lift to release and then, when in place, push down to secure the gate in place.

