


# DS113 RS WIFI

## USER MANUAL

RS WIFI

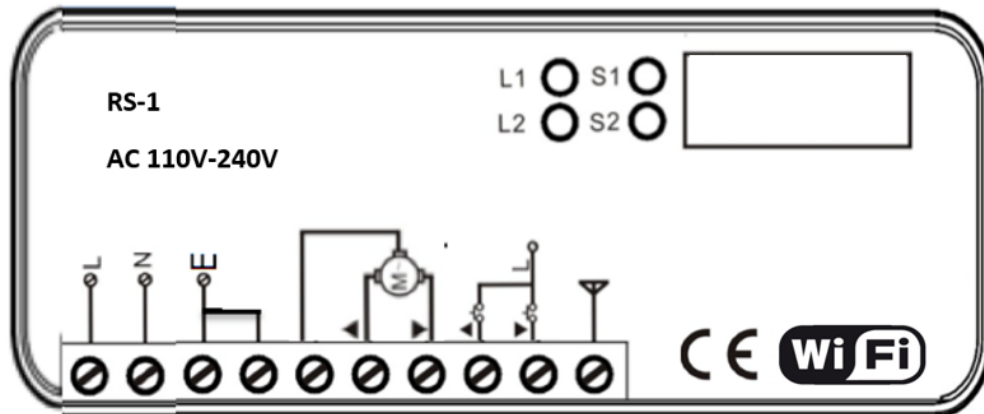

Control board for tubular motor with power supply 110 - 240 V. With function OPEN/STOP/CLOSE available for AC switch.

### 1. PROGRAM MANEUVER

- Press S2 for 2 seconds and release, the blind will start to rise (the led will blink on red).
- once it has reached the limit switch, press again to end the rising maneuver.
- Press S2 to start the lowering maneuver (the led will blink on red).
- once the blind reaches the limit switch, press again to finish the lowering maneuver.

### 2. PROGRAM A DEVICE.


3. Download the "DASPI" APP from:




# DS113 RS WIFI

---

4. Create a new account.

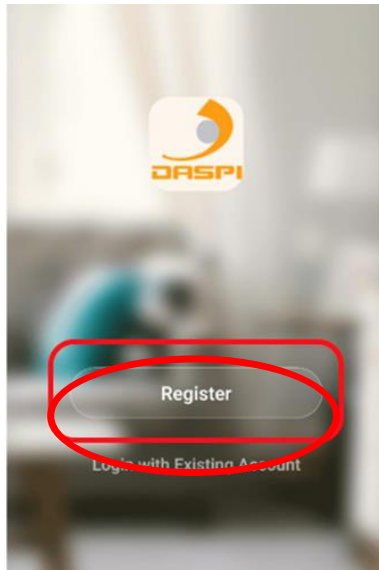


5. Click on add a device.

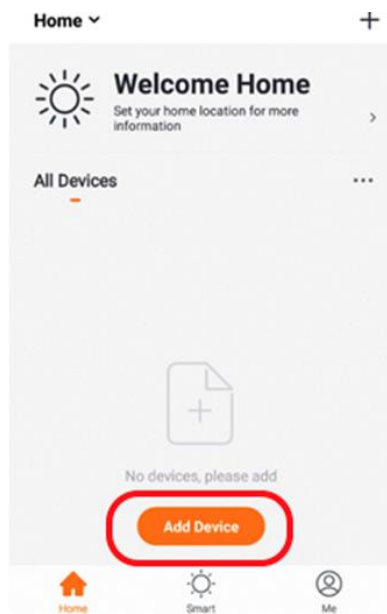


# DS113 RS WIFI

4-- Choose the kind of device to be added. In this case: **“RS DASPI”**

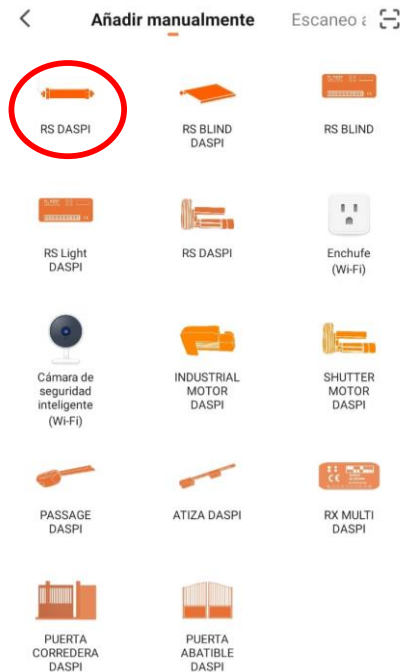

5- Connect your phone to the WiFi network the receiver will work with.

6- Choose the WiFi network on the App and introduce the password to let the receiver what network should use. Press **“Confirm”**.


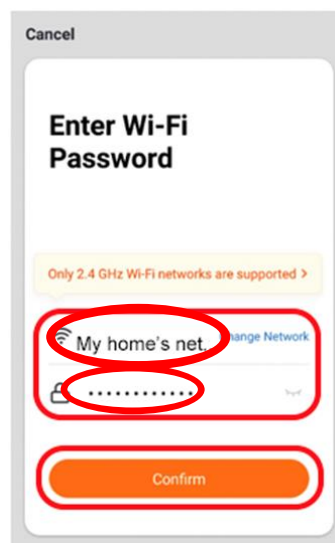


# DS113 RS WIFI

7-Primero comprobar que el dispositivo está conectado a la corriente eléctrica, a continuación, pulsar “**la luz de confirmación en el flash**”.



8- Keep pressed the button “S1” on the receiver for few seconds until the red LED starts flashing.

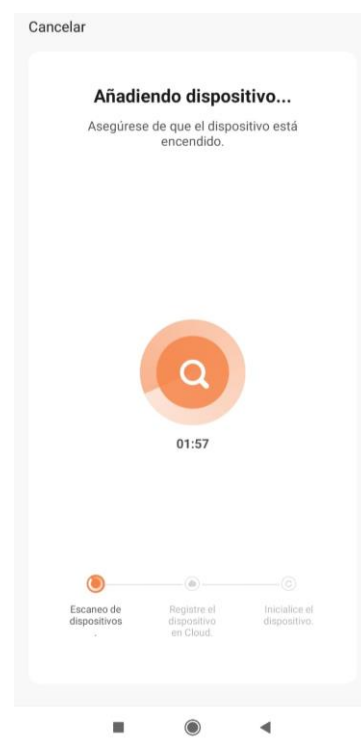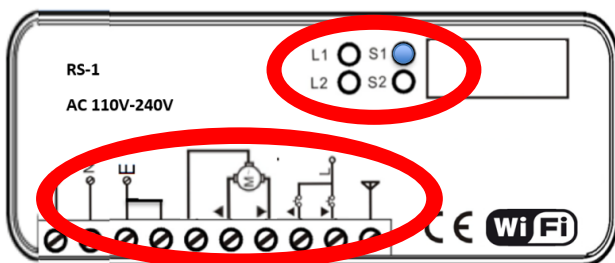


# DS113 RS WIFI

---

9- When correctly added. Press **“Finished”**



10- Once added we can control the blind from our smartphone.

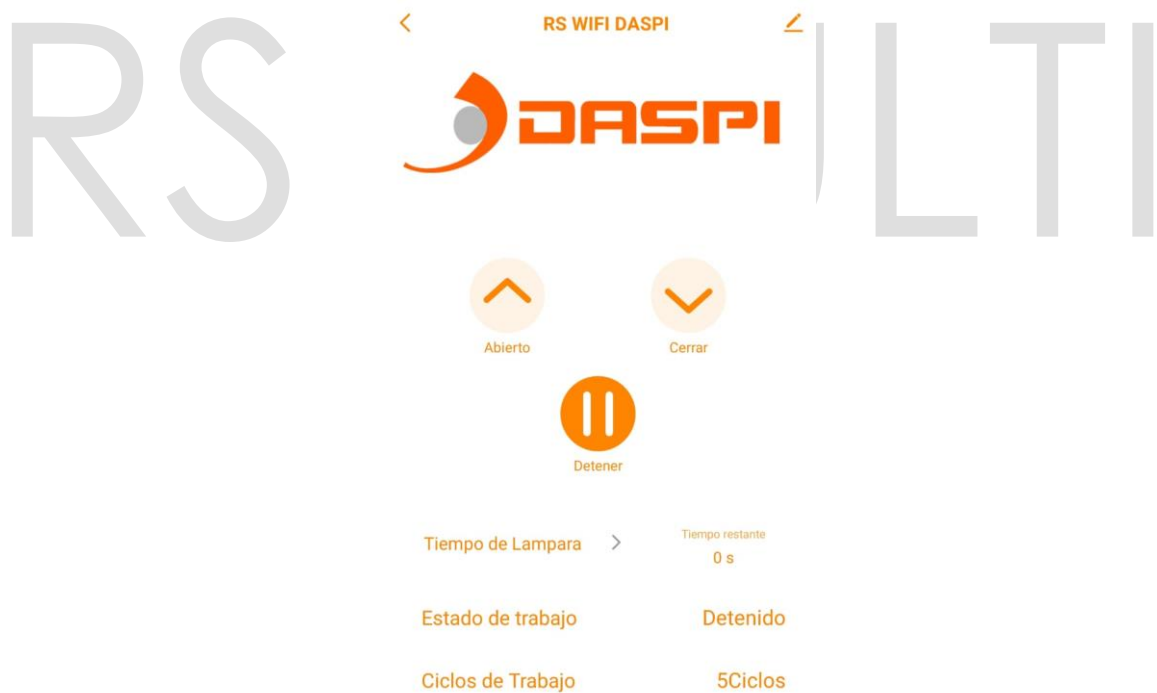


# DS113 RS WIFI

## 7. How to add another user.

7.1. Select on "edit"




7.2 Now choose the option listed as "share device"

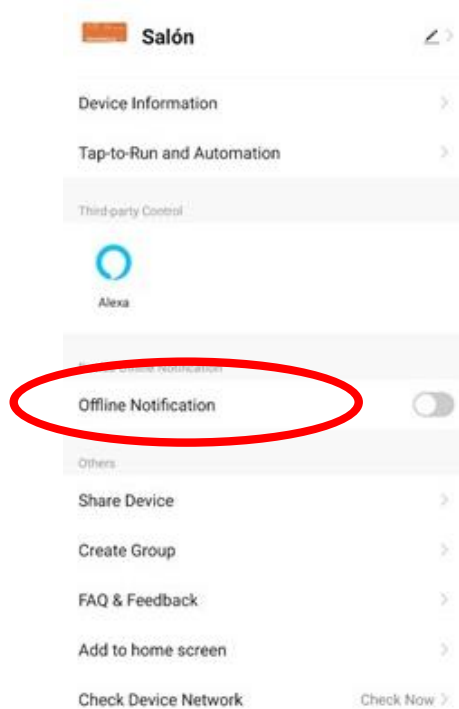


# DS113 RS WIFI


## 7.3 Select "add sharing"

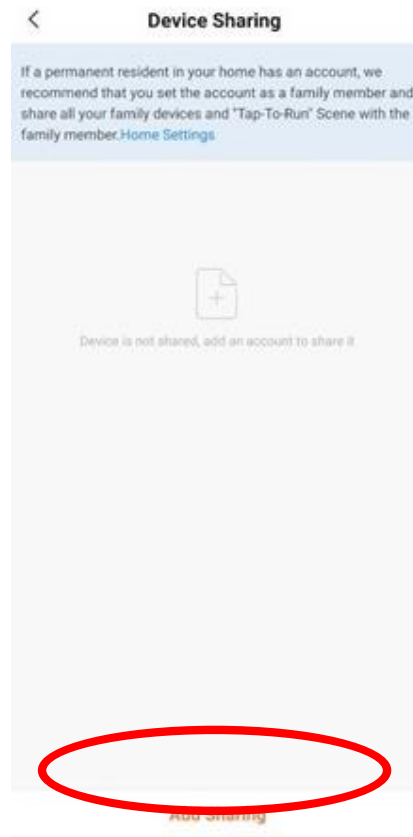

## 7.4 Here you must enter the region and phone number of the new user.

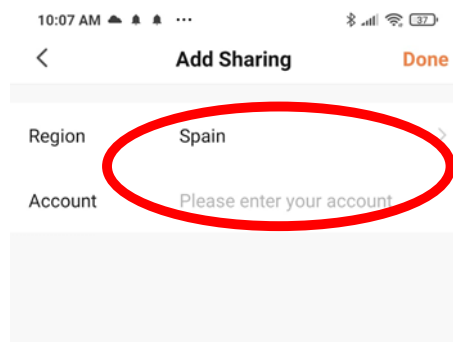

## 7.5 seleccionamos "Finalizado"

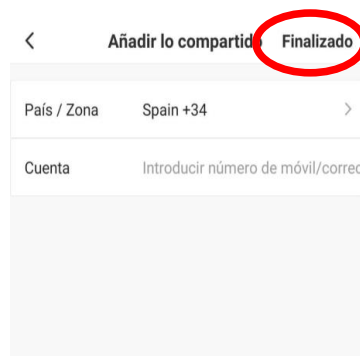

# DS113 RS WIFI

## 10. Connection scheme

